

DIGITAL DC CENTRE

The worldwide PhotoBooth
Manufacturers



America:


Digital Centre America, Inc.
14271 SW 120th Street Unit #109
USA, Miami, FL 33186

Sales:

Ph: +1.305.387.5005
sales@dc-image.com

Tech Support:

Ph: +1.305.387.5115
support@dc-image.com

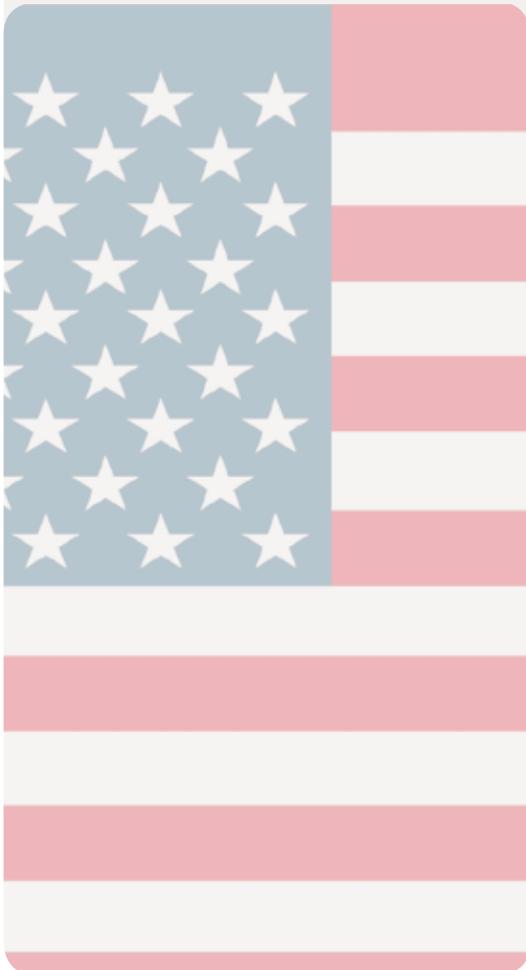

Europe:

Digital Centre
C/ Dr. Ferran, 27-29
Pol. Ind. Bufalvent, Manresa
08243, BARCELONA. Spain

Ph: +34.938.748.158
info@dc-image.com



Links of interest:

-  www.facebook.com/digitalcentre
-  www.twitter.com/photobooth_DC
-  www.youtube.com/digitalcentrepb
- www.photoboothparts.com

Copyright and Trademarks

This manual contains materials protected under International copyright Laws. All rights reserved. No part of this manual may be reproduced, transmitted or transcribed without the expressed written permission of the manufacturer and author of this manual.

The information of the products in this manual is subject to change without prior notice and does not represent a commitment on the part of the vendor. Who assumes no liability or responsibility for any errors that appear in this manual.

INDEX

1-SAFETY INSTRUCTIONS----- 6

2-SPECIFICATIONS----- 8

3-FIRST STEPS WITH YOUR PHOTOBOOTH----- 9

 3.1 CONTENT----- 9

 3.2 INSTALLATION----- 10

 3.3 POWER SWITCH----- 10

4-CONNECTIONS----- 11

 4.1 CONTROL BOARD----- 11

 4.2 LAND CABLE RJ45 ETHERNET (INTERNET)----- 12

 4.3 PC WIRING----- 13

 4.4 PC WIRING TO CONTROL BOARD----- 13

 4.5 PRINTER----- 14

 4.6 GENERAL----- 15

 4.7 MONITOR----- 16

5-PRINTER----- 17

6-USING THE PHOTOBOOTH----- 26

 6.1 PRODUCTS----- 26

 6.2 PLAY----- 31

 6.3 OPTIONS MENU----- 43

 6.3.1 SCAN QR-PHOTO----- 43

 6.3.2 LOGIN QR-ID----- 44

7-CUSTOMIZED MANUALLY----- 45

 7.1 STRUCTURE----- 45

 7.2 LOGO----- 47

 7.3 WELCOME/BYE----- 49

 7.4 TEXT----- 55

 7.5 MUSIC----- 57

 7.6 FRAMES----- 58

 7.7 ADVERTISING PHOTOS----- 69

8-CUSTOMIZED ONLINE----- 71

 8.1 MYPHOTOCODE.COM----- 71

 8.2. MANAGE YOUR USB STICKS----- 72

 8.2.1 HOW TO LOGIN----- 73

 8.2.2 CUSTOMIZE YOUR PHOTOBOOTH WITH A USB STICK----- 75

8.2.3 CREATE YOUR CUSTOMS-----	76
8.2.3.1 LOGO-----	76
8.2.3.2 TEXT-----	77
8.2.3.3 BACKGROUND MUSIC-----	78
8.2.3.4 FRAMES-----	78
8.2.3.5 WELCOME SCREEN-----	80
8.2.3.6 BYE SCREEN-----	80
8.2.3.7 TOP SCREEN BANNER-----	81
8.2.3.8 CUSTOM IMAGES ON DEMO SCREEN-----	81
8.2.4 HOW TO SAVE YOUR CUSTOMIZES-----	82
8.2.4.1 UNZIP ZIP FILE-----	82
8.3 CREATE, MANAGE AND CUSTOMIZE YOUR EVENTS WITH A USB STICK AND LINK IT TO YOUR MYPHOTOCODE SPACE -----	83
8.3.1 HOW TO CREATE AN ONLINE EVENT-----	83
8.3.2 MANAGE THE ONLINE EVENTS-----	84
8.3.2.2 EMAILS-----	88
8.3.2.3 EDIT-----	88
8.4. WARNING-----	89
9-UPLOADING CUSTOM USB STICK TO PHOTOBOOTH-----	90
10-DOWNLOADING-----	91
11-SETUP MENU-----	92
11.1 PRODUCTS & PRICES-----	93
11.1.1 EXTRA COPIES-----	94
11.2 RENTALS-----	94
11.3 CUSTOMIZE-----	96
11.3.1 LOGO-----	96
11.3.2 TEXT-----	97
11.3.3 DATE-----	97
11.3.4 LOAD FROM USB-----	98
11.3.5 WELCOME/BYE-----	99
11.3.6 FRAMES-----	99
11.4 OPTIONS-----	100
11.5 CAMERA-----	101
12-INTERNET-----	102

12.1 HOW TO CONNECT THE PHOTOBOOTH TO INTERNET-----	102
12.1.1 LAND CABLE (ETHERNET CABLE) -----	102
12.1.2 WIFI - WIRELESS LAND -----	103
12.1.3 WIFI HOT SPOT (3G/4G WIMAX)-----	110
12.2 SHARE SECURE-----	112
12.3 DIGITAL CENTRE APPS-----	113
12.3.1 PHOTOBOOTHS APP FOR OWNERS-----	113
12.3.2 MYPHOTOCODE APP FOR USERS-----	113
13-TROUBLESHOOTING-----	114
13.1 UPLOADING THE LOGO-----	117
13.2 HARD DRIVE-----	119
13.3 BOOT DVD-----	123
13.4 DONGLE ERROR-----	124
13.5 CAMERA ERROR-----	125
13.6 TOUCH SCREEN ERROR-----	126
13.7 PRINTER ERROR-----	127
13.8 NO SIGNAL-----	129
13.9 IMAGE ADJUSTING-----	129
13.10 CONTROL BOARD ERROR-----	130
14-CHARACTERISTICS-----	131
14.1 CONTROL BOARD -----	131
14.2 DECALS-----	132
14.3 SPARES DIAGRAMS-----	134
14.4 PARTS LIST-----	136
15-FAQS-----	139
16-NOTES-----	147

1-SAFETY INSTRUCTIONS

The following directions must be followed carefully for safe use, to prevent personal injuries, and damage to the equipment.

Please read this entire manual before initial use and store it in a convenient location for on easy access.

-  **WARNING:** To ensure safe operation, observe specifications, notices and cautions in this document. Digital Centre Accepts no liability for damage or injuries from improper use of this product.
-  **WARNING:** Prevent electrical shock and equipment damage. Before connecting or disconnecting cables and/or changing the paper, disconnect power cord from the A/C outlet.
-  **WARNING:** Prevent shock hazard and damage. Only plug the power cord into a **220 volts (110 volts for USA) grounded A/C outlet.**
-  **WARNING:** Do **not** touch exposed wires or moving parts such as power supply modules and the control board. Touching these parts could cause electric shock or other injury, data loss, and/or printer malfunction.
-  **WARNING:** Only use Mitsubishi CK9046(DC) paper / ink ribbon set in the printer. Use of other paper / ink ribbon will cause software malfunction, poor image quality, and/or printer damage.
-  **WARNING:** Do **not** touch the thermal print head, or head area of the printer. The print head operates at an extremely hot temperature. Touching it might cause burns or other injury.
-  **WARNING:** Follow the directions in the Mitsubishi manual when cleaning the printhead. Do not use cotton, wool or other fabric swabs. The lint left behind poses a fire hazard.

NOTICE: Read additional **Warnings** in Mitsubishi Printer Manual.

-  **WARNING:** The printers are not interchangeable.
-  **DANGER:** Tipping Hazard! Photo Booth may pose danger to small children and/or pets. Unplug the power cord from the A/C outlet immediately if the Photo Booth tips over.
-  **WARNING:** Use only original parts from Digital Centre.

Use only original parts from Digital Centre. Use only original parts for your photo booth from Digital Centre. Non original parts may compromise the use of the photo booth and may create a malfunction and cause serious damage. Using different components, changing wiring, or altering the photo booth in any fashion will void the warranty.

Digital Centre is unable to assist any customer that has changed, modified, or altered the photo booth using non original parts. We cannot provide a guarantee or service for products that are not original parts from Digital Centre.

 **Danger:** Power Off the Photo Booth immediately if any of the following occurs:

- Smoke
- Unusual Odor
- Unusual Noise
- Water or other Liquids spill inside the Photo Booth
- Physical Damage

 **Danger:** Do not place or store the Photo Booth in wet or extremely humid areas, in direct sunlight, near an open flame or heater, and/or swimming pools. Avoid Condensation.

 **Danger:** Operate the Photo Booth in locations with ambient temperatures of 5°C – 40°C (41°F – 104°F)

 **Danger:** Install the Photo Booth on a flat, even and, clean surface.


 **Danger:** Repairs should only be made by qualified technicians.

 **WARNING:** Indoor Use Only

 **WARNING:** The photobooth has to be connected to internet

MAINTENANCE: Cleaning: Use only a clean, dry, soft cloth. If necessary use a damp cloth and/or neutral detergent. Do not use window cleaner or any other alkaline cleaners.

2-SPECIFICATIONS

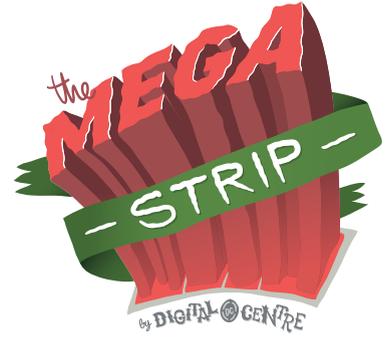

Power Supply: Hz 110V
AC 220V 50/60 (for EUR)
Power Consumption: 260W
Weight = 264 Kg / 583 lbs.

Nominal fuse rating= 6 Amps
Monitor: LCD Touch Monitor 22"
Printer: Mitsubishi CP9810 Dye
Sublimation Photo Printer


Specifications may change at any time without prior notice.

3-FIRST STEPS WITH YOUR PHOTOBOOTH

3.1 CONTENT

These are the accessories included with your new Digital Centre Photo Booth:

Manual

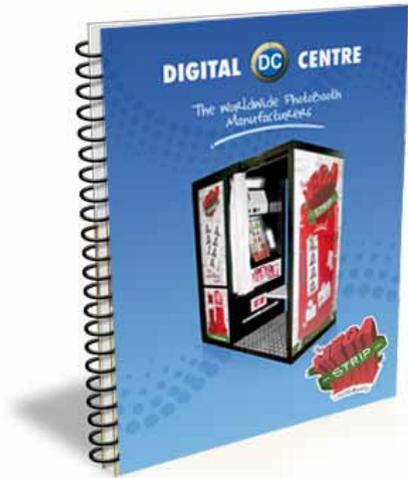

Keys



Boot DVD



Mini Wireless USB Adapter. TRENDNET N150 TEW-648UB (optional)

USB extension cable (optional)

Power Cord



Warning: Movement of the photo booth requires assistance from two or more people.

- Unwrap and remove all packaging materials. Remove screws and metal holding plates that attach the Photo Booth to the skid.
- Access to the printer and the USB port of the computer is on the left side of the seat. Unlock and open this side service door and then remove the protective polystyrene foam block before first use.
- The keys for the service door, service panel, manuals, and power cord are located in the picture chute on the right side of the Photo Booth.
- Inspect the wiring harnesses for disconnected plugs.

3.2 INSTALLATION



Plug the power cord into the socket underneath the Photo Booth. Slide the power switch to the "ON" position.



Adjust the height of the four metal legs once the final location for the booth has been established. The metal legs are underneath the cabin next to the wheels.

3.3 POWER SWITCH




The Power Switch is located underneath the cabin. It contains a Fuse and a power cord socket.

4-CONNECTIONS

4.1 CONTROL BOARD

CONTROL BOARD (DC-EVO-V3.0)

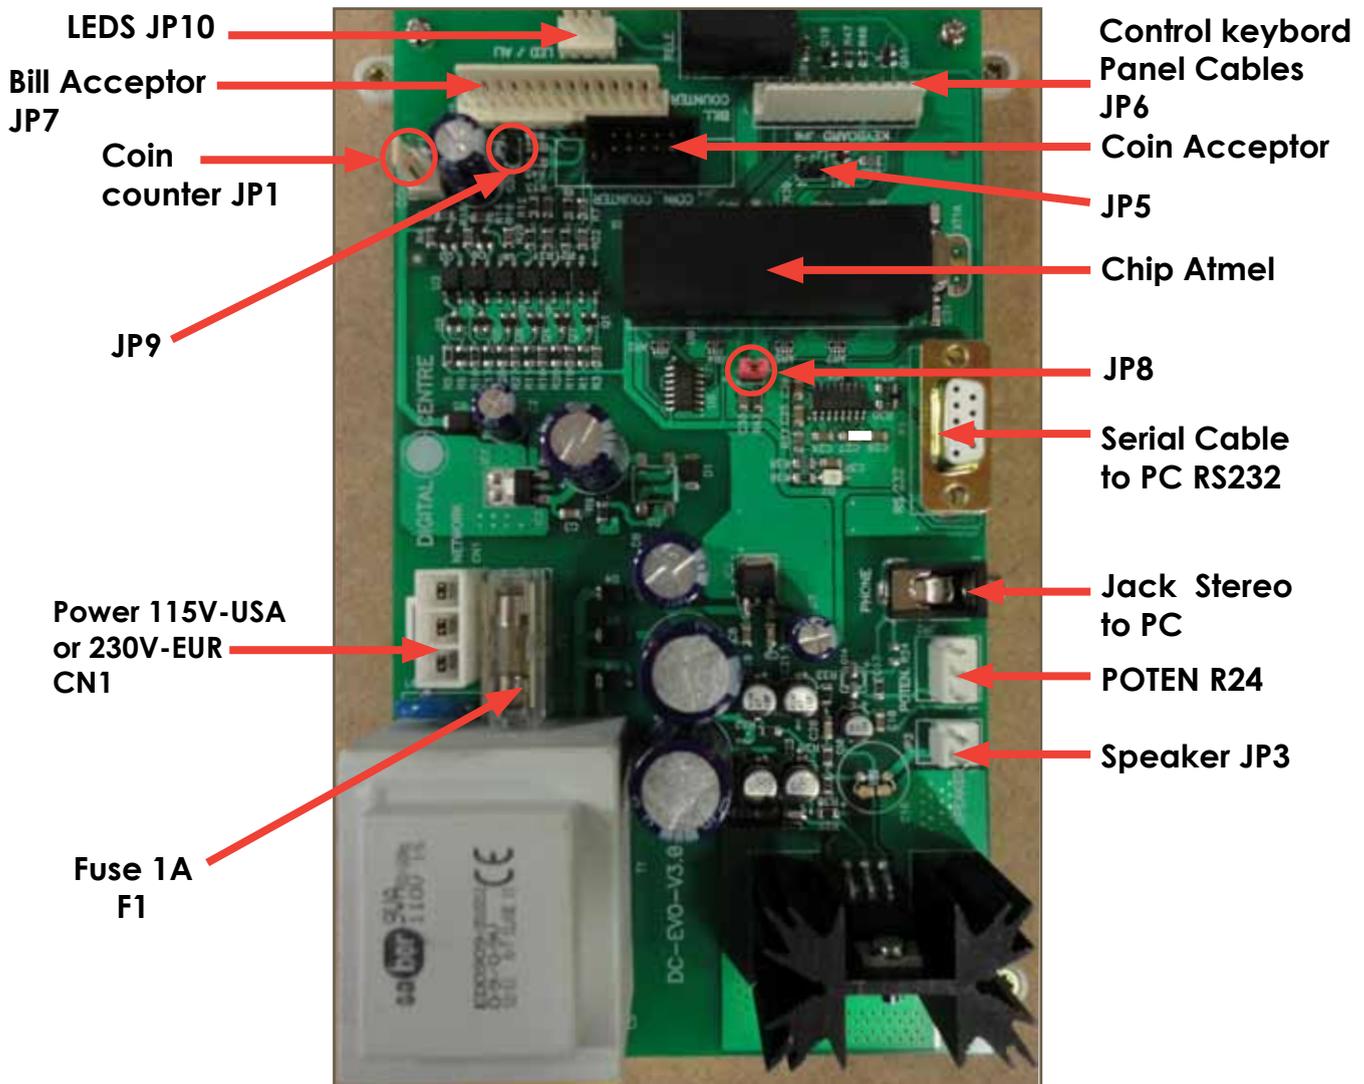

RS232. Serial Cable. From Control Board to PC.
 JP7. Bill Acceptor Cable. From Control Board to Bill Acceptor.
 CN1 Power Supply at 230 volts (115 volts for USA).
 Jack Stereo. From Control Board to PC
 F1. We need 1A fuse here to run the Control Board.
 JP3. Speakers. JP3 gives us the volume control.
 POTENT R24: We connect here the main cable from Control Board to Push Buttons + Speakers.

4.2 LAND CABLE RJ45 ETHERNET (INTERNET)



P.9 Land Cable
(RJ45 ethernet cable) (internet)
(not included)

Internet connection

- Check the distance between the internet connection and the position of your photobooth in the room.
- Ensure you have Land Cable (RJ45 ethernet cable) that is long enough.
- Pull out the back door
- Take the Land Cable (RJ45 ethernet cable) and plug it into the ethernet "hold" of your PC.




WARNING:

- The cable just can only be plugged into one position.




P.9 Land Cable (RJ45
ethernet cable) (internet)

4.3 PC WIRING

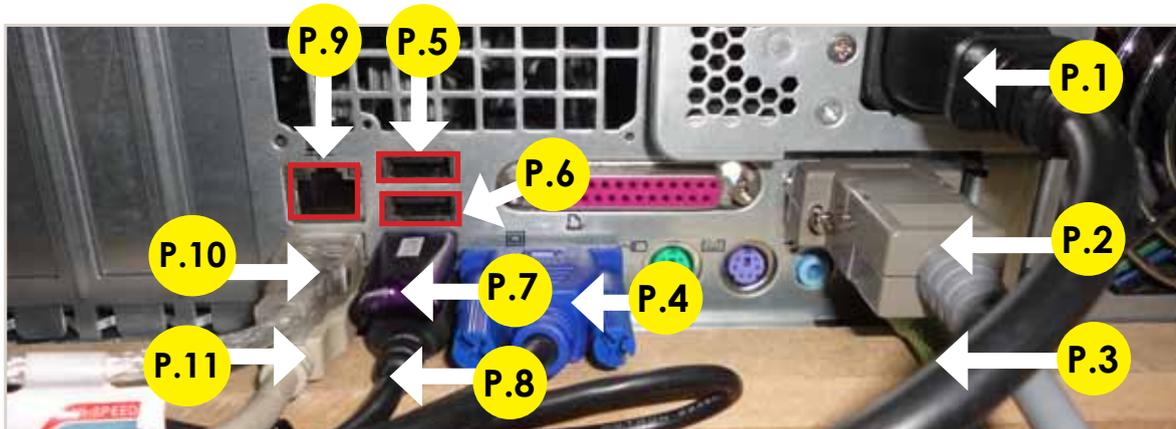

- P.1 Main Power Cable
- P.2 Serial Cable From Control Board to PC M/F. (56 cm - Inch 22,04)
- P.3 Jack Stereo Cable. (180 cm - Inch 70,87)
- P.4 VGA Cable From Touch Monitor to PC. (180 cm - Inch 70,87)
- P.5 Wifi adapter (or Antenna) Optional feature
- P.6 USB Card Reader
- P.7 Dongle USB Security and Software. MEGA
- P.8 USB Cable From Printer to PC. (180 cm - Inch 70,87)
- P.9 Land Cable (RJ45 Ethernet cable) (internet)
- P.10 USB Extension AM/AF From Camera to PC. (180 cm - Inch 70,87)
- P.11 USB Cable From Touch Monitor to PC. (180 cm - Inch 70,87)

4.4 PC WIRING TO CONTROL BOARD

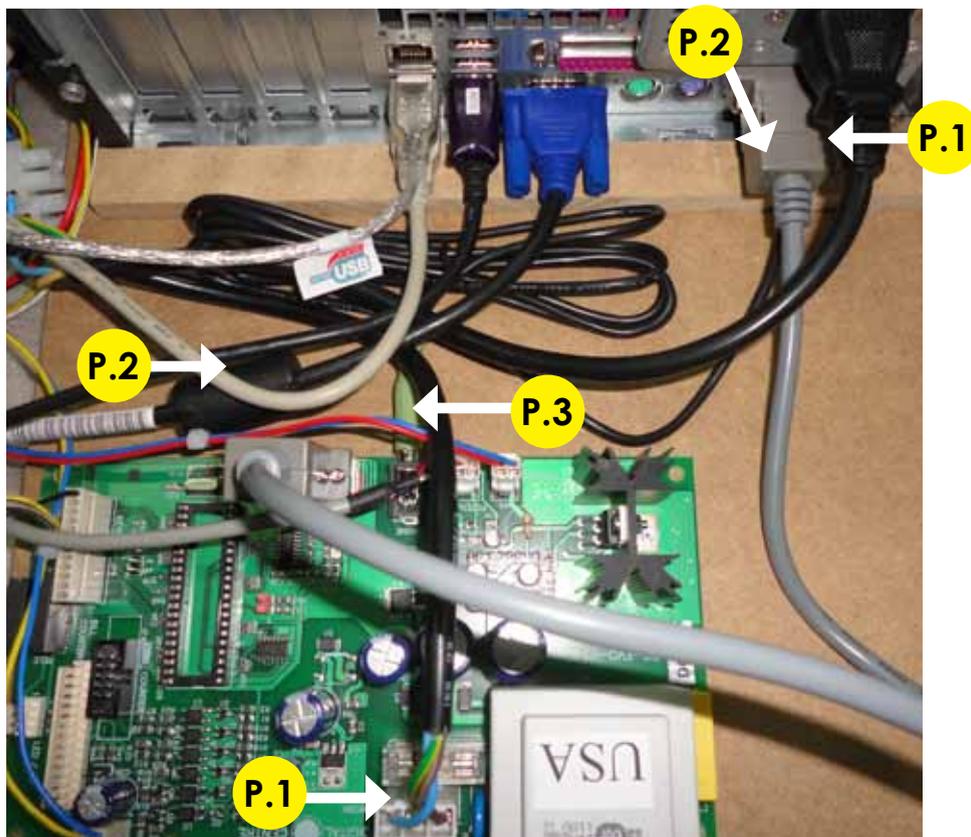


- P.1 Main Power Cable
- P.2 Serial Cable From Control Board to PC. (56 cm - Inch 22,04)
- P.3 Jack Stereo Cable. (180 cm - Inch 70,87)

4.5 PRINTER

 **PRINTER WIRING**

P.1 Main Power Cable
P.8 USB Cable From Printer to PC.
(180 cm - Inch 70,87)

4.6 GENERAL

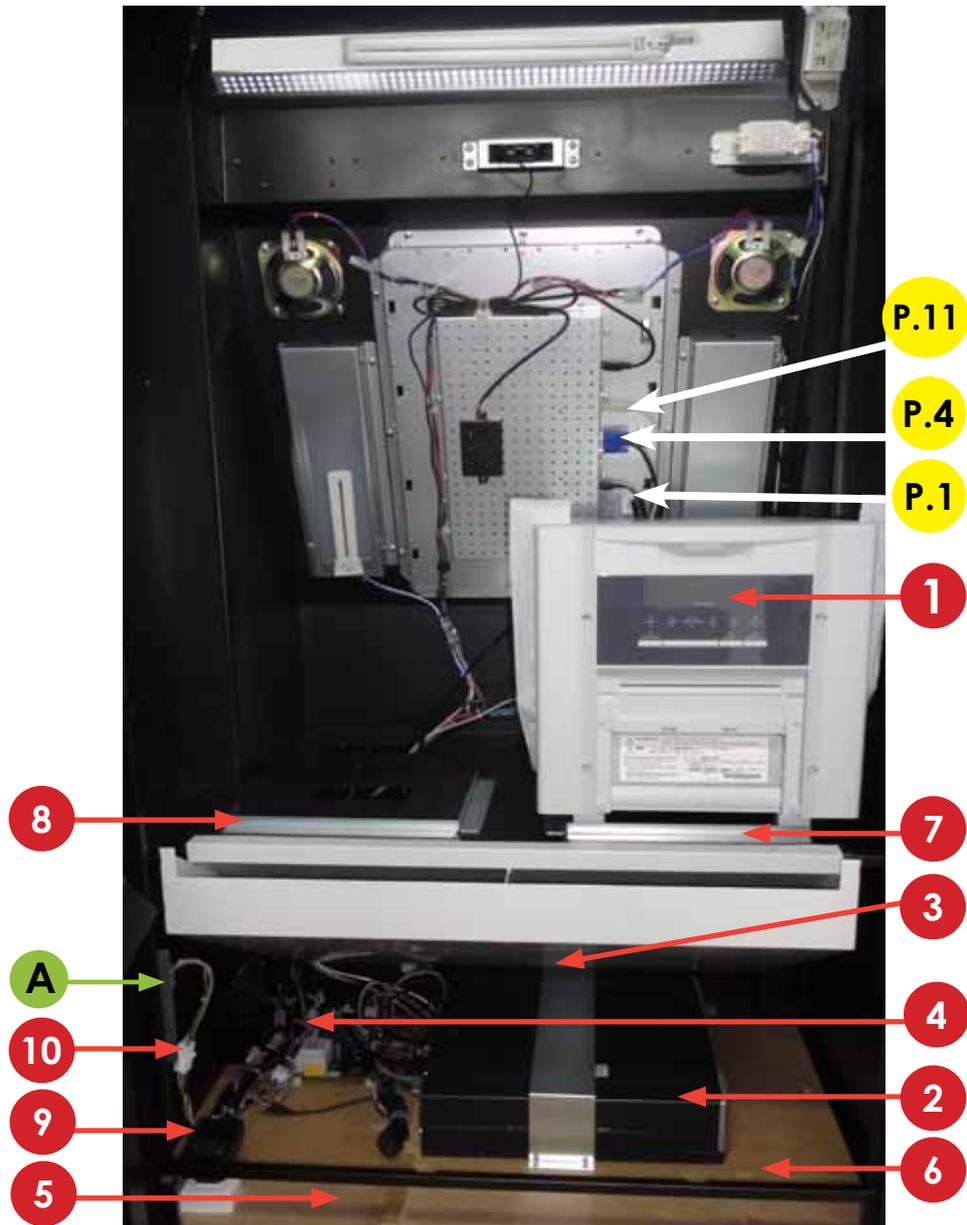

COMPONENTS

- 1. Printer Mitsubishi CP9810DW-DC
- 2. PC HP C2D
- 3. PC HP Holder. (RAW METAL)
- 4. Control Board.
- 5. Wood PC Base. MEGA (RAW)
- 6. Wood Upright PC #2 Base. MEGA (RAW) (84,7x13 cm Inch 33,34x5,11)
- 7. Right Printer Support. (RAW METAL)
- 8. Left Printer Support. (RAW METAL)
- 9. Transformer 2A 12V
- 10. Cable From Control Board to Service Panel & Push Buttons + 2 Speakers


PC WIRING

- P.1 Main Power Cable
- P.4 VGA Cable From Touch Monitor to PC. (180 cm - Inch 70,87)
- P.11 USB Cable From Touch Monitor to PC. (180 cm - Inch 70,87)

GENERAL WIRING

- A. Service Control model 2.

4.7 MONITOR

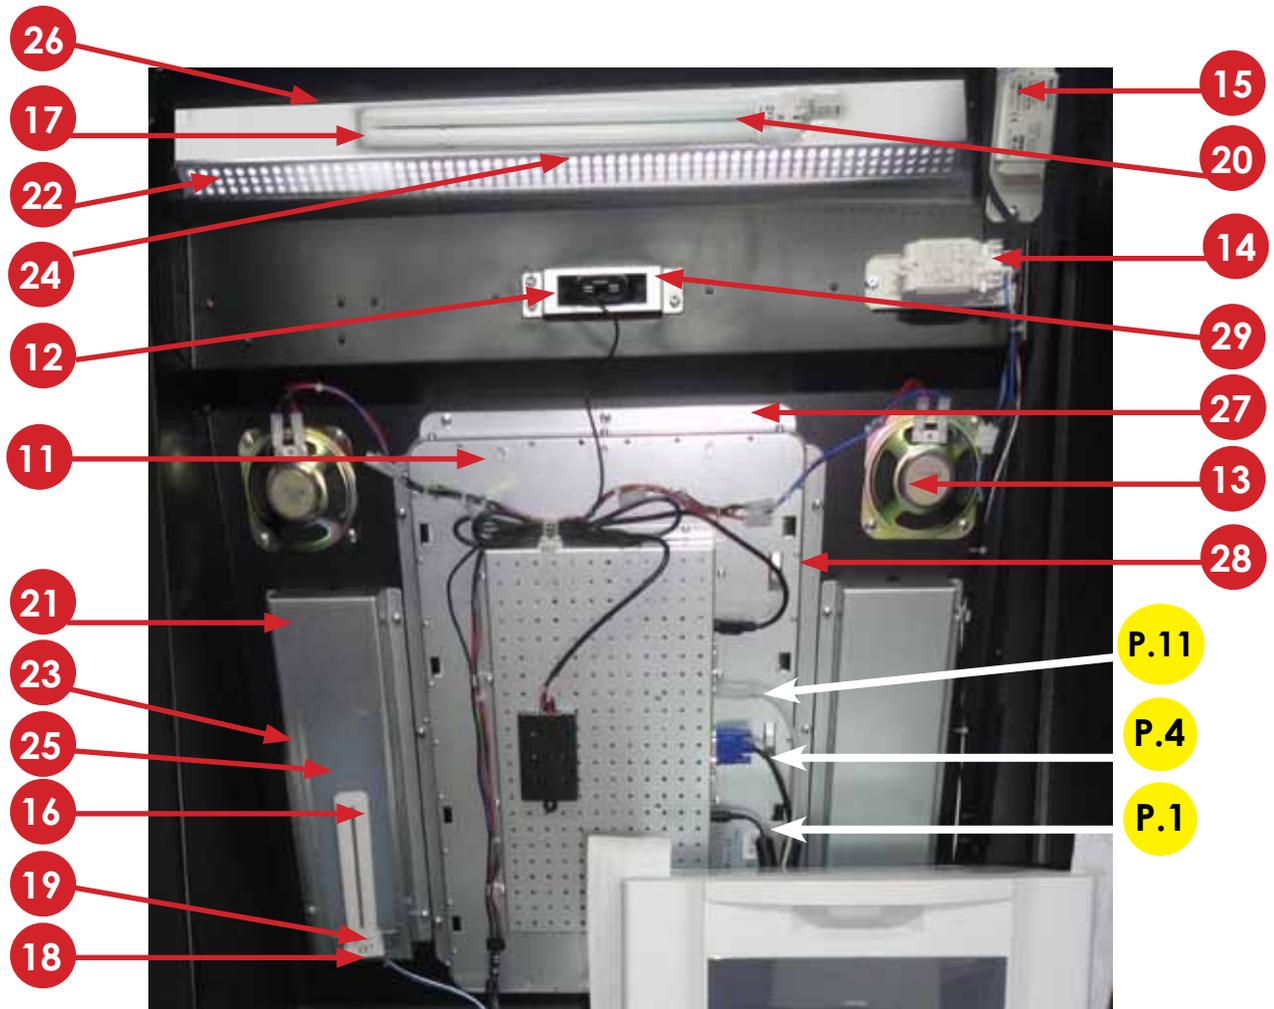
 **COMPONENTS**

- 11. LCD Touch Monitor 22"
- 12. Full HD Camera
- 13. Speakers 8 Ohm 5W
(10 cm - Inch 3,94)
- 14. Ballast 13W
- 15. Ballast 36W
- 16. Light Bulbs 9W
- 17. Light Bulbs 36W
- 18. Light Starter
- 19. Lamp Holder 9W
- 20. Lamp Holder 36W
- 21. Lateral Light Body. (RAW METAL)
- 22. Top Light Body. (RAW METAL)
- 23. Lateral Light Diffuser Holder. Right/Left NG
(RAW METAL)
- 24. Top Light Diffuser Holder. (RAW METAL)
- 25. Lateral Light Plastic Diffuser (WHITE)
(26,5x7x0,3 cm - Inch 10,43x2,76x0,12)
- 26. Top Light Plastic Diffuser (WHITE)
(52x9,5x0,3 cm - Inch 20,47x3,74x0,12)
- 27. Top/Bottom Monitor 22'' Holders. (RAW METAL)
- 28. Right/Left Monitor 22'' Holders. (RAW METAL)
- 29. Fixing Camera Back Holder. (RAW METAL)

 **PC WIRING**

- P.1 Main Power Cable
- P.4 VGA Cable From Touch Monitor to PC.
(180 cm - Inch 70,87)
- P.11 USB Cable From Touch Monitor to PC.
(180 cm - Inch 70,87)

5-PRINTER

 **WARNING:** The printers are not interchangeable

· Protective Measures

This printer is designed to operate with Photo Booth systems. Do not remove any inside components. Do not try to repair or manipulate them. Before printing, install an Ink sheet and paper.

Never insert any object into the unit.

Foreign objects of any kind inserted into this unit is safety hazard and can cause extensive damage.

Do not place anything on the digital color printer.

Heavy objects placed on the digital color printer can cause damage or obstruct proper ventilation.

Do not remove the cabinet.

Touching internal parts is dangerous, and may lead to malfunction. Contact the sales dealer to carry out internal checks and adjustments. Before opening the cover for eliminating a jammed paper, etc ... , be sure to disconnect the power cord plug.

When transporting the unit.

When transporting the unit, remove the ink sheet and print paper from the unit.

Be careful around print paper exit slot.

Do not insert your hand or any material into the paper exit slot during printing. Do not touch the cutter blade inside the paper exit slot. Otherwise, your finger will be injured.

Do not touch the thermal head.


Do not touch the thermal head (located inside the unit). The thermal head is heated to a high temperature. This may cause injury.

Ink sheet and paper print supply.

Use only the ink sheet and paper supplied by Digital Centre, otherwise the Photo Booth system will not work, and Digital Centre does not assume any responsibility for damages or injuries.

FEATURES & FUNCTIONS

FRONT PANEL

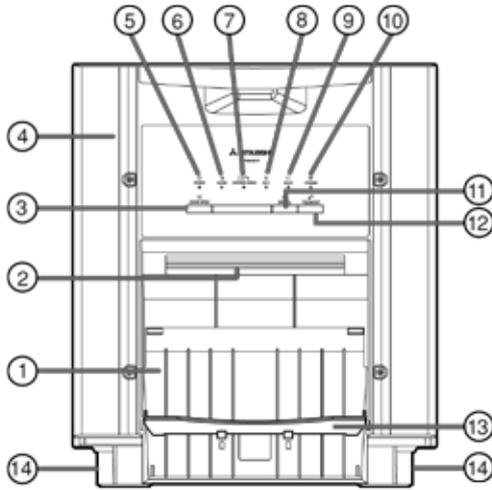**① PAPER STRIP BIN**

Holds the paper chips generated by margin cut. To prevent jamming the chips at the print outlet, throw away the chips frequently.

NOTE

Remove the bin before opening the door. If the door is opened with this bin attached, the printer or this bin may be damaged.

② PRINT OUTLET

The printed paper comes out here.

③ DOOR OPEN BUTTON (⏏)

When you press this button while the power is on, the door will open in about five seconds.

④ DOOR

Open this door when installing print paper or ink ribbon. Press the DOOR OPEN button ③ to open the door.

⑤ POWER INDICATOR (Ⓜ)

When the power is turned on, the indicator illuminates.

⑥ ALARM INDICATOR (Δ)

This indicator illuminates or blinks when a paper jam occurs or the door is open.

⑦ PAPER/INK RIBBON INDICATOR (□/%)

When an error concerning the ink ribbon or print paper occurs, this indicator illuminates or blinks.

⑧ DATA INDICATOR (⚡)


This indicator blinks during data transfer. It illuminates during printing.

⑨ READY INDICATOR (○)

This indicator illuminates when this unit is ready to accept the data. It also illuminates during data transfer. It blinks during print canceling procedure.

PAPER STRIP BIN

Hook the paper strip bin by its latches.

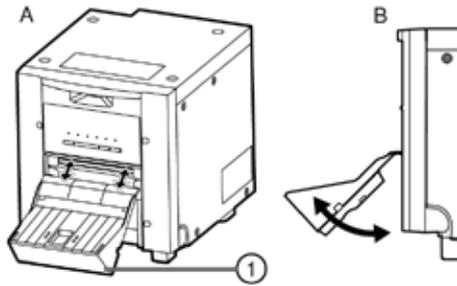

To attach: A -> B
To remove: B -> A

⑩ COOLING INDICATOR (⊙)

When the unit is overheated, this indicator blinks.

⑪ CANCEL BUTTON (⊘)

Press this button for more than 1 second during printing to cancel continuous printing. After the ongoing printing at the time this button is pressed is completed, the printing process is canceled.

⑫ FEED & CUT BUTTON (Ⓜ)

When you keep pressing this button for more than 1 second, the print paper is fed and cut.

⑬ PAPER CATCHER

You may stack the prints on this paper catcher. When using the print paper of 13x18(5x7"), 15x20(6x8") or 15x23(6x9"), do not install the paper catcher.

NOTE

When you use 9x13 (3.5x5")-size or 10x15 (4x6")-size paper, you may stack about 10 prints on this paper catcher. It is recommended to remove the prints stacked on the paper catcher frequently. If the prints are not removed frequently, a paper jam may cause.


⑭ FEET

These feet can be removed.

NOTE

When this printer is turned on, the indicators start illuminating in sequence. The printer is ready for use when the POWER and READY buttons are lit.

SIDE AND REAR PANEL

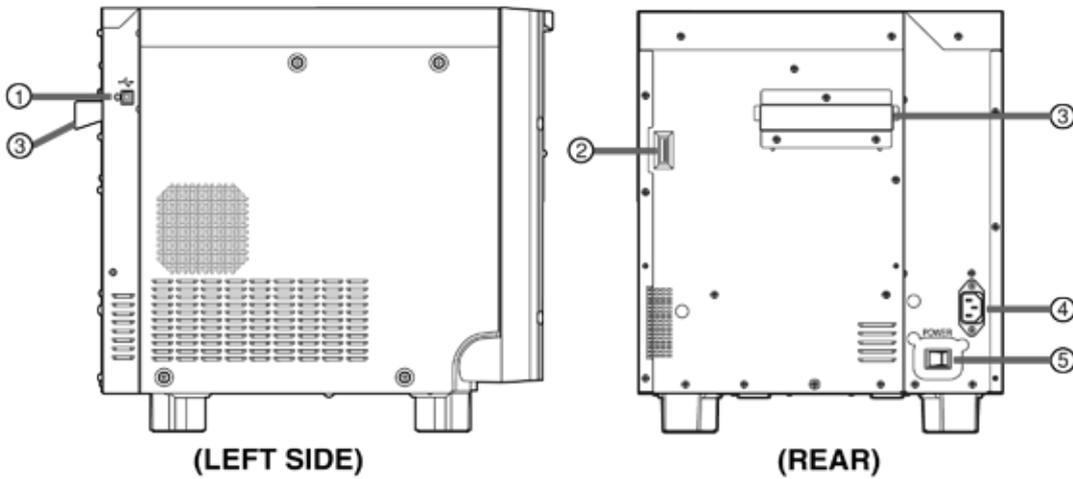

① USB TERMINAL

Use to connect the USB cable.

② DIP SWITCHES

Use to set various functions of this unit.

③ HANDLE FOR TRANSPORTING

When transporting this unit, hold this handle and the upper front part of this unit.

④ POWER SOCKET (AC LINE)

Use to connect the provided power cord. Insert the cord firmly.

⑤ POWER SWITCH

Use to switch the power ON and OFF.

BEFORE PRINTING

- ① Install the print paper to this unit. (See below.)
- ② Install the ink ribbon to this unit.

INSTALLATION OF PRINT PAPER


Spacers

- For the usage of the spacers, see the Quick Setup Guide.
Remove the cushions put between the paper flange and spacer when using the spacers.

How to attach the spacers

1. Attach the spacer with the paper flange's stoppers retracted.
2. Turn the spacer until the latches are locked.

When you remove the spacers from the paper flanges, follow the above procedure in reverse.

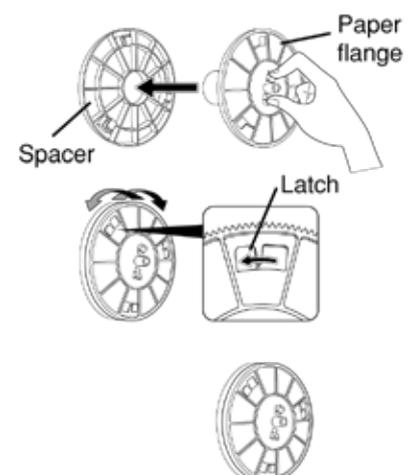

1 Attach the supplied paper flanges to both sides of the print paper.

When you pinch the latches on the paper flange, the stoppers retract into the shaft. Attach the flanges to the print paper with the stoppers retracted.

Make sure that the flanges are attached to the print paper securely, and release the latches.

NOTE



- Take care not to pinch your fingers.
- Do not remove the sticker on the print paper yet.
- Do not slacken the paper. Any slack in the print paper may degrade the print quality.

CAUTION

- When placing the print paper, remove one flange and keep the print paper upright on its side with no flange.
- When you put the print paper sideways, it may roll and fall. This may cause injury.


NOTE

- Do not touch the thermal head. Fingerprints or dust on the thermal head will degrade the print quality.
- Fingerprints or dust on the paper's surface may degrade print quality and cause paper jams.

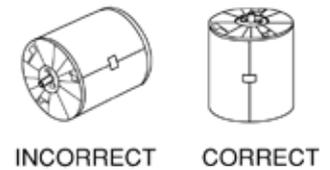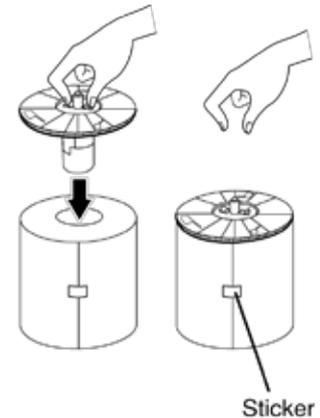


BEFORE OPERATION

2 Press the POWER switch on the rear panel to turn on the power.

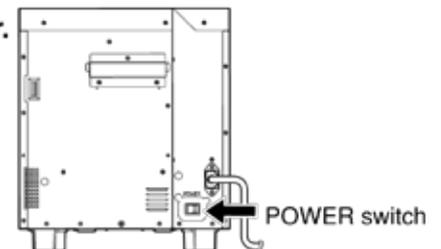

3 After the mechanical initialization is completed, press the DOOR OPEN button to open the door.

Take the ink cassette in the printer out.

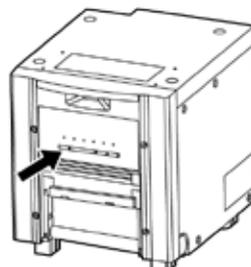


4 Install the print paper into the unit.

Make sure to install the print paper firmly.

NOTE

Install the print paper into the unit slowly. If it is dropped along the ditches, the unit or accessories may be damaged.

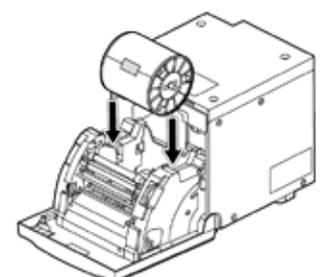

CAUTION





- Do not touch the thermal head right after printing because it is extremely hot. Otherwise you may get burned or injured.

NOTE



- Note that the thermal head is quite sensitive to static electricity. When you touch the thermal head while carrying static electricity on your body, the thermal head may be damaged.

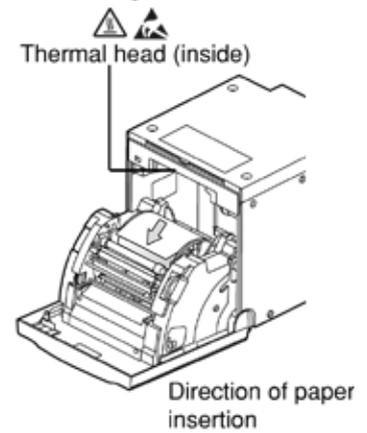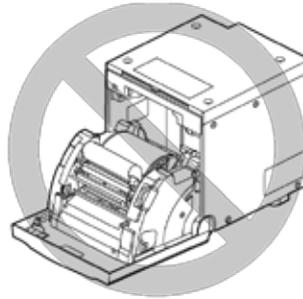

5 Remove the sticker, insert the print paper between the rollers as shown right, and feed the print paper until it reaches the black cover.


- Remove the sticker before inserting the print paper between rollers. Make sure to insert the paper straight.

NOTE

- Keep the roller clean. Dirt on the roller may degrade the print quality.

NOTE

- When taking the print paper out, pull it up toward you.
- Make sure to turn on the power before replacing the print paper.
- Make sure to eliminate any slack from the print paper. If you carry out the following steps without eliminating the slack, the print paper may be damaged.

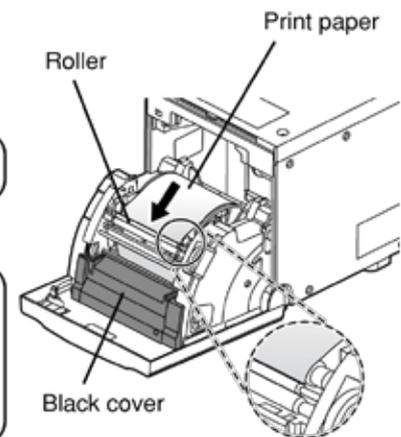

INSTALLATION OF INK RIBBON

INSTALLING THE INK RIBBON

After installing the print paper, install the ink cassette into this unit.

Before installing the ink cassette into this unit, load the ink ribbon in the ink cassette.

NOTE

- Place the ink cassette on a flat surface, when loading the ink ribbon.
- Select a place that is free of dust when loading the ink ribbon. Dust or dirt settling on the ink ribbon results in poor print quality.
- Make sure that the shafts of the ink ribbon fit into the ink cassette firmly.


NOTE

- Make sure to use the black ink cassette supplied with the printer. The ink cassettes for the CP9000, CP9500 and CP9550 series cannot be used.

1 Load the ink ribbon in the ink cassette as shown below.

- Make sure to load it in the correct position.

First, tilt the ink ribbon and insert the gear ① in the ditch ① of the ink cassette, and then push the gear ② into the ditch ② by rotating the ink ribbon. Similarly, insert the gear ③ in the ditch ③ and then push the gear ④ into the ditch ④.

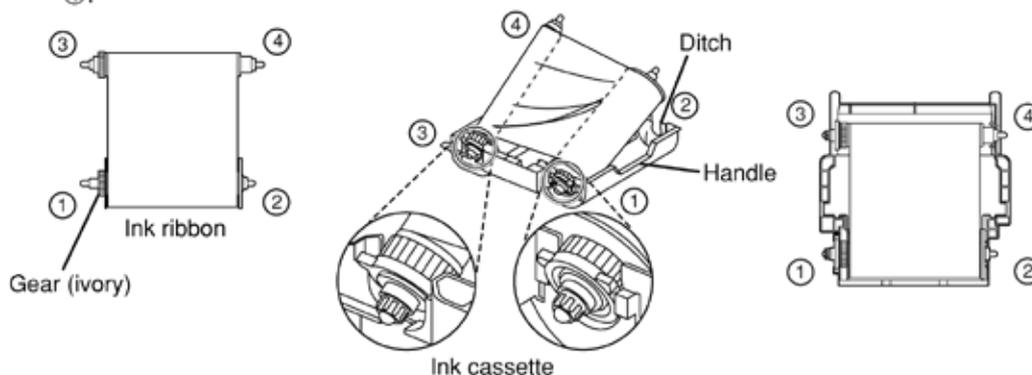


Make sure to set the ink ribbon roller to the ditches firmly.
Turn the ivory gear to eliminate any slack.

■ INSTALLING THE INK CASSETTE

1 Place the ink cassette containing the ink ribbon in the position as shown right.

Place the ink cassette on the print paper with the shaft (thicker one) around which the ink ribbon is wound located to the front. Align the arrows marked on the sides of ink cassette with those on the unit.

Place the rear of the ink cassette along the guides that are provided inside the unit.

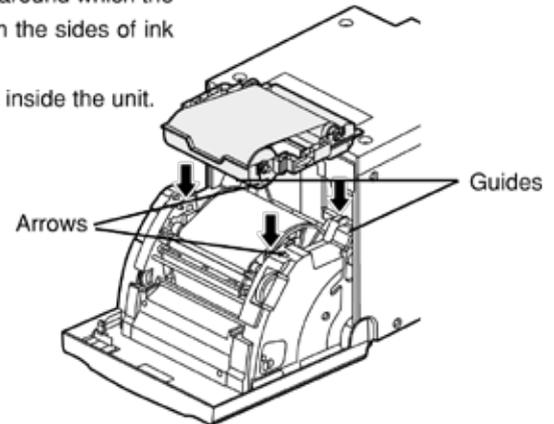



BEFORE OPERATION

2 Push the ink cassette toward the back of the unit.

Hold the handle of the ink cassette and push it straight toward the back of the unit. Then raise it until you hear a click to secure it in the ink cassette holder.

NOTE

If the ink ribbon is used up, repeat the steps 1 to 2 to replace the print paper and the ink ribbon.

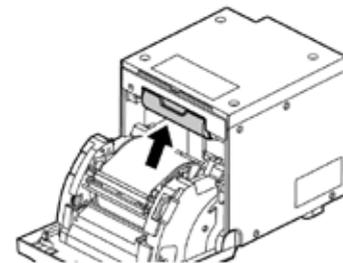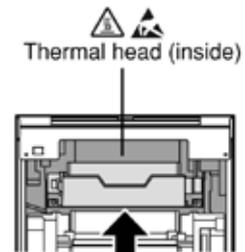


3 Push the center of the door to close.

The print paper setting is initialized two seconds after you close the door.

When the auto feed & cut mode has been selected, the FEED & CUT procedure is repeated three times after you close the door. When the print paper with the post card printing on its reverse side is installed, the FEED & CUT procedure is repeated five times.

NOTE


- When closing the door, push it until a click is heard.
- If the PAPER/INK RIBBON indicator illuminates when the door is closed, the print paper may have not been installed correctly. In this case, open the door to make sure that the print paper has been installed correctly. Then close the door again.
- On the auto feed & cut mode, when the print paper is installed more than three times, the print paper may be used up earlier than the ink ribbon.

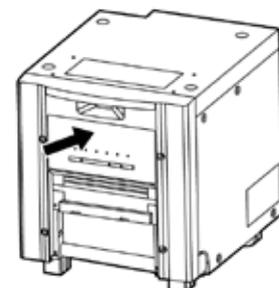

■ When the manual & cut mode has been selected

When the manual feed & cut mode has been selected, hold down the FEED & CUT button for 1 second or longer. Repeat the manual feed & cut three times. When the print paper with the post card printing on its reverse side is installed, repeat this procedure five times.

For how to select the auto feed & cut mode.

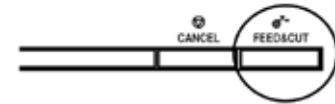

Installation of the print paper and the ink ribbon is completed.

NOTE


- Make sure to replace the print paper and the ink ribbon at the same time.
- When replacing them, throw away the paper chips in the paper strip bin.
- Whenever you replace the print paper and the ink ribbon, clean the thermal head and the roller.

ERROR MESSAGES & COUNTERMEASURES

OVERCOMING PAPER JAMS


1 Press the DOOR OPEN button to open the door.

Make sure that the power is turned on before opening the door.
If the door does not open, turn off the power and turn it on again.
Then press the DOOR OPEN button again.

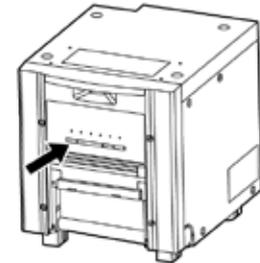


2 Remove the ink cassette.

Push down the ink cassette as shown by the arrow ① and pull it out.

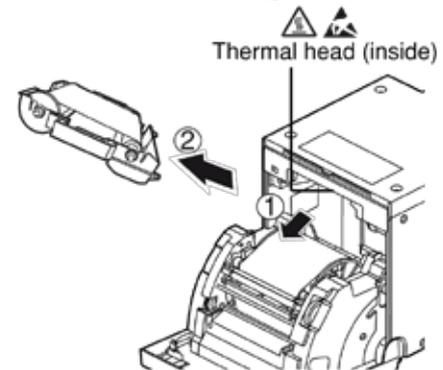

3 Take out the print paper.


When taking the print paper out, pull it up toward you.

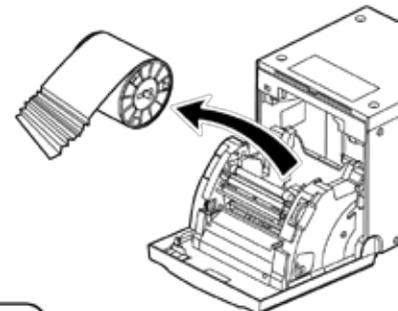

4 Cut off the defective part of the print paper with scissors.

NOTE

- Make sure to cut off the printed part of the print paper. Failure to do this may result in the ink ribbon sticking to the print paper and being torn.
- Make sure to clean the thermal head and the roller.

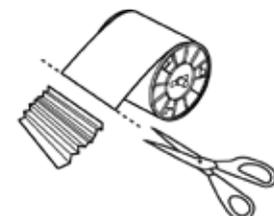

5 Install the print paper and the ink cassette with the ink ribbon.

6 Push the center of the door to close.

The print paper setting is initialized two seconds after you close the door.

When the auto feed & cut mode has been selected, the FEED & CUT procedure is repeated three times after you close the door. When the print paper with the post card printing on its reverse side is installed, the FEED & CUT procedure is repeated five times.

**When the manual & cut mode has been selected**

When the manual feed & cut mode has been selected, hold down the FEED & CUT button for 1 second or longer. Repeat the manual feed & cut three times. When the print paper with the post card printing on its reverse side is installed, repeat this procedure five times.

For how to select the auto feed & cut mode.

CLEANING

Cleaning as indicated below will help maintain stable printer operation and extend the printer's life.


PREPARATIONS FOR CLEANING

- 1 Press the POWER switch on the rear panel to turn on the power.
- 2 Press the DOOR OPEN button to open the door.
- 3 Remove the ink cassette.
- 4 Take out the print paper.
- 5 Press the POWER switch to turn off the power.

Make sure to turn off the power before cleaning.

FILTER CLEANING

Take out the filter from the printer by pinching the tab as shown in the figure, then clean both sides of the filter with a vacuum. After completing cleaning, insert it to the end with the marking of "TOP SIDE" up.

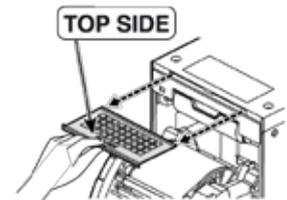**THERMAL HEAD CLEANING****Preparations**

Alcohol (isopropyl alcohol)

Tissue paper (Fold in half about four times, and use the folded side to clean.)

Other : Cleaner pen (option)*, Cleaning ribbon (option)*

* Please ask the dealer about options.

When lines appear on the printed images, clean the thermal head.

Wipe the head cleaning part (as shown right) carefully with tissue paper dampened with a small amount of alcohol.

**NOTE**


- Do not damage the thermal head.
- When the poor print quality is not corrected even if the head has been cleaned, replacement of the thermal head may be required. Contact your dealer.

CAUTION

- Thermal head is hot right after printing. Wait until the head cools before cleaning the thermal head.

NOTE

- The thermal head may be damaged if you touch it while static electricity builds up on your body.

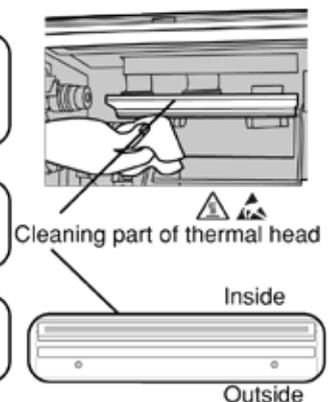

■ WHEN USING THE CLEANING RIBBON (CR9800)

When you use print paper of 152 mm (6") width after using that of 127 mm (5"), thermal head cleaning with a cleaning ribbon may be required.


If one or two lines appear on the printing surface as shown right when printing on the print paper of 152 mm (6") width, clean the thermal head using the optional cleaning ribbon.

Cleaning is not required when :

- you use print paper of 127 mm (5") width after using that of 127 mm(5"),
- you use print paper of 152 mm (6") width after using that of 152 mm(6"), or
- you use print paper of 127 mm (5") width after using that of 152 mm(6").

Print paper of 127 mm(5") width: 9x13 (3.5x5"), 13x18 (5x7")

Print paper of 152 mm (6") width: 10x15 (4x6"), 15x20 (6x8"), 15x23 (6x9")

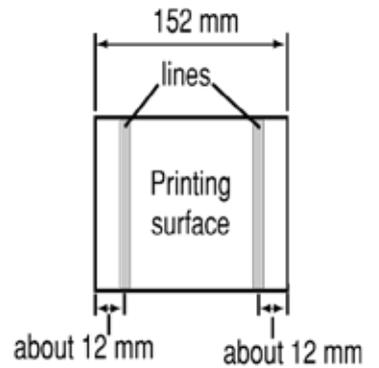

Cleaning ribbon (CR9800)

NOTE

When the symptom of poor print quality is not corrected even after the head is cleaned, replace the thermal head. Contact your dealer.

ROLLER CLEANING

Preparations


Alcohol (isopropyl alcohol)

Tissue paper (Fold in half about four times, and use the folded side to clean.)

Clean the black part of the roller.

Wipe the black part carefully with tissue paper dampened with a small amount of alcohol.


Wipe the whole roller by turning it.

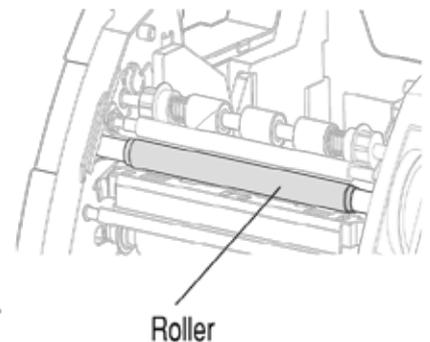


PAPER FLANGE CLEANING

Clean the parts that contact the print paper sides as shown right.

Wipe the parts carefully with tissue paper dampened with a small amount of alcohol.

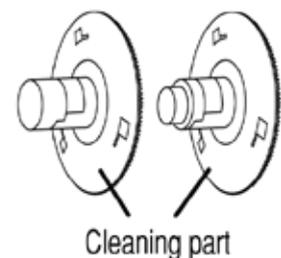

6-USING THE PHOTOBOOTH

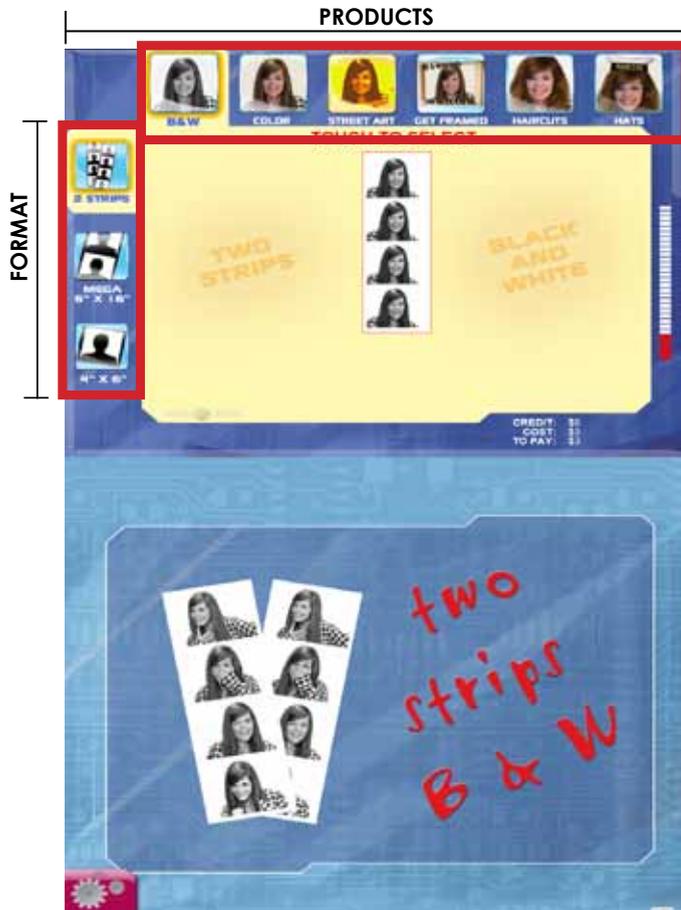

6.1 PRODUCTS

DEMONSTRATION

When there are no vends the machine enters in Demo Mode. Photo samples are displayed. Once money is inserted, you are taken to the credit screen.


You can choose among 6 different products and 3 formats: two strips, 6x16" or one 4x6".

2 STRIP

Black & White

4 different shots (3 shots if logo is enabled, the logo will appear in the 4th shot).



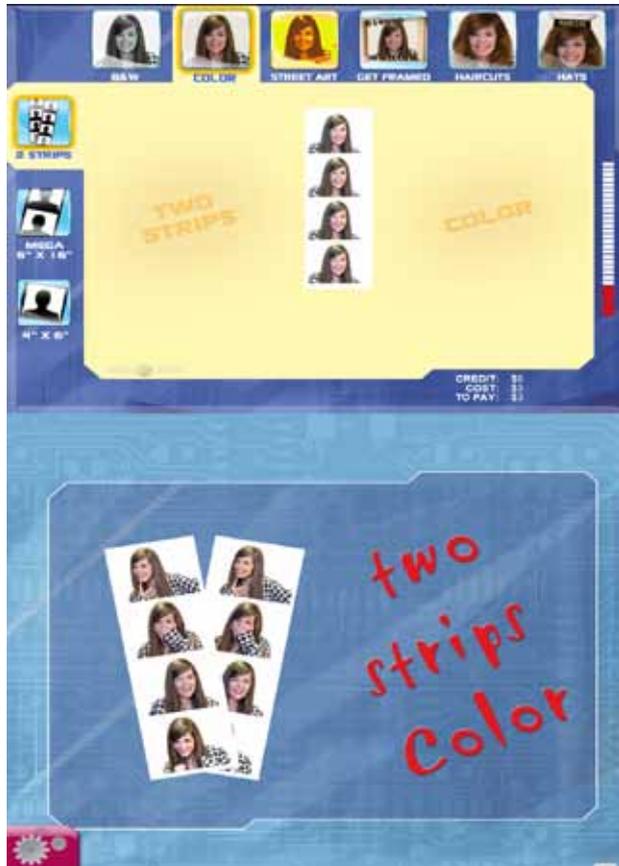


Color

4 different shots (3 shots if logo is enabled, the logo will be appear in the 4th shot).



Street Art

4 different shots (3 shots if logo is enabled, the logo will be appear in the 4th shot).

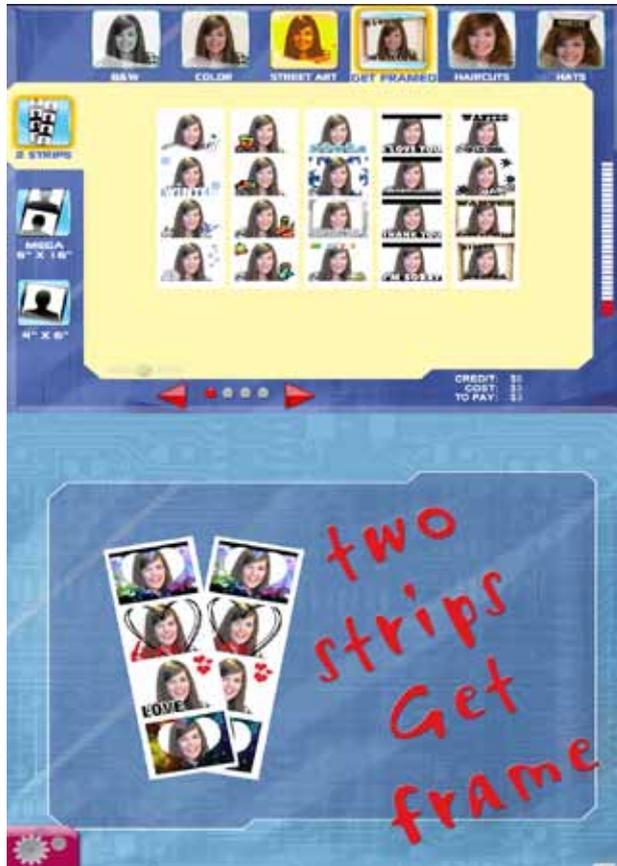

Get Framed

FRAME SELECTION


You can choose different Get Framed options. Use the arrows (left/right) to view more options.



Haircuts

SELECT DESIRED LOOK

You can choose different Haircuts options. Use the arrows (left/right) to view more options.

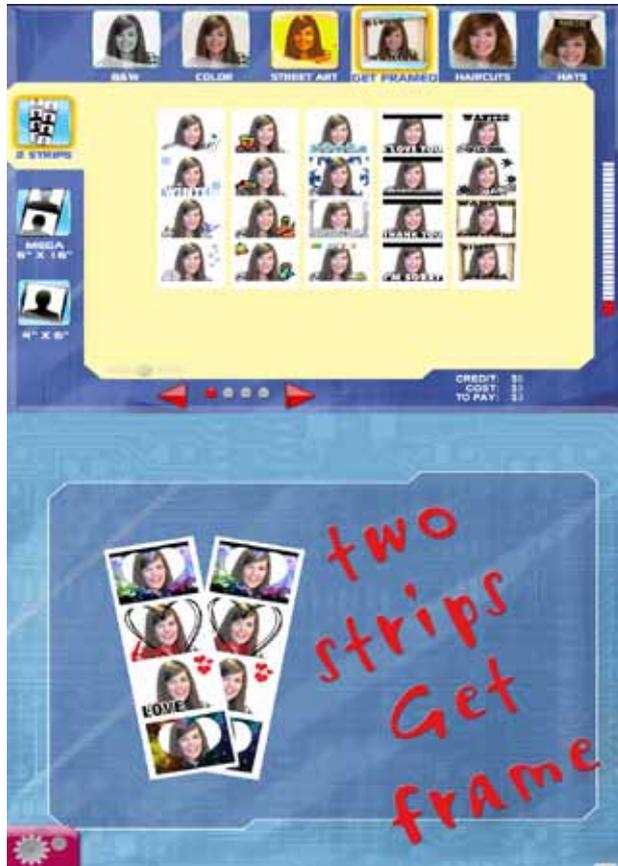

Hats

HATS SELECTION

You can choose different Hats options. Use the arrows (left/right) to view more options.



4x6"


Black & White

One unique shot.



Color

One unique shot.

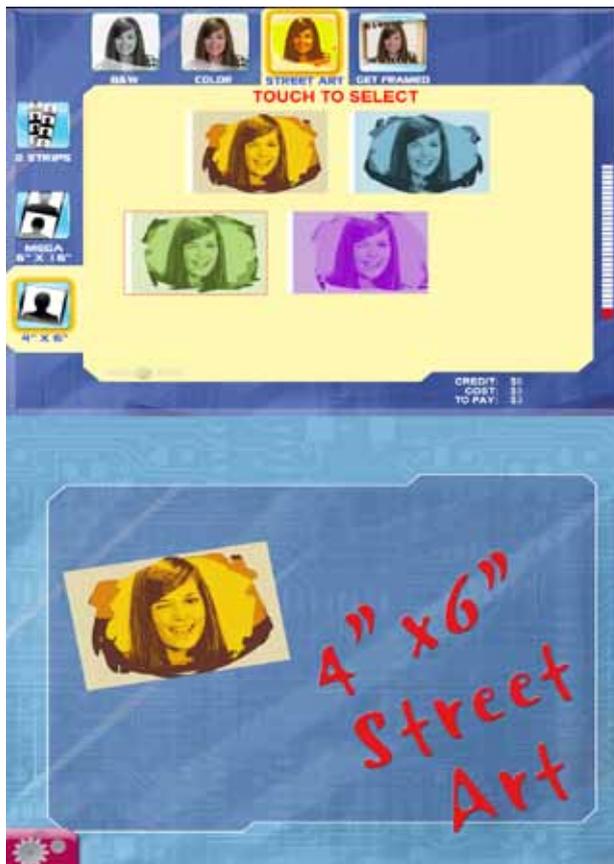

Street Art

Select one design. One unique shot.



Get Framed

FRAMES SELECTION

You can choose one Get Framed. There are different options. Use the arrows (left/right) to view more options.

6.2 PLAY




OPTION COINOP

Coinop mode, at the bottom right of the screen you can view the price of the products. You can change the price for product and format in the setup menu. (Setup Menu Products & Prices)

Pay screen. If you have a card reader, appears this screen. If you don't have a card reader, only appears CASH option.



If you have a card reader, appears this screen. If you don't have a card reader, only appears CASH option.

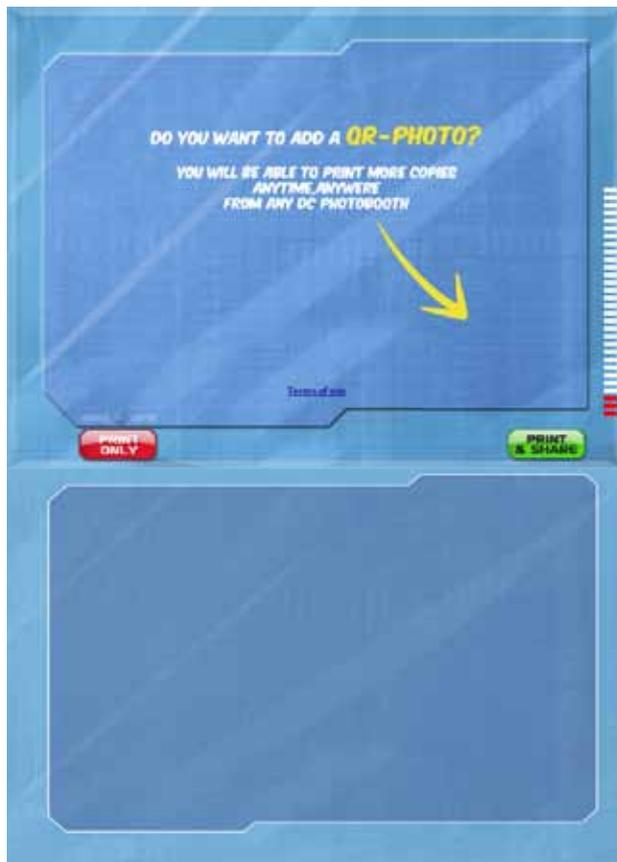

Disclaimer screen. If you select the option "Share & print", your photos uploaded to the cloud and you can retrieve them at anywhere and at anytime and share them with Family and friends. Always in a secure environment.





SHOTS

4 shots are taken. (3 shots if you enabled the logo). At the top left appears the countdown, indicating at what moment will produce the shot.



At the bottom right of the screen shows how many shots have been made and how many are left to be done.

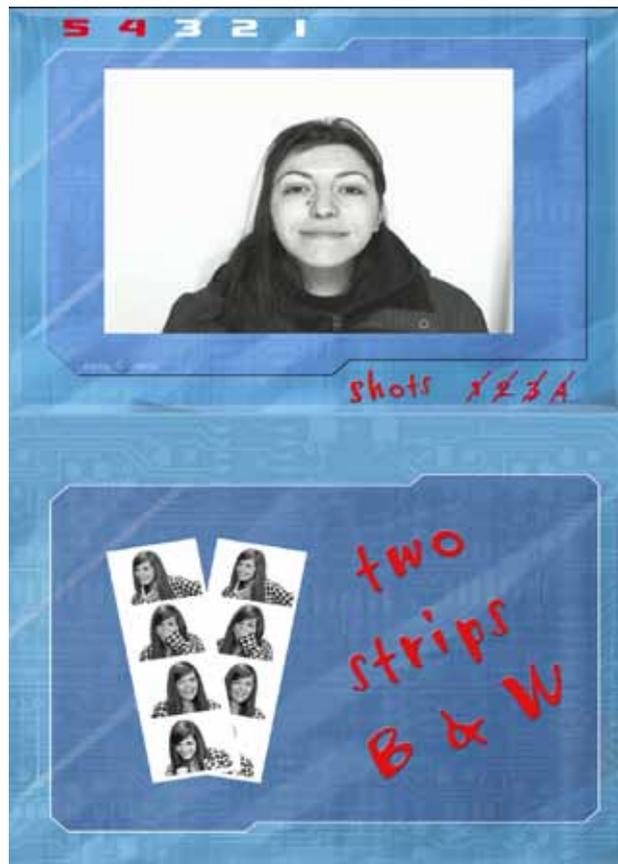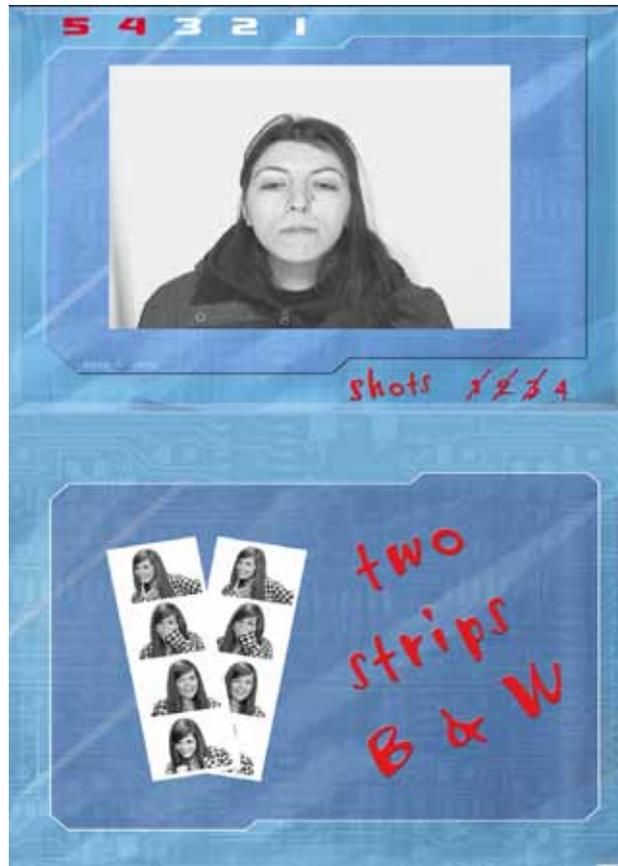



EXTRA COPIES

You can choose to make some extra copies in various formats. You can make extra copies in 2 strips, 6x16" or 4x6" format.



Once your choice, enter the quantity you want and press DONE. (use the "+" and "-" buttons to indicate the quantity)

If you want more formats, or copies, select the desired photo and repeats the process.

When you have finished your selection, click CHECK OUT to validate.



Screen appears with the total payment of the extra copies. Once you have paid will proceed to print the photos.



VIDEO

This screen appears if the option Record a Video Message is enabled in the Setup Menu.



PRINTING

The pictures are shown on the screen while strips are printing.




LOGO

If you have enabled the logo, it will appear at the site of the 4th shot.




OPTION RENTALS


If you are playing in Freeplay mode, the payment screens not appears during the play.

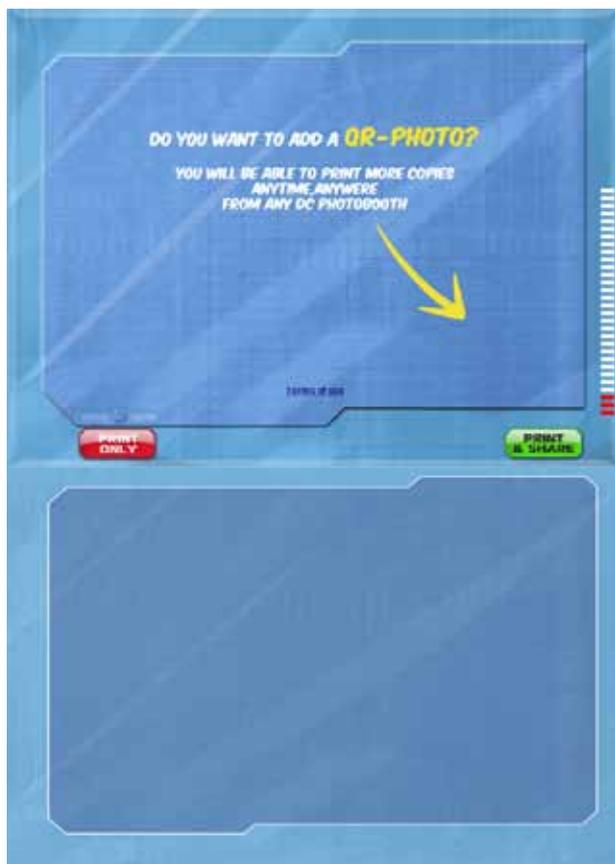


Disclaimer screen. If you select the option "Share & print", your photos uploaded to the cloud and you can retrieve them at anywhere and at anytime and share them with Family and friends .Always in a secure environment.

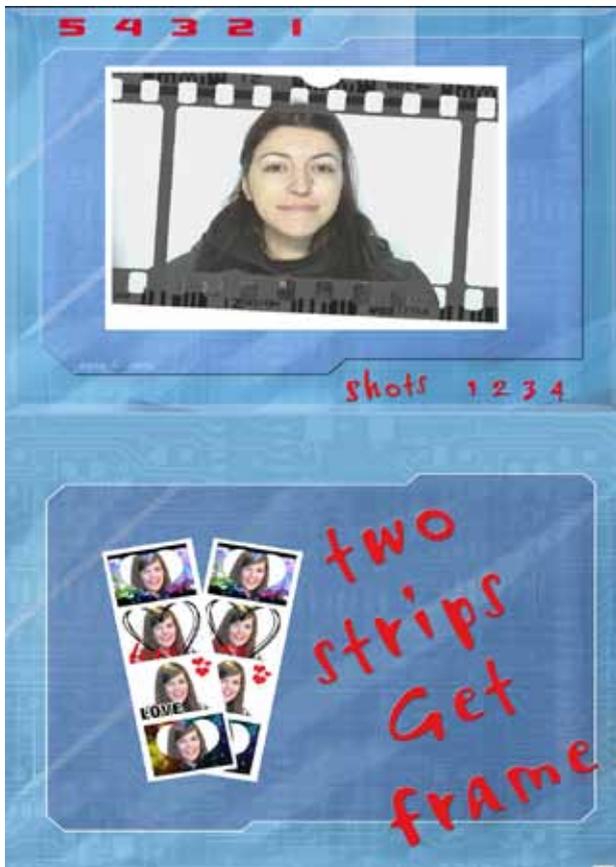


· Shot 1

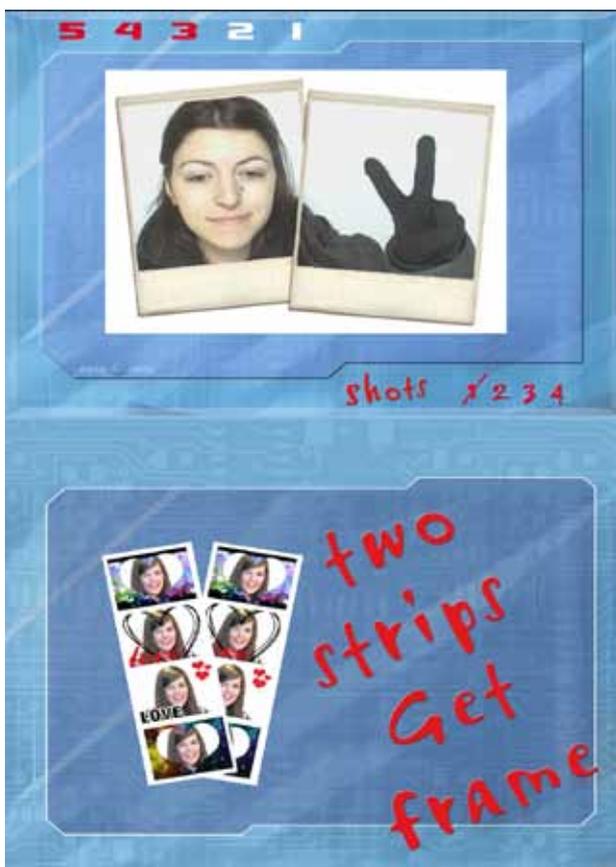

· Shot 2

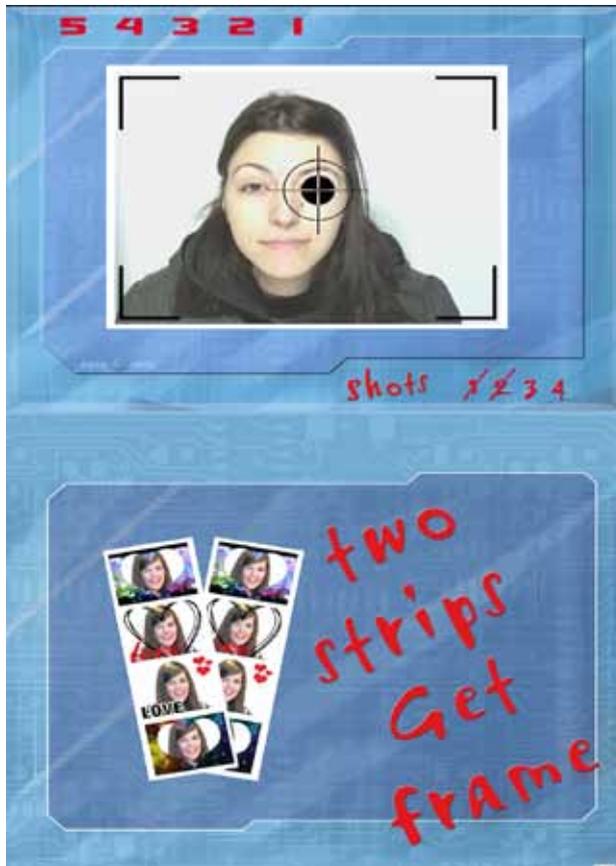

· Shot 3

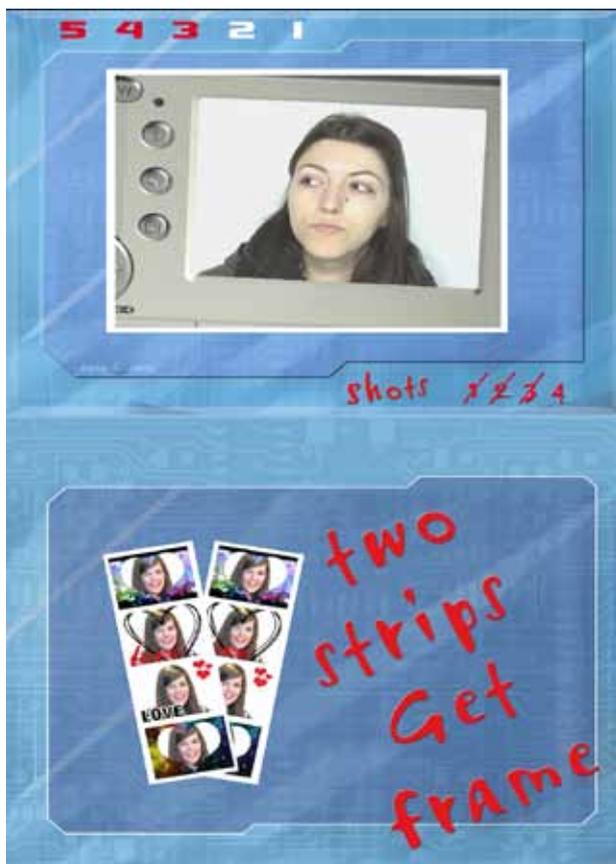

· Shot 4



EXTRA COPIES

You can choose to make some extra copies in various formats. You can make extra copies in 2 strips, 6x16" or 4x6" format.




**VIDEO**

This screen appears if the option Record a Video Message is enabled in the Setup Menu.

**PRINTING**

The pictures are shown on the screen while strips are printing.

6.3 OPTIONS MENU

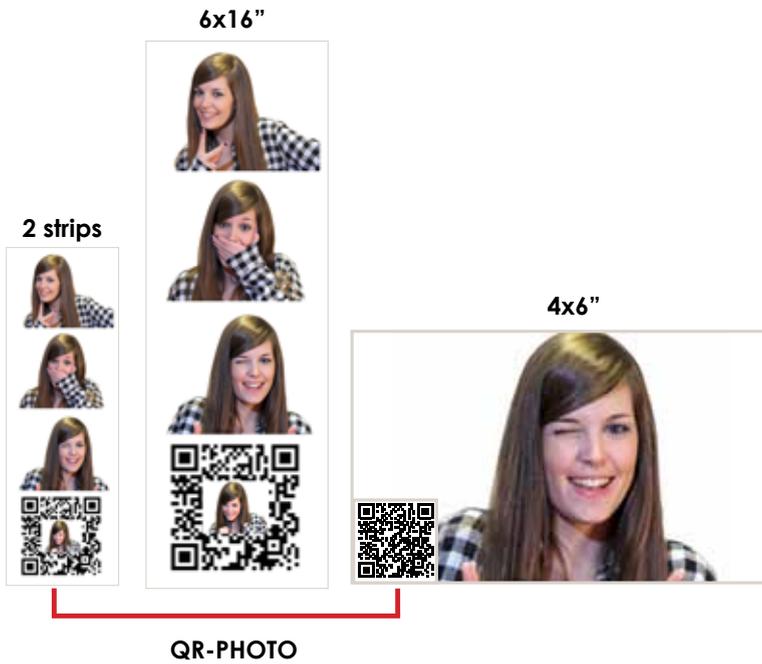

You've seen that in the pictures get a QR-Photo printed.

QR-PHOTO: Exclusive and Unique QR Code to each print to get your Photos Anytime, Anywhere from any Smart-phone, or Print them again Anytime, Anywhere from any DC PhotoBooth. At the bottom of the screen left product is a button with a drop down menu with two options: Scan and Login.



6.3.1 SCAN QR-PHOTO

SCAN: If you press the Scan button, a screen appears where you're asked to show the QR-PHOTO at the camera. Instantly, your photo will appear on the screen and you can make extra copies.



6.3.2 LOGIN QR-ID




LOGIN: If you select the Login option, a screen appears where you're asked to show your QR-ID at the camera. What is the QR-ID?

QR-ID: Exclusive and Personal QR Code to any user, that links all your photos to you, and you to all the DC PhotoBooths. Anytime, Anywhere. All users have their own QR-ID into their Smartphone.


DC has a smartphone application in which each user has a unique QR-ID which can be linked with a DC PhotoBooth. Once the user has identified a screen which shows the user name and the number of photos you have scanned with your smartphone through the DC app.


Into this screen you have 2 options: select one of your photos and make extra copies or take a new photo. If you choose "Take a new photo", this photo will be automatically saved in your smartphone with the App.

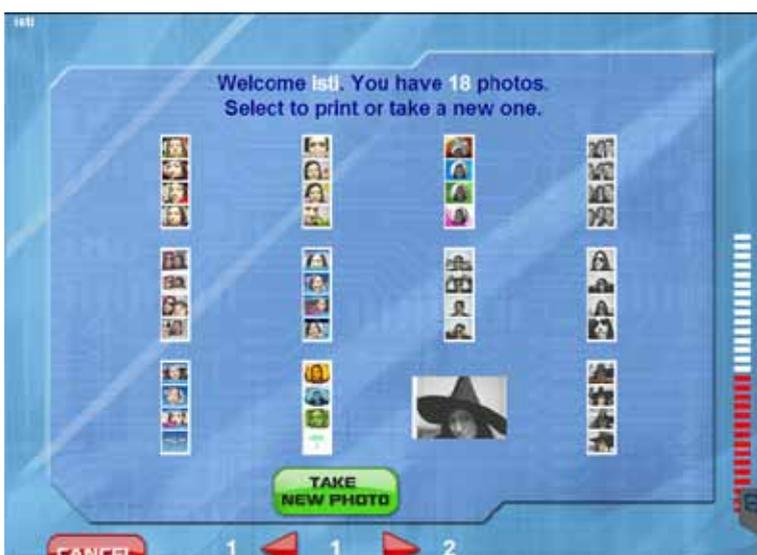

7-CUSTOMIZED MANUALLY

7.1 STRUCTURE

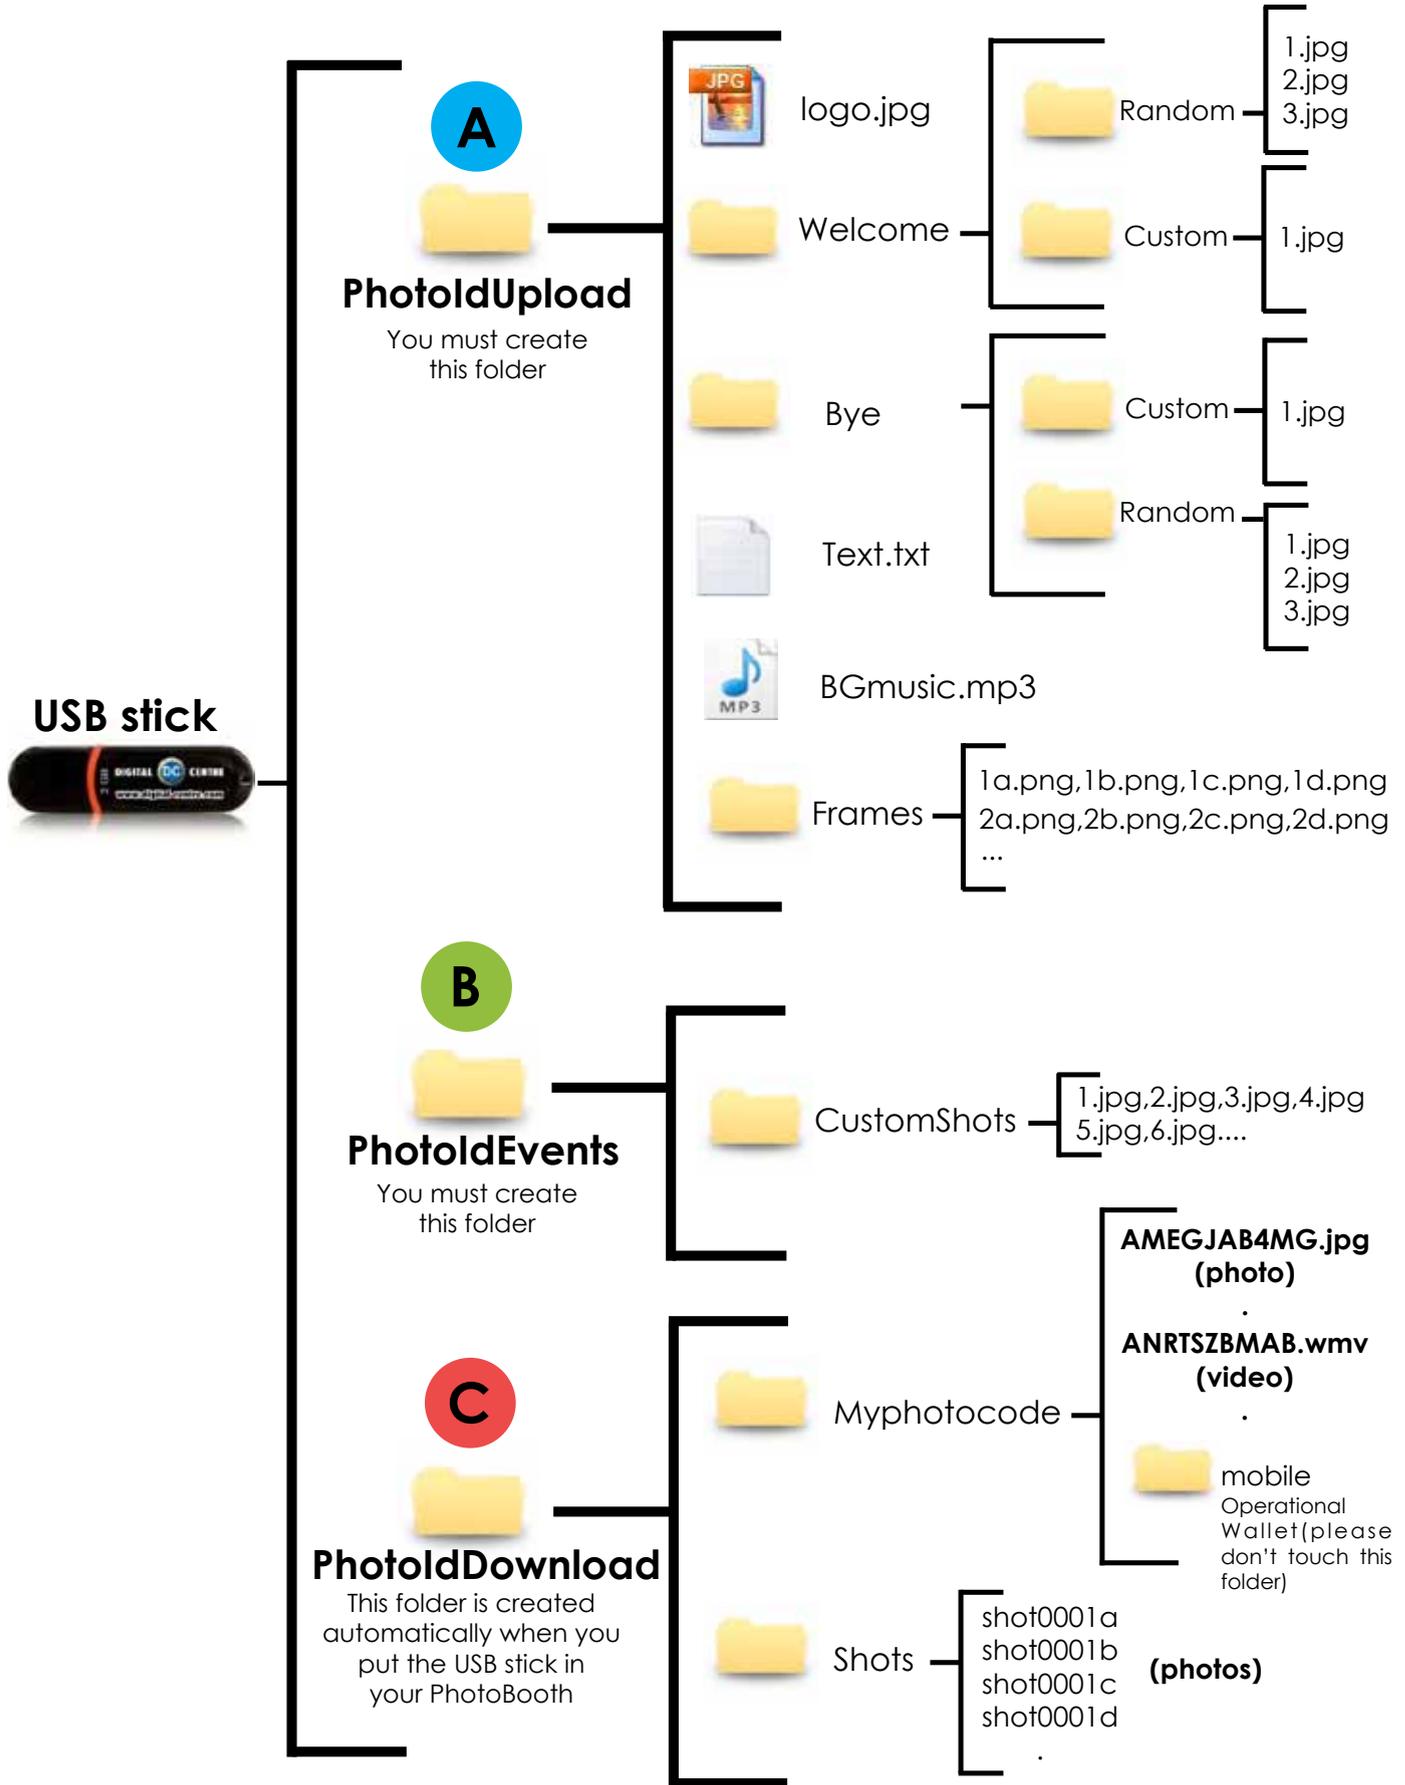

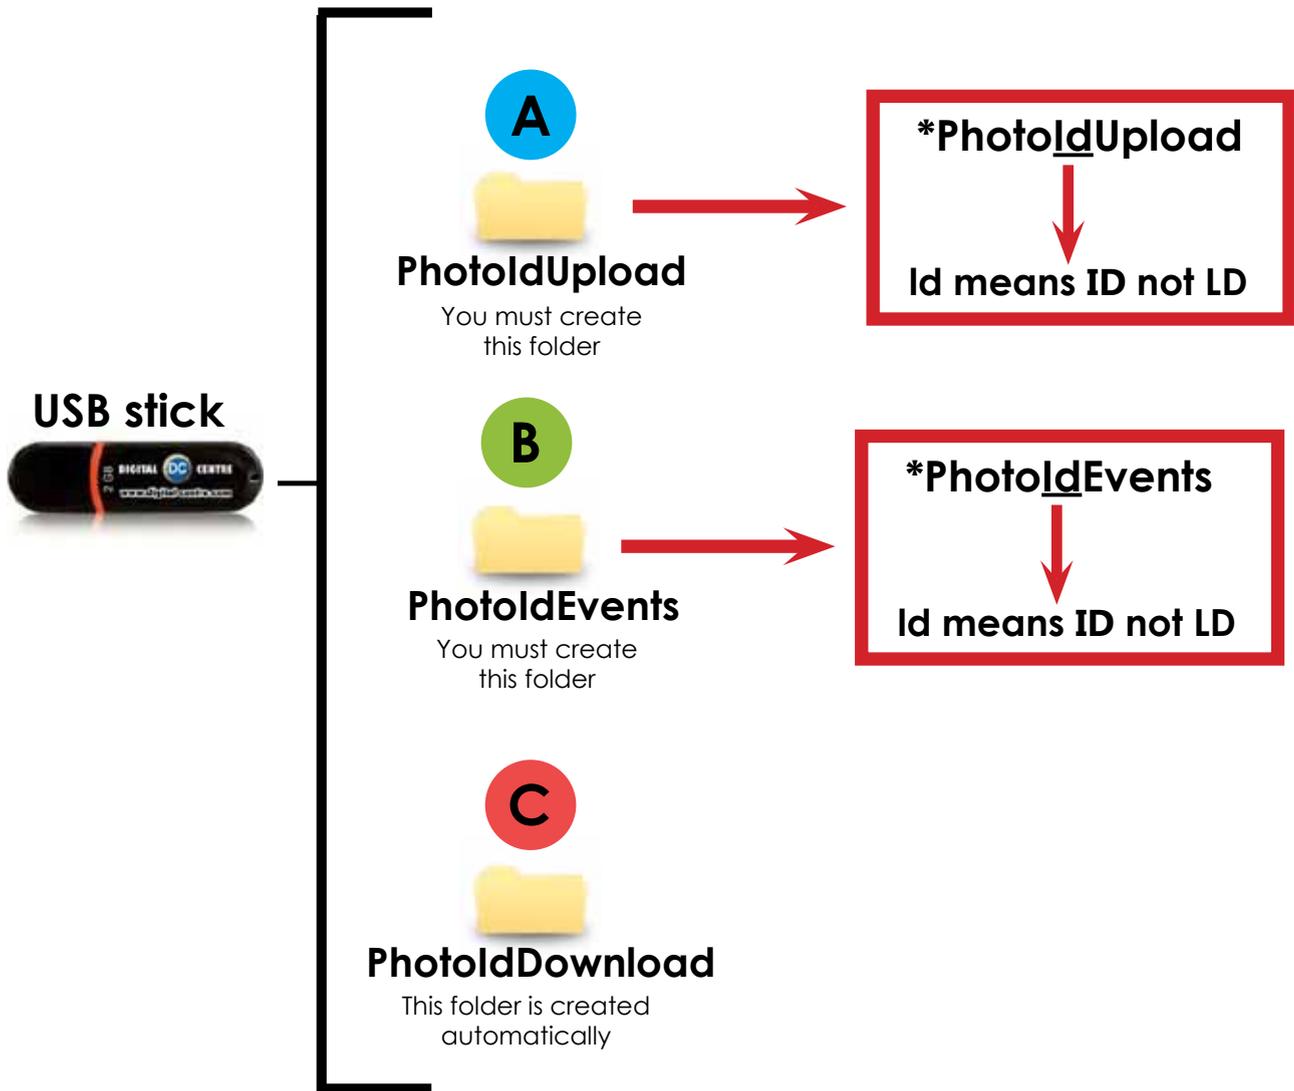

1 · Necessary Materials:


- USB Stick with 2 GB of available space
- We recommend using a USB Stick with a led indicator




A

7.2 LOGO

**FOLDER
PhotoldUpload**

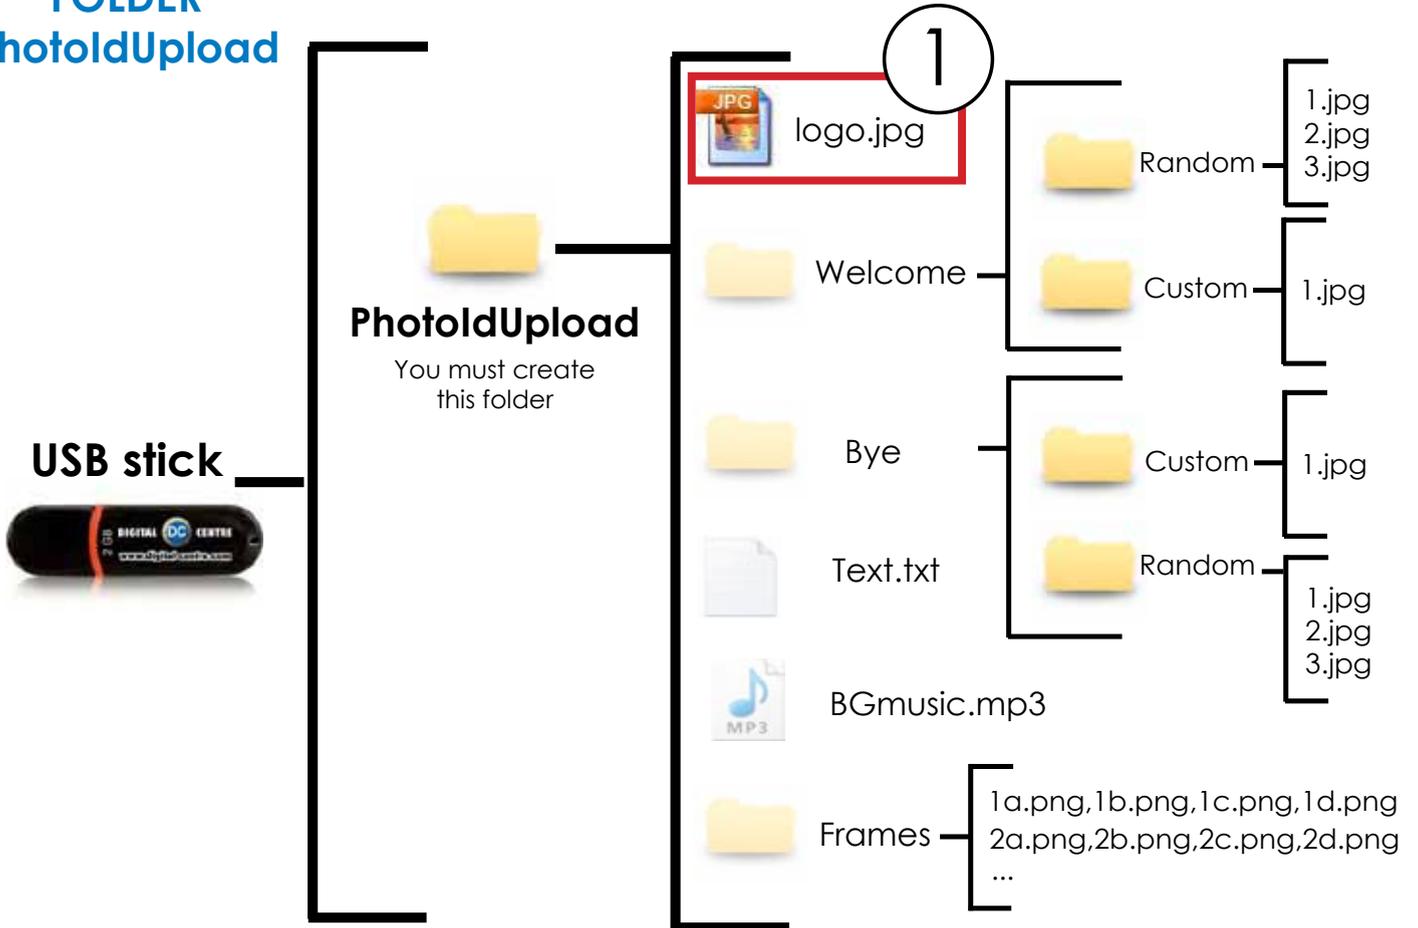

DIRECTIONS FOR UPLOADING THE LOGO

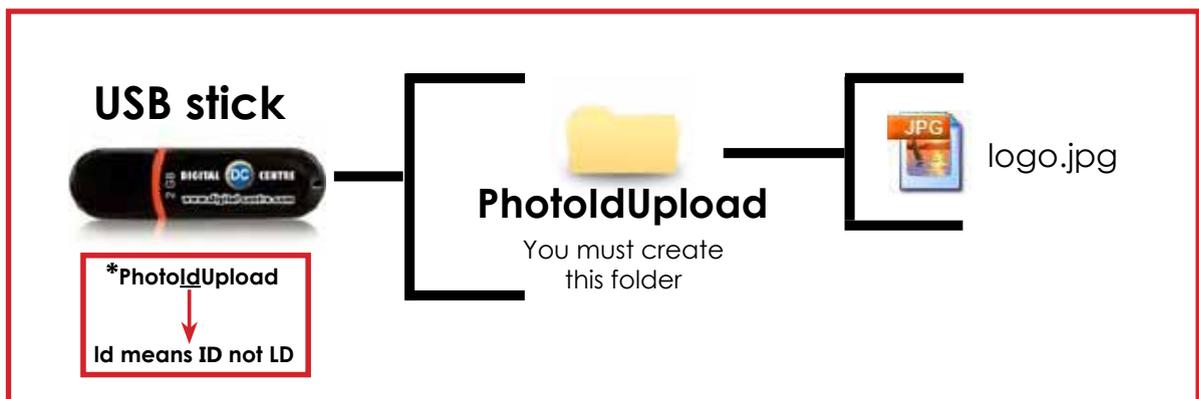

- 1 · Necessary Materials:
 USB Stick with 2 GB of available space
 We recommend using a USB Stick with a led indicator

- 2-Create a folder on the USB stick and name it **PhotoldUpload**
- 3-Insert the logo that you want to use in the folder **PhotoldUpload**
- 4-Connect the USB Stick to the Photo Booth
- 5-Go to Setup Menu (important) and confirm that logo is activated



Sample Logo


Logo Characteristics:

Name: logo
Size: width: 800 pixels
height: 600 pixels
Resolution: 300dpi
We recommend 300dpi, but it will also work with less resolution.
Extension: JPG
Color mode: RGB




Not working? Please refer to section 13.1 for assistance
UPLOADING CUSTOM USB STICK TO PHOTOBOOTH (See section 9)
SETUP MENU (See section 11)


7.3 WELCOME/BYE

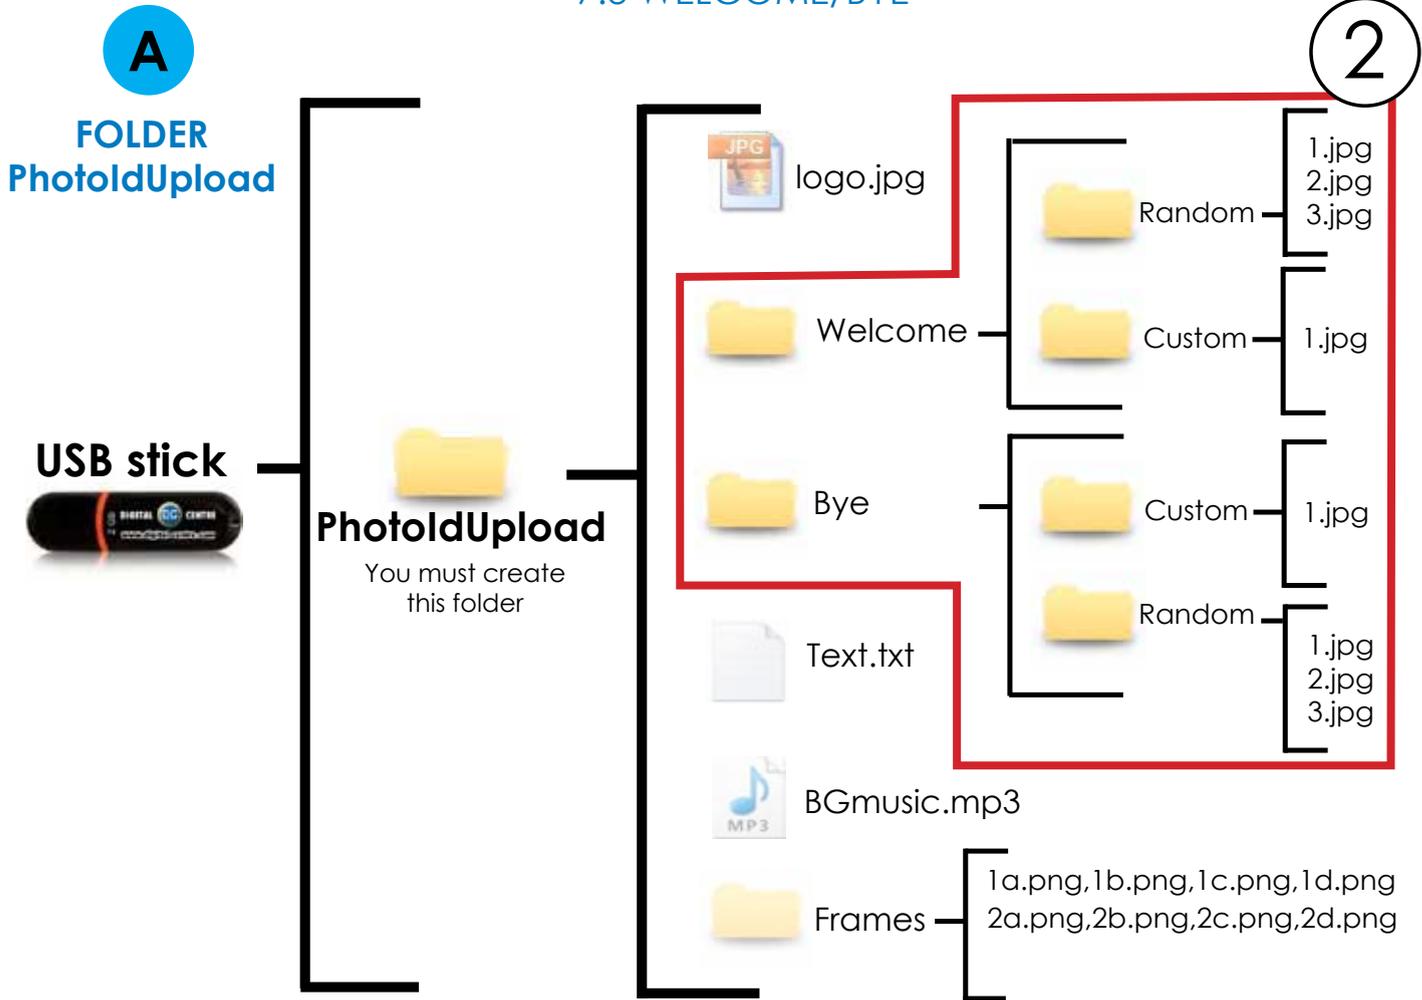

DIRECTIONS FOR UPLOADING WELCOME/BYE

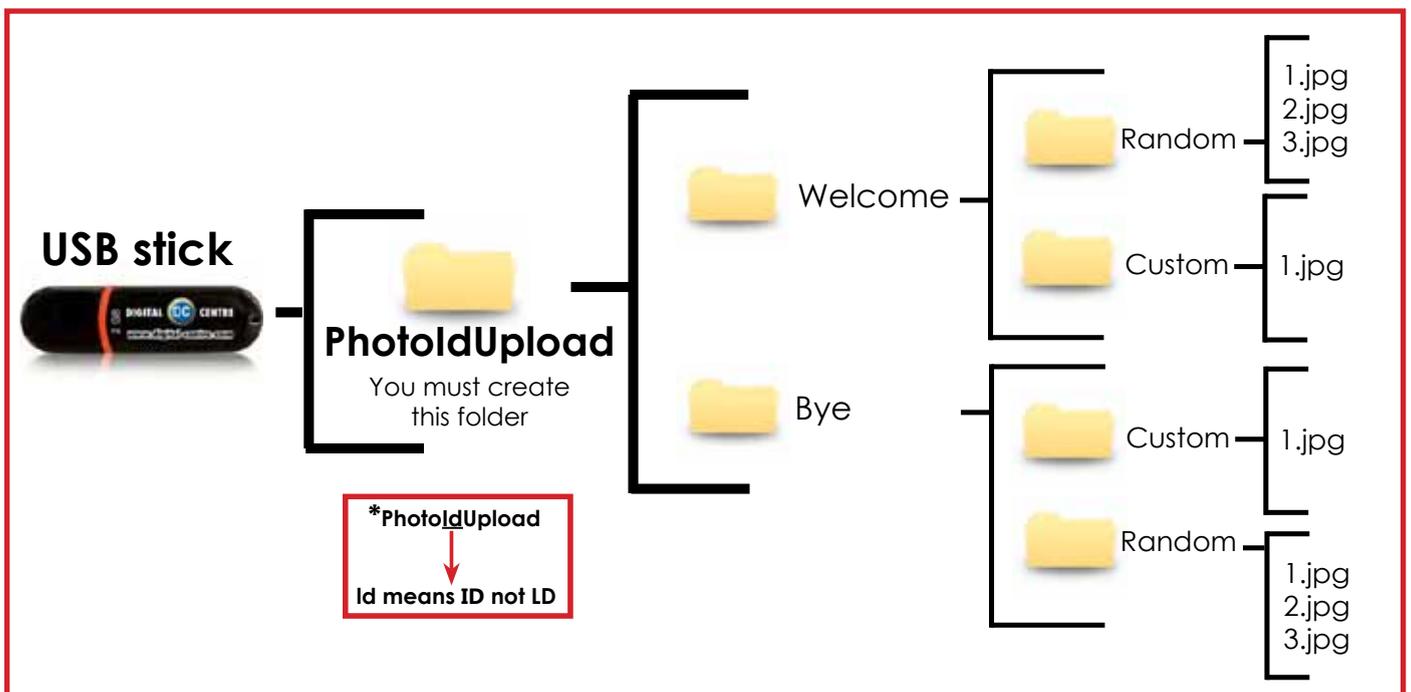

Welcome message (custom)

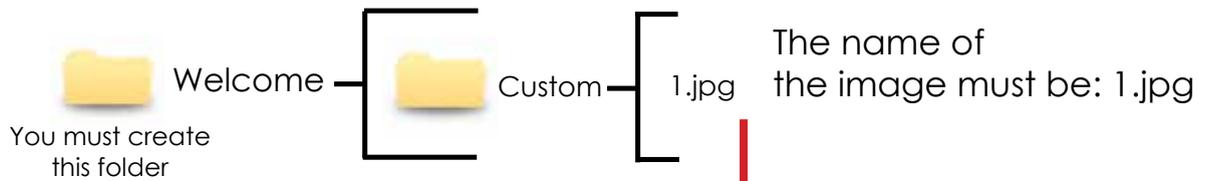

Sample Welcome




1.jpg

Specifications:

Name: 1
Size: width: 1050 pixels
height: 1680 pixels
Resolution: 72dpi
Format: JPG
Color mode: RGB



Bye message (custom)

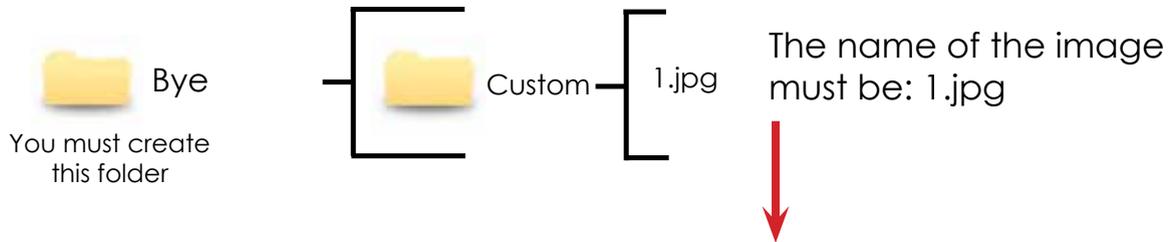

Sample Bye




1.jpg

Specifications:


Name: 1
Size: width: 1050 pixels
height: 1680 pixels
Resolution: 72dpi
Format: JPG
Color mode: RGB




UPLOADING (See section 9)
SETUP MENU (See section 11)

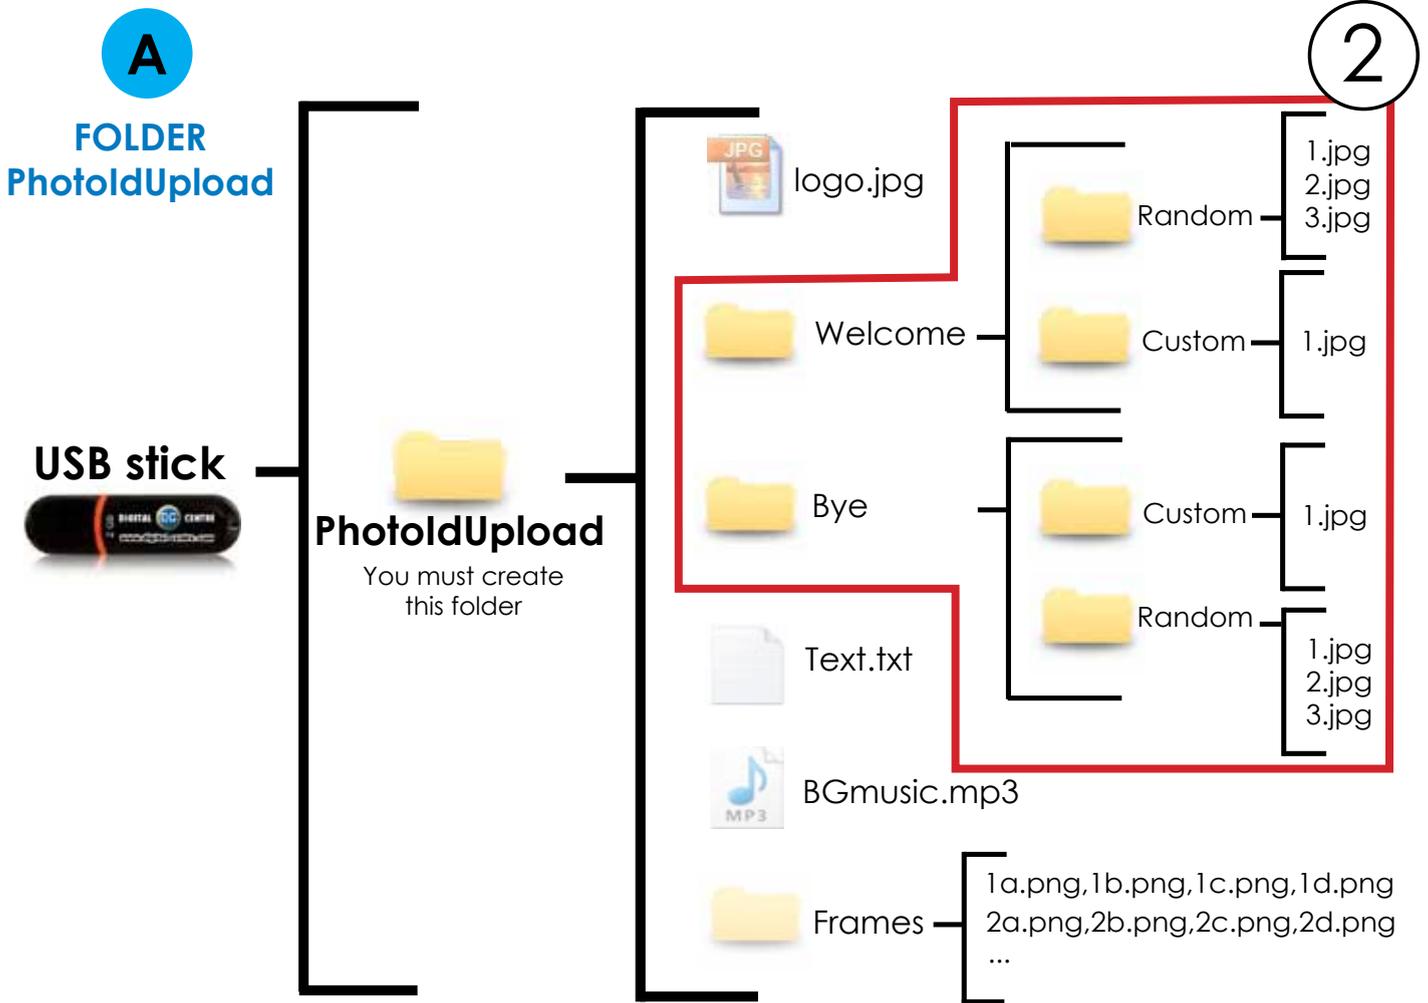

DIRECTIONS FOR UPLOADING WELCOME/BYE

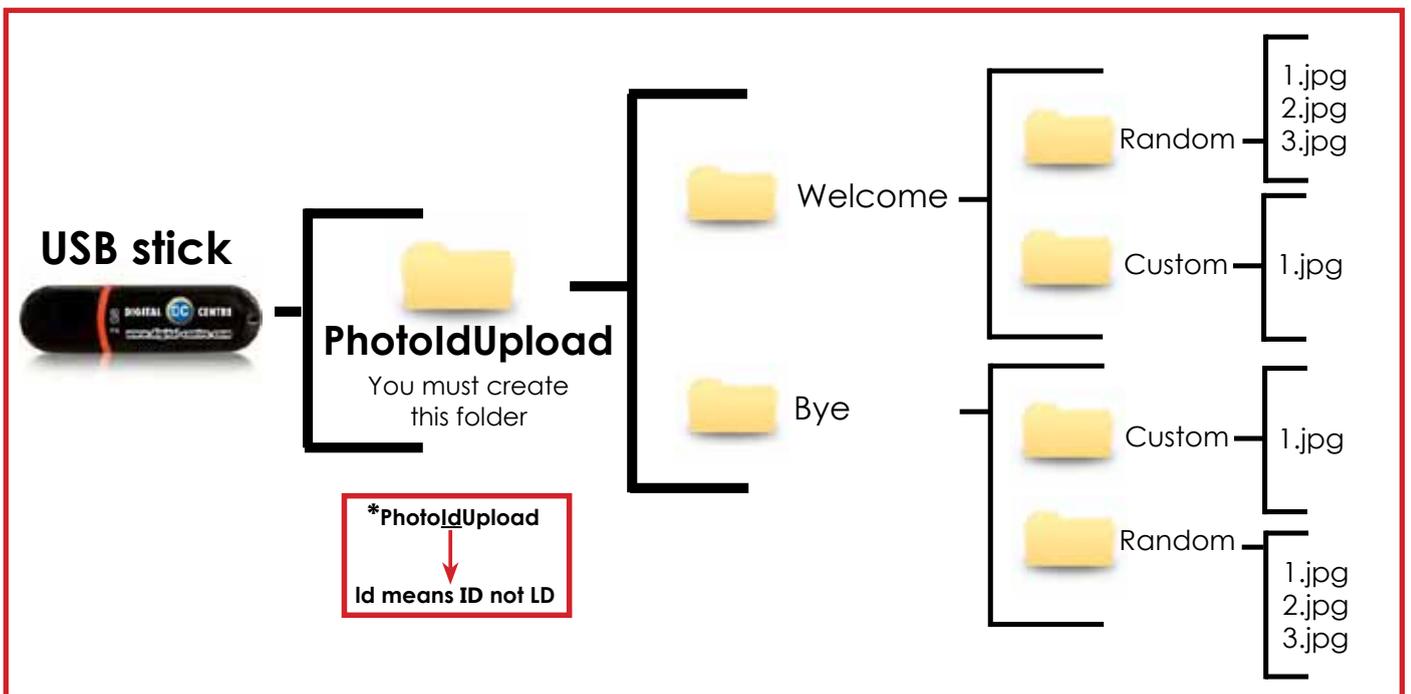

Welcome message random

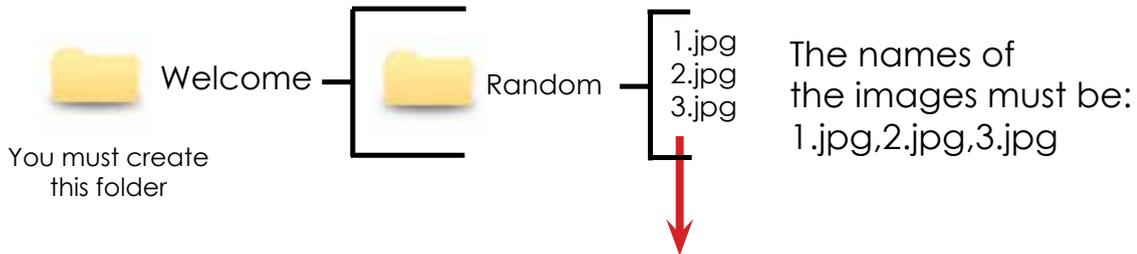

2 Samples Welcome random

1.jpg



2.jpg



Specifications:


(1.jpg,2.jpg,3.jpg)

Each one with following characteristics:



Name: 1
Size: width: 1050 pixels
height: 1680 pixels
Resolution: 72dpi
Format: JPG
Color mode: RGB

Bye message random

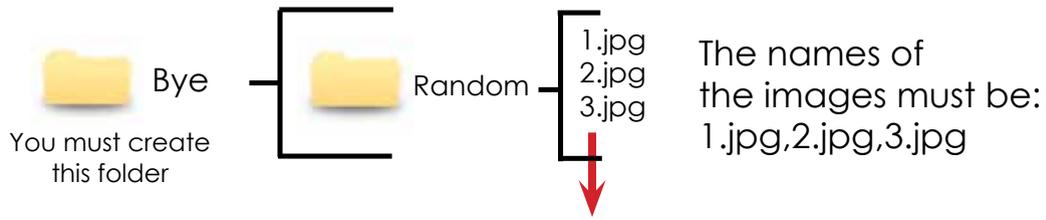

Each player will get a different Random Bye screen.

2 Samples Bye random

1



2




Specifications:
(1.jpg,2.jpg,3.jpg)
Each one with following characteristics:




Name: 1
Size: width: 1050 pixels
height: 1680 pixels
Resolution: 72dpi
Format: JPG
Color mode: RGB

UPLOADING (See section 9)
SETUP MENU (See section 11)

7.4 TEXT

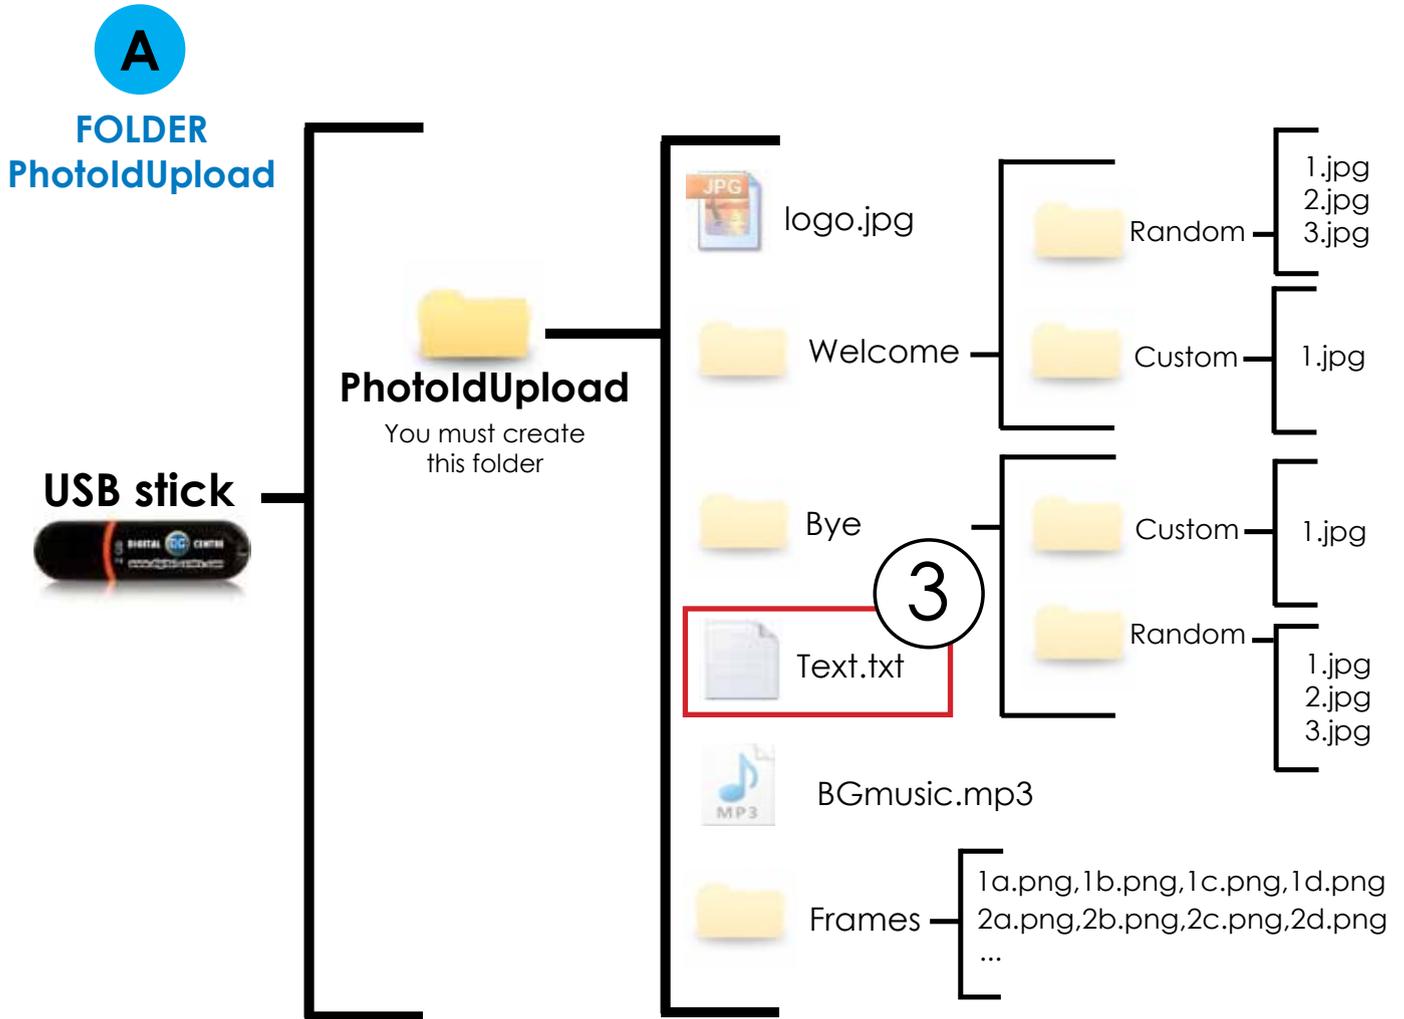

DIRECTIONS FOR UPLOADING TEXT

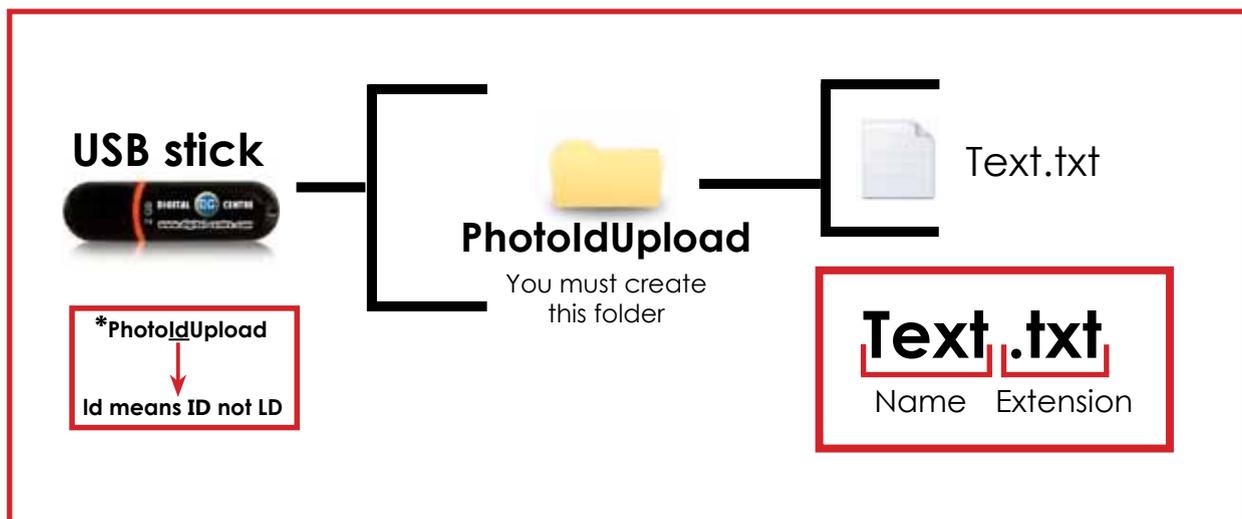

2 STRIPS



6x16"



All text in this file is printed vertically on the left side of the photostrips.

Sample:

Date:12-12-2013 | Digital-centre.com | QR-Photo | Share Secure → go to MyPhotoCode.com and enter this code FO32TGJBMF

Sample:


Date: 12-12-2012 ** go to MyPhotoCode.com and enter this code FO32TGJBMF
Digital-centre.com | QR-Photo | Share Secure

4x6"




UPLOADING CUSTOM USB STICK TO PHOTOBOOTH (See section 9)
SETUP MENU (See section 11)

7.5 MUSIC

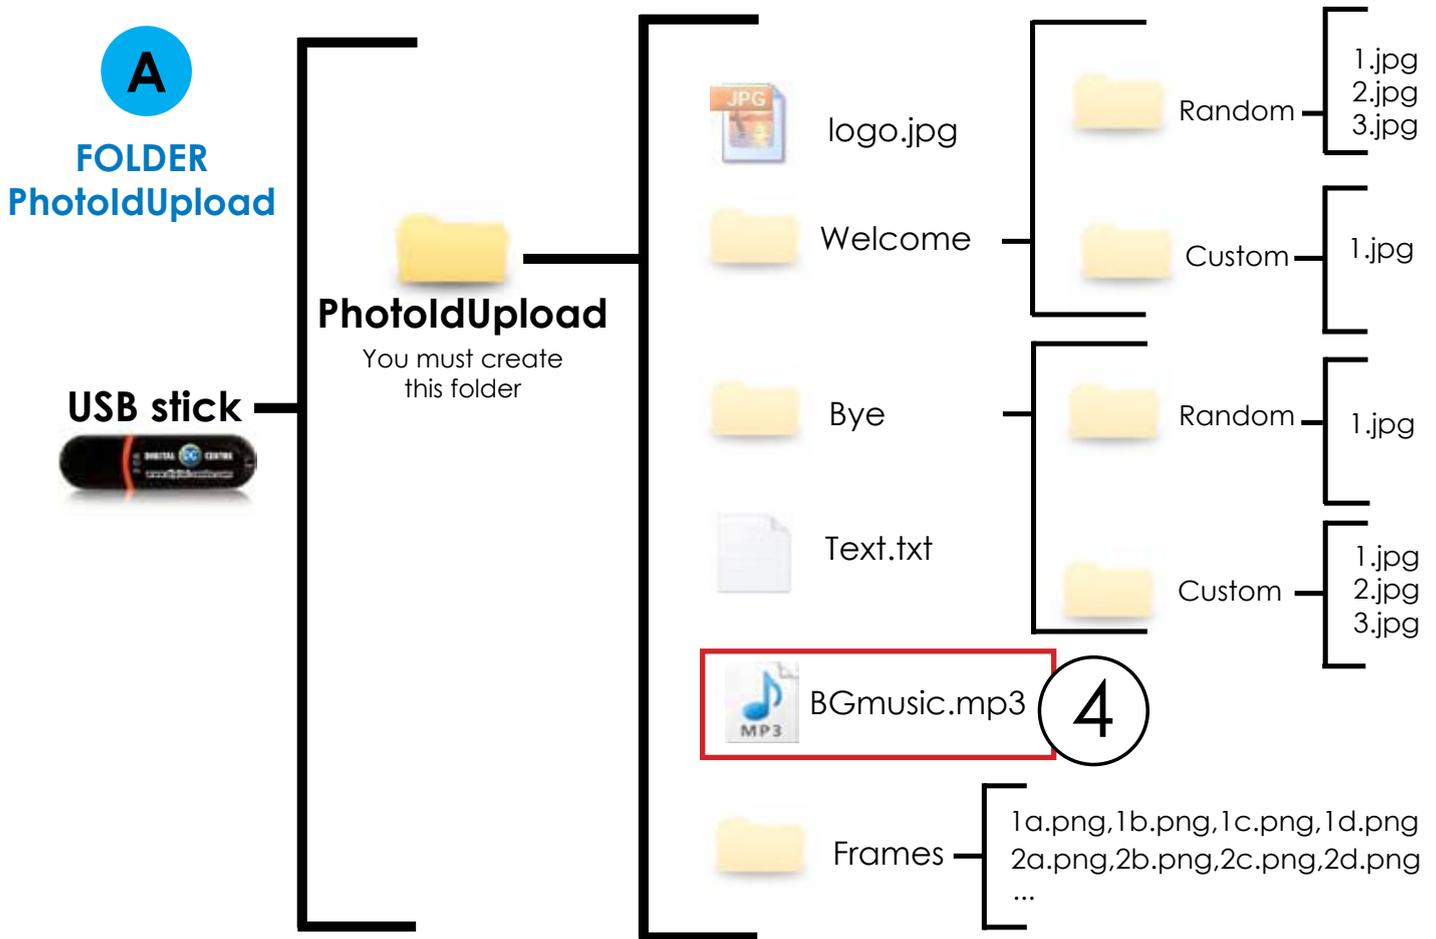

DIRECTIONS FOR UPLOADING MUSIC

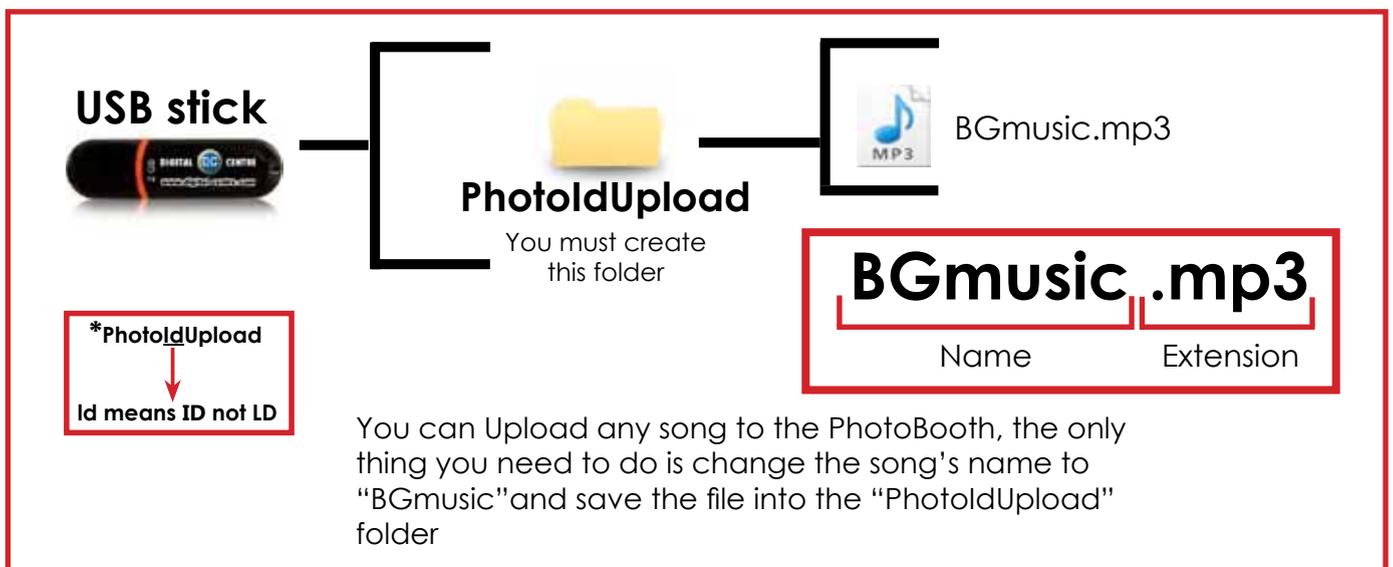


UPLOADING CUSTOM USB STICK TO PHOTOBOTH (See section 9)
 SETUP MENU (See section 11)

7.6 FRAMES

A

FOLDER
PhotoldUpload

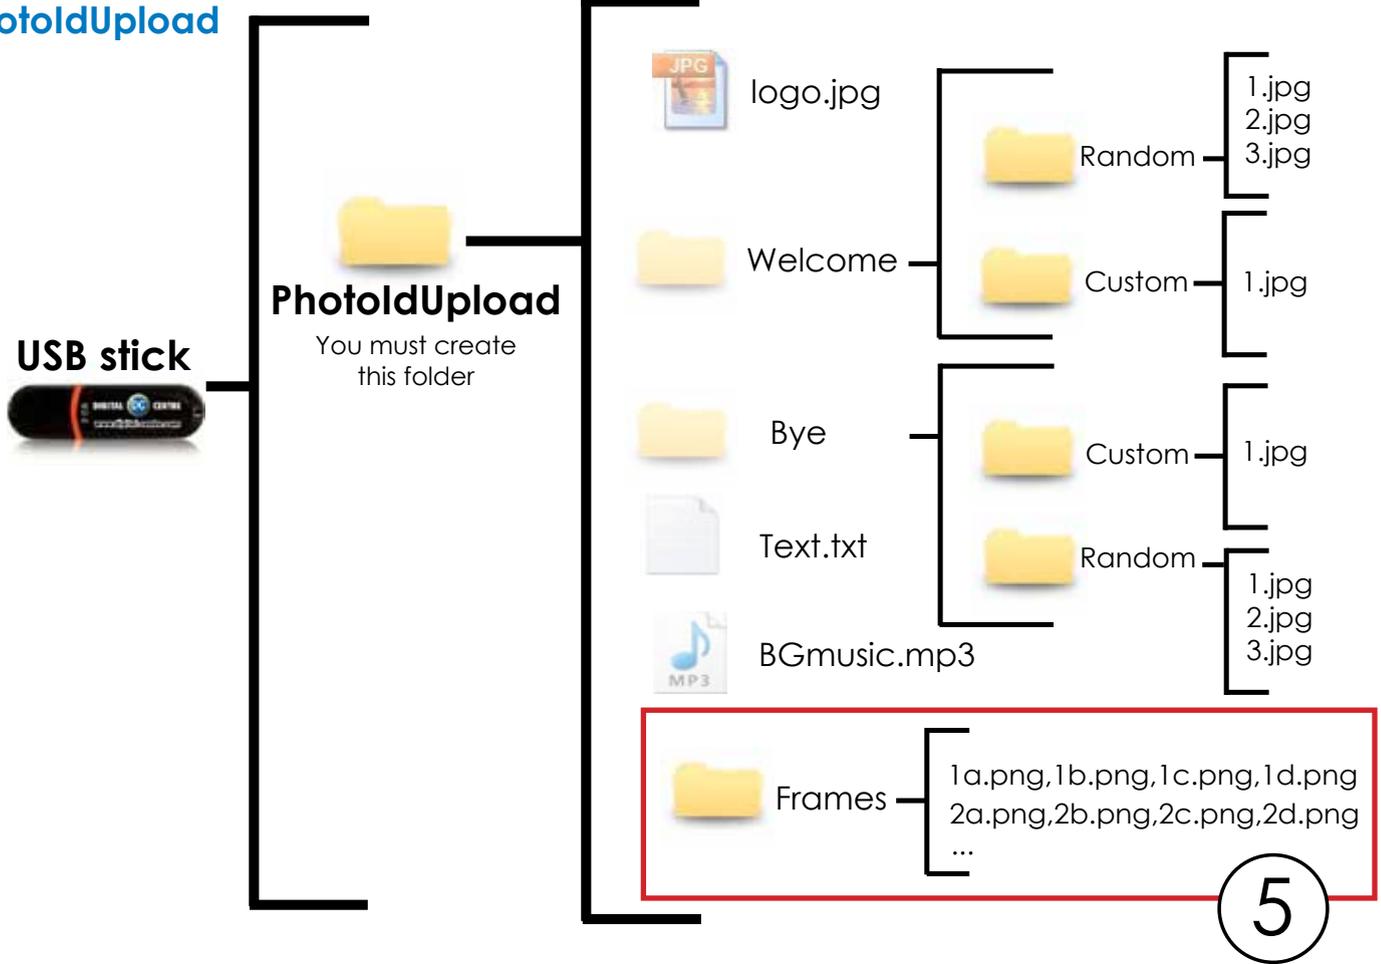

FRAMES

There are **4 screens** with frames. Each screen contains **5 groups**. That means, a total of **20 groups**. Every group of 4 frames will be printed together.

If you want to customize one group (for example number 1), you need four images (frames) 1a.png, 1b.png, 1c.png & 1d.png".

To create a new framework we will create a file with the following characteristics.



SAMPLE

Name: Check structure name

Size: width: 1280 pixels
height: 960 pixels

Resolution: 300dpi


We recommend 300dpi, but It will also work with less resolution.


Format: PNG

It's very important to save the file of the frames only in PNG format.

Create your own customized frame. Inside of the blank area is where the camera will capture the image, and your customized frame will surround the image.

DIRECTIONS FOR UPLOADING FRAMES

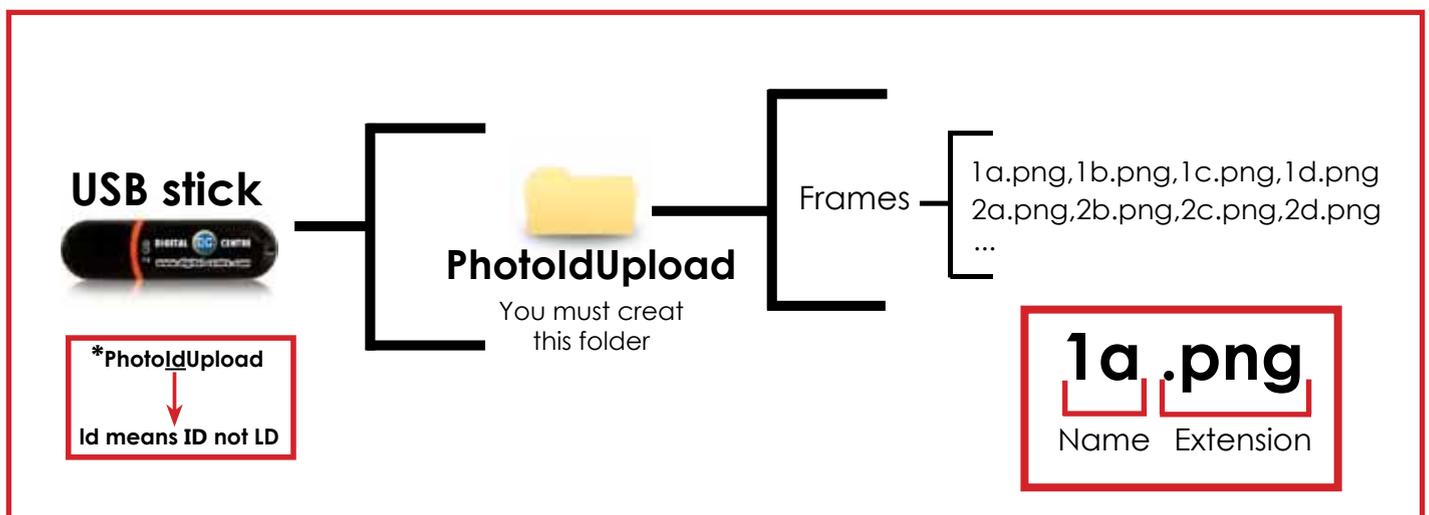

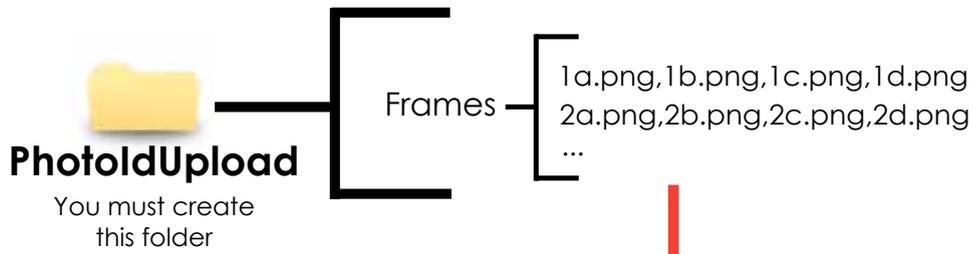

2 strips

SAMPLE
Screen 1 (group 1)

1	2	3	4	5
1a 	2a	3a	4a	5a
1b 	2b	3b	4b	5b
1c	2c	3c	4c	5c
1d	2d	3d	4d	5d

Screen 2


6	7	8	9	10
6a	7a	8a	9a	10a
6b	7b	8b	9b	10b
6c	7c	8c	9c	10c
6d	7d	8d	9d	10d

Screen 3

11	12	13	14	15
11a	12a	13a	14a	15a
11b	12b	13b	14b	15b
11c	12c	13c	14c	15c
11d	12d	13d	14d	15d

Screen 4

16	17	18	19	20
16a	17a	18a	19a	20a
16b	17b	18b	19b	20b
16c	17c	18c	19c	20c
16d	17d	18d	19d	20d

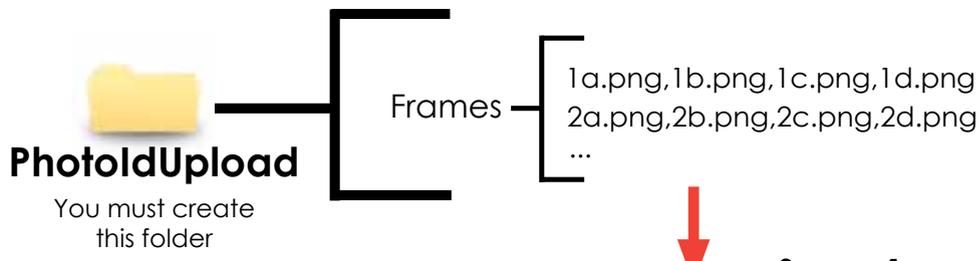


Screen 1



6x16"

SAMPLE
Screen 1 (group 1)

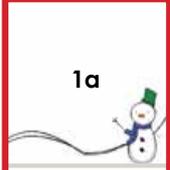1	2	3	4	5
1a 	2a	3a	4a	5a
1b 	2b	3b	4b	5b
1c	2c	3c	4c	5c
1d	2d	3d	4d	5d

Screen 2


6	7	8	9	10
6a	7a	8a	9a	10a
6b	7b	8b	9b	10b
6c	7c	8c	9c	10c
6d	7d	8d	9d	10d

Screen 3

11	12	13	14	15
11a	12a	13a	14a	15a
11b	12b	13b	14b	15b
11c	12c	13c	14c	15c
11d	12d	13d	14d	15d

Screen 4

16	17	18	19	20
16a	17a	18a	19a	20a
16b	17b	18b	19b	20b
16c	17c	18c	19c	20c
16d	17d	18d	19d	20d

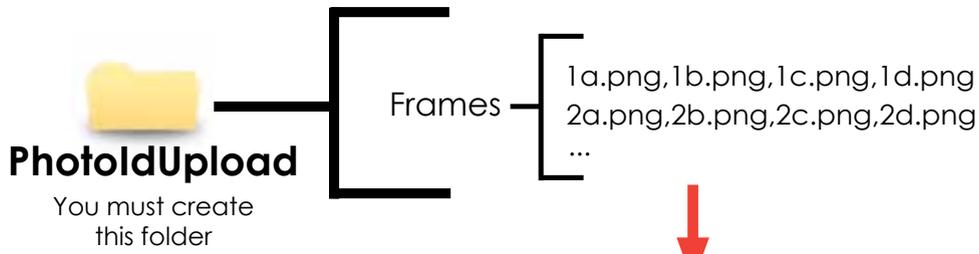


Screen 1



4x6"

SAMPLE
Screen 1 (group 1)

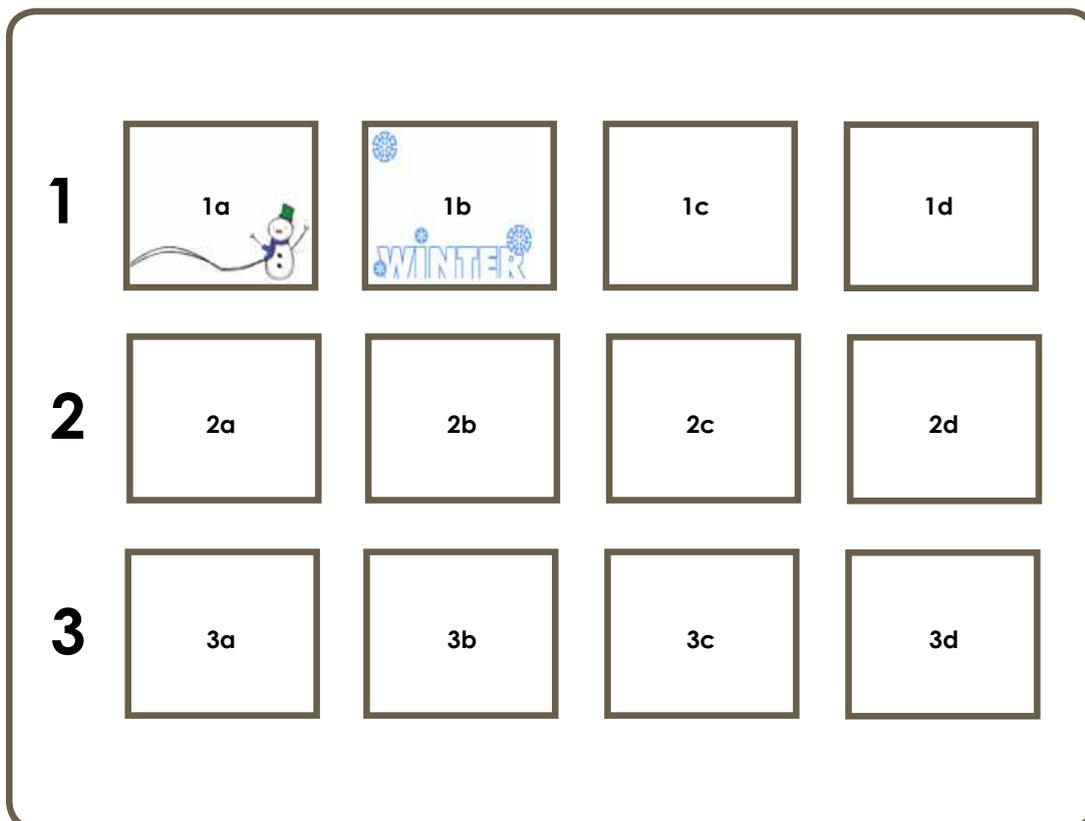


Screen 2

4	4a	4b	4c	4d
5	5a	5b	5c	5d
6	6a	6b	6c	6d

Screen 3

7	7a	7b	7c	7d
8	8a	8b	8c	8d
9	9a	9b	9c	9d


Screen 4

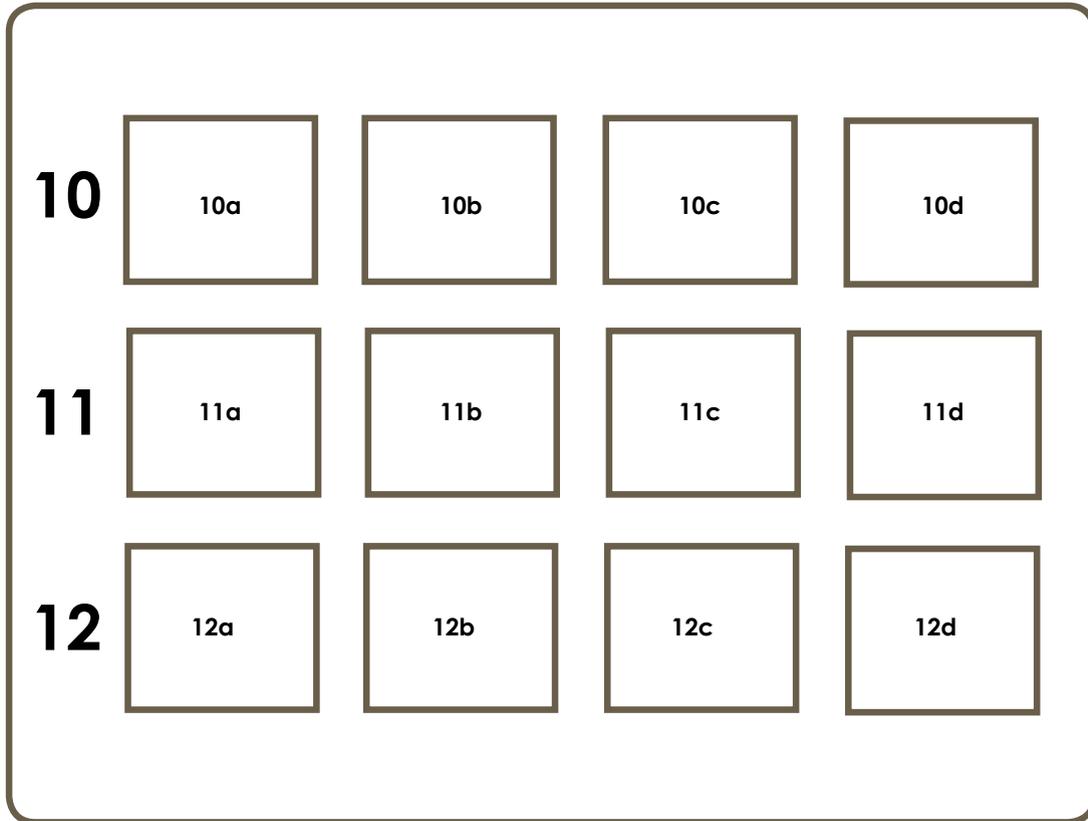


UPLOADING CUSTOM USB STICK TO PHOTOBOOTH (See section 9)
SETUP MENU (See section 11)

7.7 ADVERTISING PHOTOS

B FOLDER PhotoldEvents

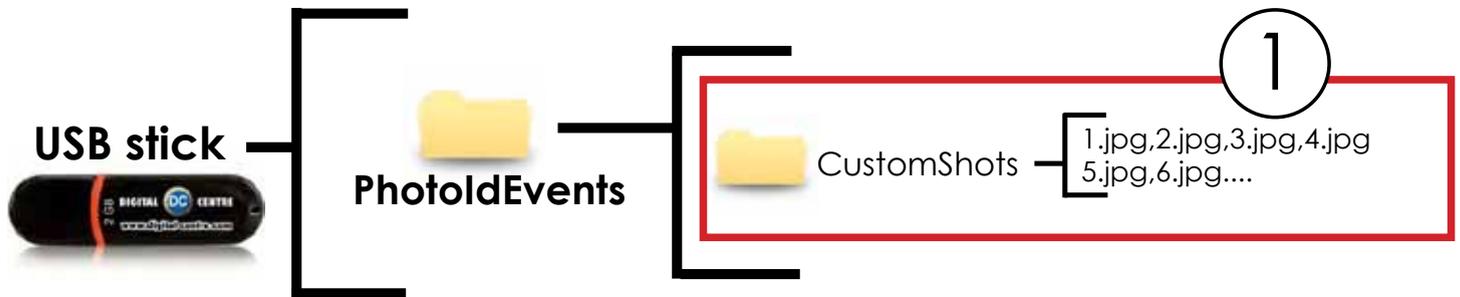

DIRECTIONS FOR UPLOADING CUSTOMSHOTS

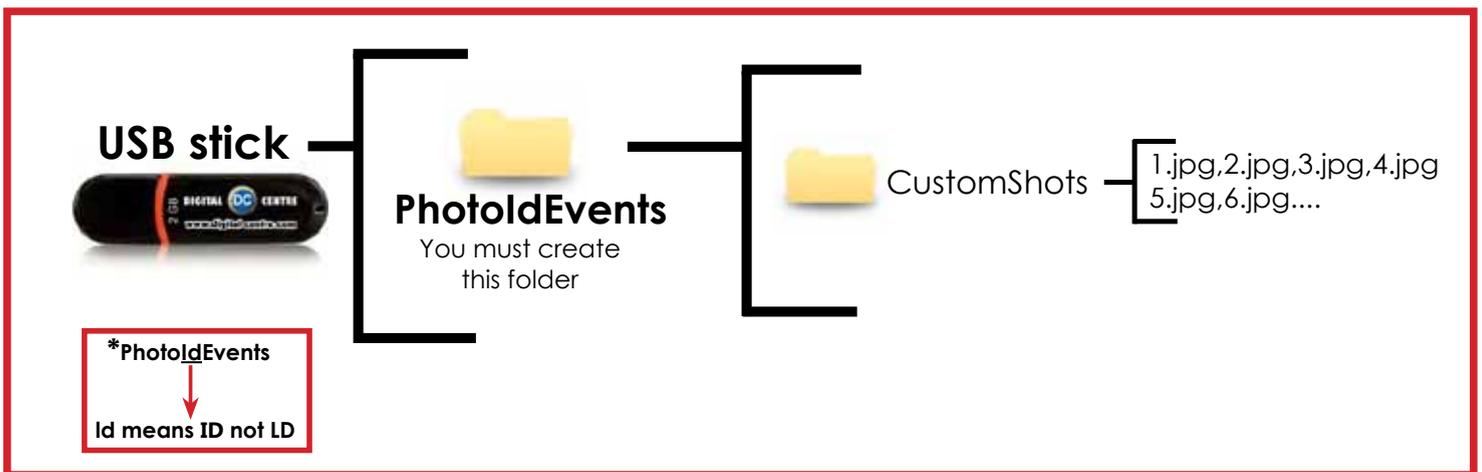

CUSTOM SHOTS are the images (made previous to the event) that we want to show on the screens during the event. An example could be for a wedding were the bride wants to show pictures from when the couple first met etc, or a company event, where they want to display brand names or products.

The CUSTOM SHOTS are shown Random during the Demonstration Mode.

Sample custom shots



1.jpg



2.jpg



Specifications:
 (1.jpg, 2.jpg, 3.jpg & 4.jpg)
 Each one with following characteristics:

- Name:** 1
- Size:** width: 1280 pixels
height: 960 pixels
- Resolution:** 72dpi
- Format:** JPG
- Color mode:** RGB

- You can put as many pictures as you want.
- The names of the images have to be: 1.jpg,2.jpg,3.jpg,4.jpg,5.jpg, 6.jpg,7.jpg...

UPLOADING (See section 9)
 SETUP MENU (See section 11)

8-CUSTOMIZED ONLINE

8.1 MYPHOTOCODE.COM



· **MYPHOTOCODE.COM**

Digital Centre offers your own cloud space where you can create and manage your events online. Through myphotocode.com can create, edit, and customize your event and customize your PhotoBooth.

· **HOW TO REGISTER:**

Send us an e-mail myphotocode@dc-image.com with the code printed on the side of strips to assign you your PhotoBooth. If you have more than a PhotoBooth, take a picture with each of them and send the codes. We will send an email with your username and password.

· **HOW TO JOIN:**

Go to <http://www.myphotocode.com> and click the top right where it says Login Rental, Enter your username and password and click ENTER.

· **WHAT CAN I DO:**


From MyPhotoCode can create and customize your event with a USB Stick Event.

· **CUSTOMIZE YOUR PHOTOBOOTH WITH 1 USB STICK (SIMPLE MODE):** personalize the logo, frames, music, welcome, bye, text...

· **CUSTOMIZE YOUR PHOTOBOOTH WITH 1 USB STICK AND LINK YOUR EVENT TO YOUR MYPHOTOCODE SPACE (COMPLEX MODE):** customize the title, background, date, private pictures, available online...

8.2. MANAGE YOUR USB STICKS

6x16"

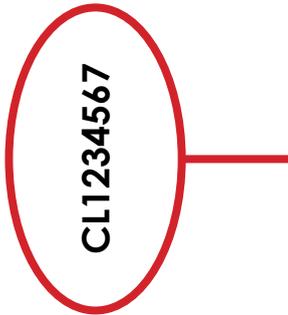

1. You need a username and password to access to MyPhotoCode.
2. You need identify your Photo booth to get a username and password.
3. To know the identification number, please, take a photo and send us the number that appears in the right side of the strip, to the following address:

myphotocode@dc-image.com

Then, we will send you the username and password, use them to login.

2 STRIPS



4x6"




8.2.1 HOW TO LOGIN


1- Goes to <http://myphotocode.com> and click on RENTAL LOGIN, it is up in the right side




2- Please, enter your username and password and click ENTER

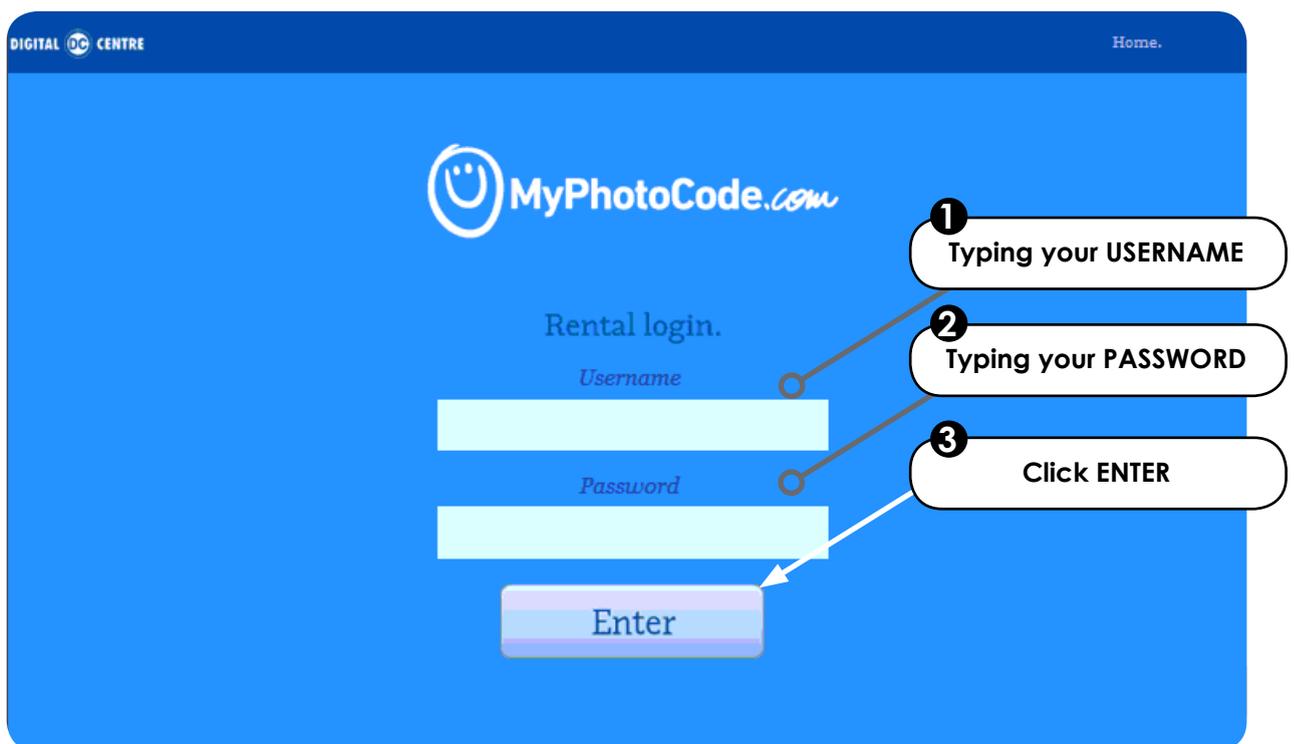

3- Here you can prepare the USB to customize our Photo Booth . Click on “USB Set Ups”

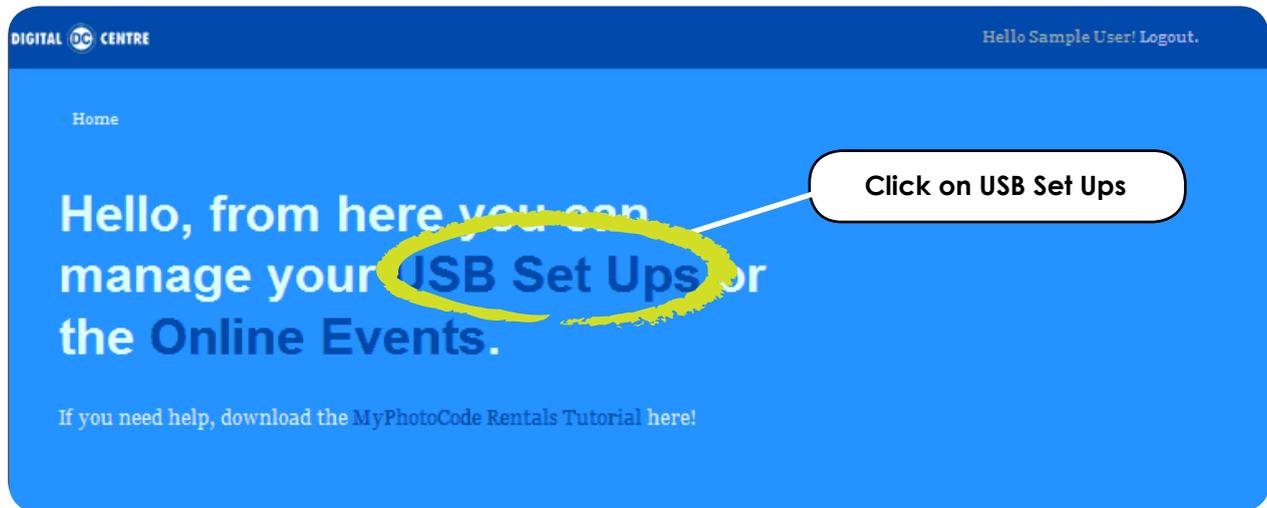


4- Click on “Add New”

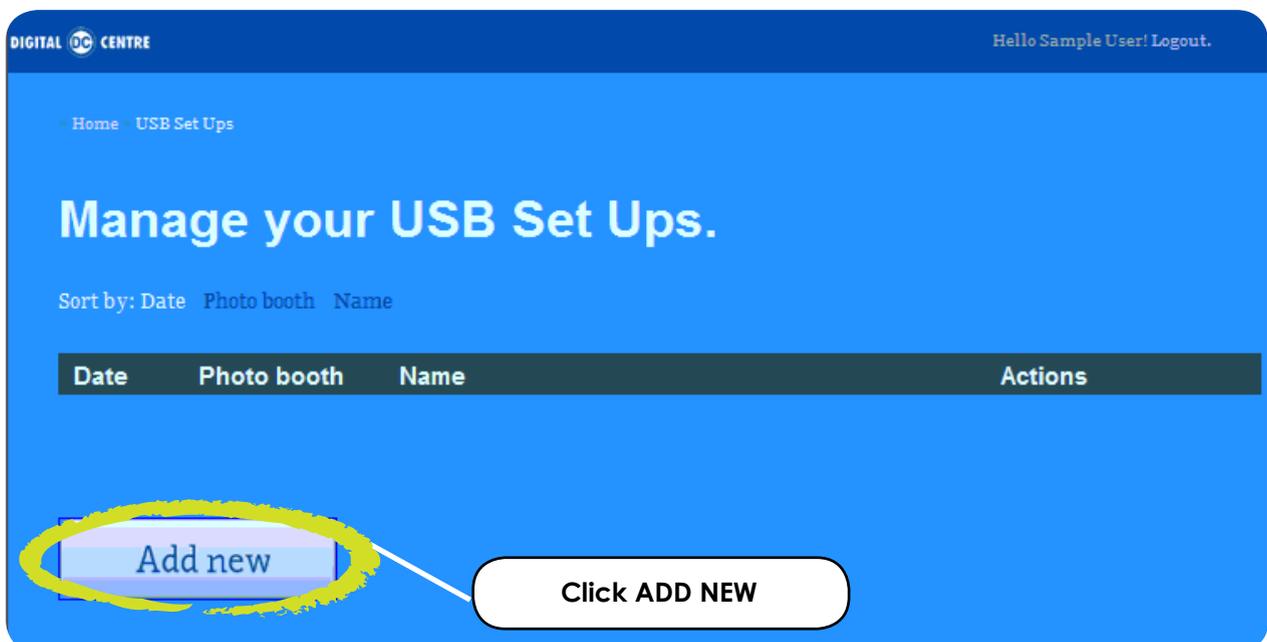

8.2.2 CUSTOMIZE YOUR PHOTOBOOTH WITH A USB STICK

Create your USB Stick:

- Name: Choose a name for your USB, for example “Night Party” or “Luca’s wedding”.
- Photo Booth: Open the list and selected your photo booth, click the arrow to see all the options.
- Online event: You can link the USB with a created online event or created another! (See section “ 8.3 create, manage and customize your events with 1 usb stick and link it to your myphotocode space ”) Save it!

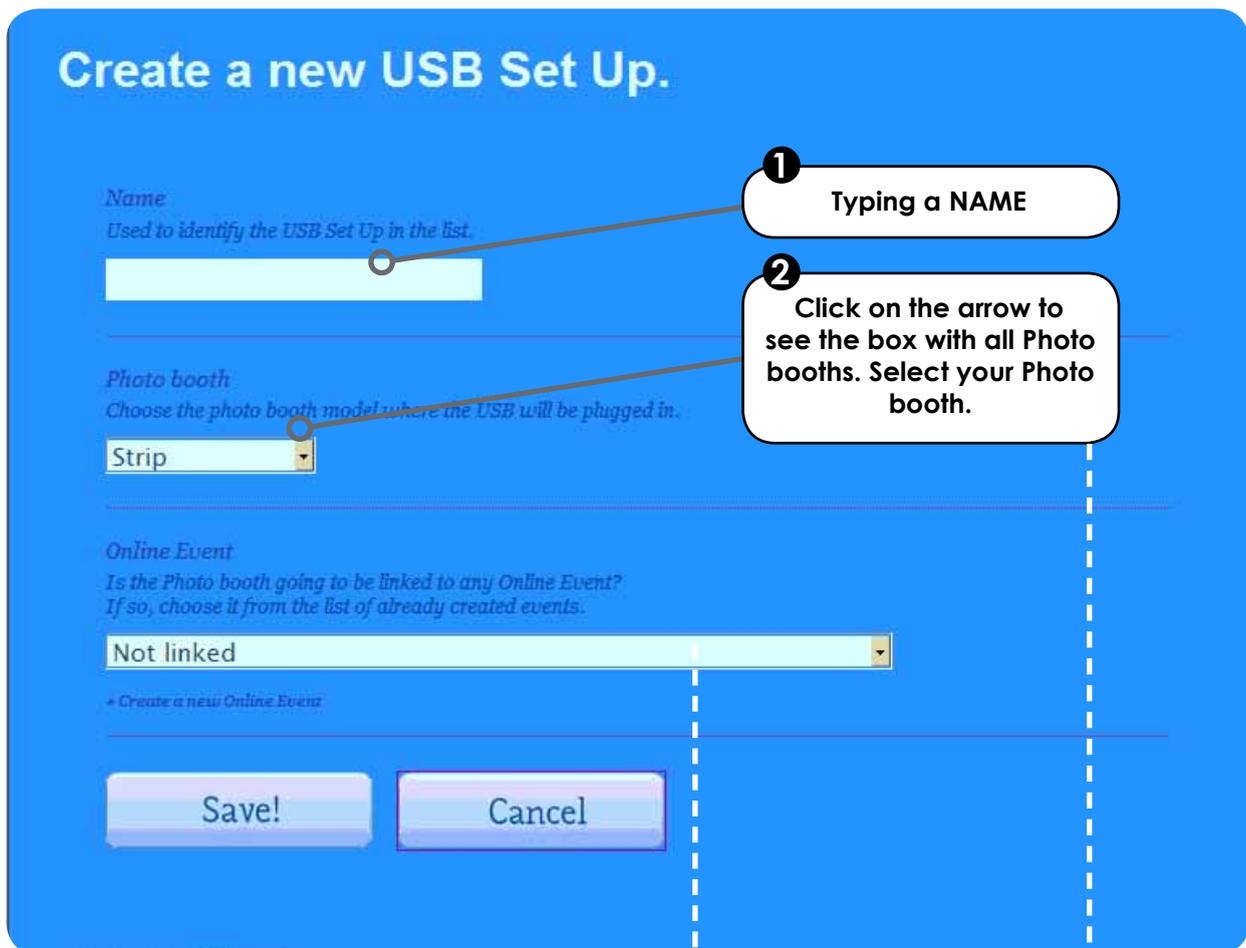

Create a new USB Set Up.

Name
Used to identify the USB Set Up in the list.


Photo booth
Choose the photo booth model where the USB will be plugged in.

Online Event
Is the Photo booth going to be linked to any Online Event?
If so, choose it from the list of already created events.

[» Create a new Online Event](#)

1 Typing a NAME

2 Click on the arrow to see the box with all Photo booths. Select your Photo booth.

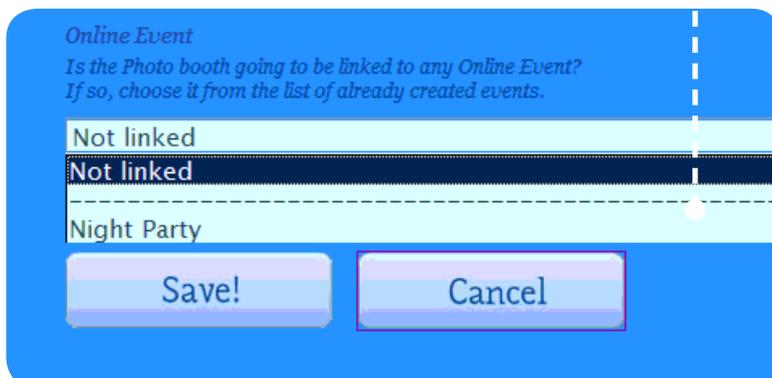

Online Event
Is the Photo booth going to be linked to any Online Event?
If so, choose it from the list of already created events.

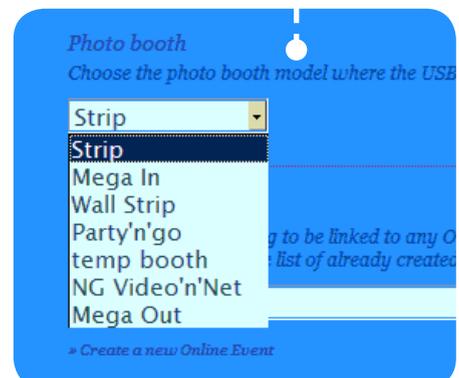


Photo booth
Choose the photo booth model where the USB

Mega In

Wall Strip

Party'n'go

temp booth

NG Video'n'Net

Mega Out

[» Create a new Online Event](#)

When the USB has been created we can start to customize.
Click on "Start editing its content".




8.2.3 CREATE YOUR CUSTOMS:

You can customize the next parameters:

- 8.2.3.1 Logo
- 8.2.3.2 Text on a side of each print
- 8.2.3.3 Background music
- 8.2.3.4 Frames
- 8.2.3.5 Welcome Screen
- 8.2.3.6 Bye Screen
- 8.2.3.7 Top Screen Banner (wedding version) *Only STRIP Photo booth
- 8.2.3.8 Custom images on demo screen

8.2.3.1 LOGO

Image extension.jpg to 300 dpi.

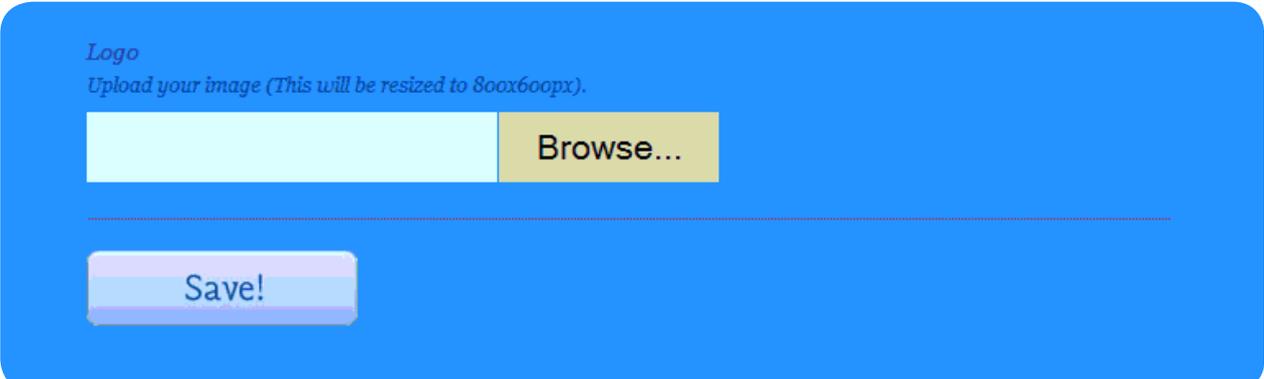A screenshot of a web application interface for customizing a logo. The background is blue. At the top, it says "Logo" in italics. Below that, it says "Upload your image (This will be resized to 800x600px)." in italics. There is a light blue rectangular input field. To the right of the input field is a yellow button with the text "Browse...". Below the input field and button, there is a horizontal dashed line. At the bottom, there is a light blue button with the text "Save!".

8.2.3.2 TEXT

This is the text that will appear in every strip. You can write all that you want. Look down here and see example, the text appears in the right side along the strip.

Text
 This is the text line which will be printed on a side of each print.

Save!

Example:

Text
 This is the text line which will be printed on a side of each print.


Digital-centre.com | QR-Photo | Share Secure



8.2.3.3 BACKGROUND MUSIC

You can upload music . Maximum 5 MB. Must be mp3 format.


Look down here and see example, the text appears in the right side along the strip.

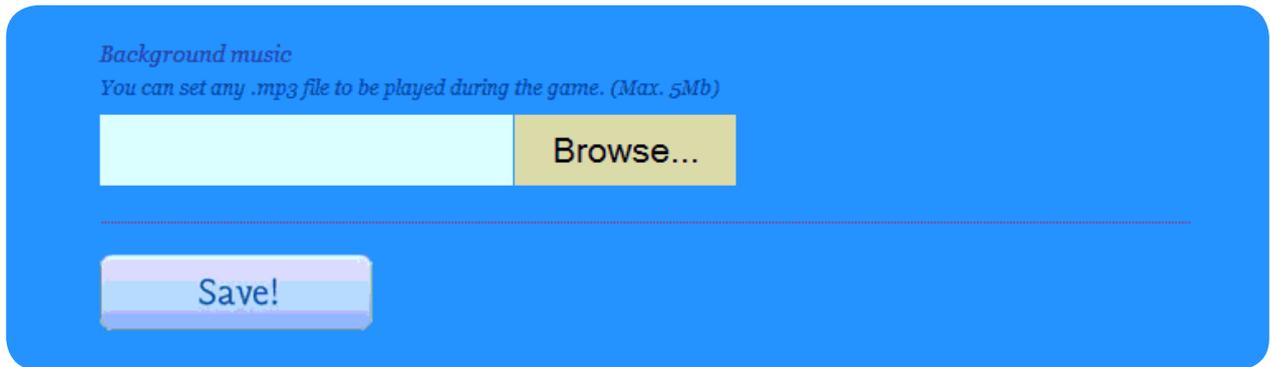

8.2.3.4 FRAMES

You have three options


- None
- Upload custom
- Select premade frames from list

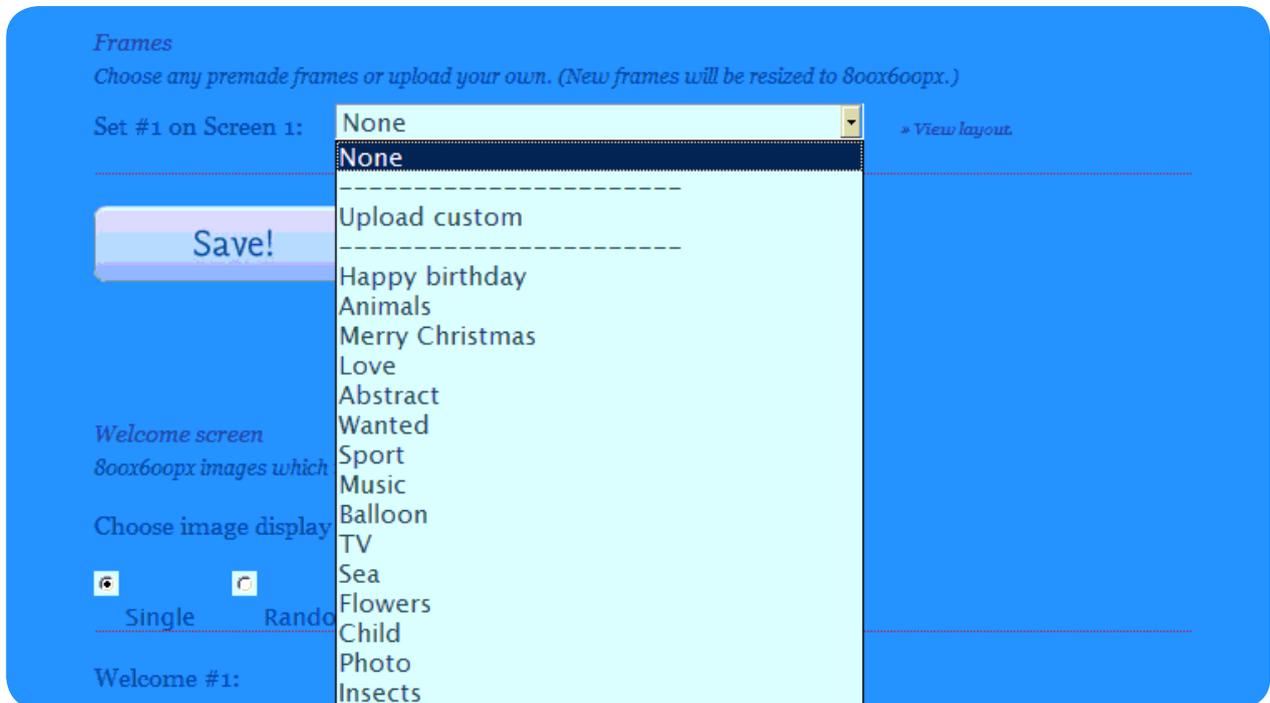


- **NONE:** we don't upload any new frame



- **UPLOAD CUSTOM:** select 4 frames from our computer. The frames must be in .png format.

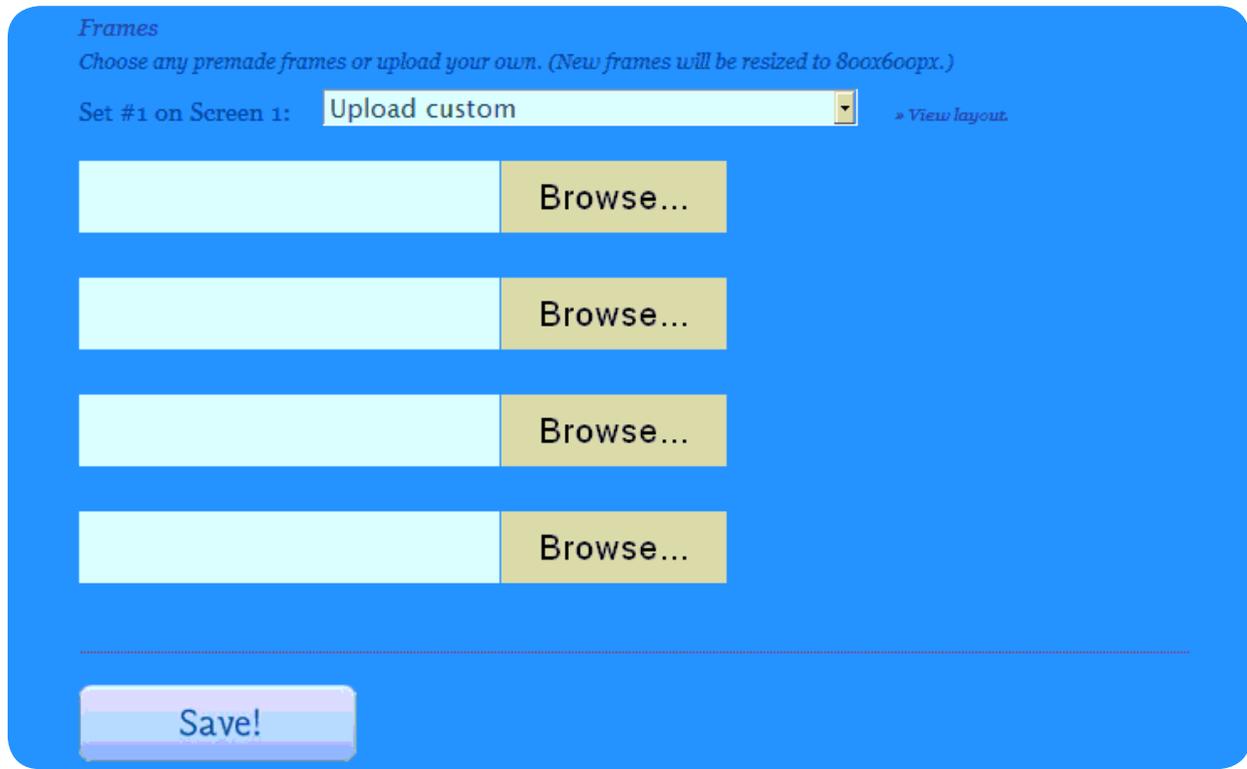

- **SELECT PREMADE FRAMES FROM LIST:** we can choose frame from the list of myphotocode. You can see this frames before choose. You can see this frames before choose.

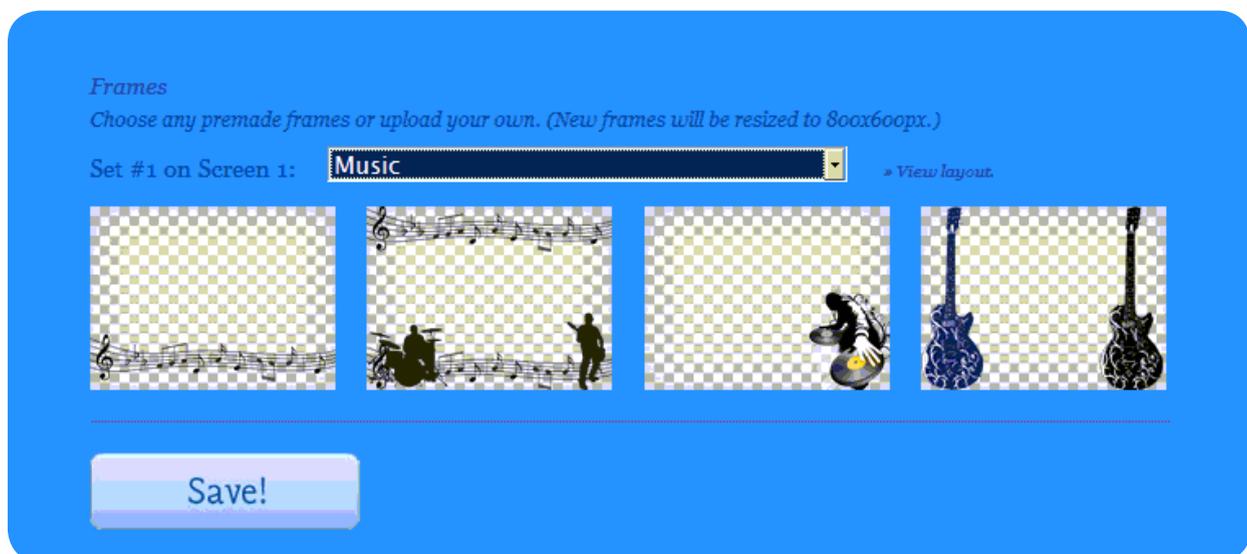

Select one, and press SAVE.

8.2.3.5 WELCOME SCREEN

There are 2 options:

- Single
- Random

We can upload “Welcome” Images through our computer.
Remember that Images must be in .jpg to 72 dpi.

800x600px images which will be displayed when the game starts.

Choose image display type.

Single Random

Welcome #1:

<input type="text"/>	Browse...

8.2.3.6 BYE SCREEN

We have 2 options again:

- Single
- Random

We can upload “GoodBye” Images through our computer.
Remember that Images must be in jpg to 72 dpi

Bye screen
800x600px images which will be displayed when the game finishes.

Choose image display type.

Single
 Random

Bye #1:

<input type="text"/>	Browse...

Save!

8.2.3.7 TOP SCREEN BANNER
(WEDDING VERSION) *Only STRIP Photo booth

Top screen banner (Wedding version)
A 800x600px image which will be placed on the top screen.

<input type="text"/>	Browse...
----------------------	-----------

Save!

8.2.3.8 CUSTOM IMAGES ON DEMO SCREEN

Custom images on demo screen
800x600px images which will be randomly displayed on the demo.


Custom image #1:

<input type="text"/>	Browse...
----------------------	-----------

Save!

8.2.4 HOW TO SAVE YOUR CUSTOMIZES

Download the USB Set Up: when you finish customizing, save the changes.
Download the USB Set Up.

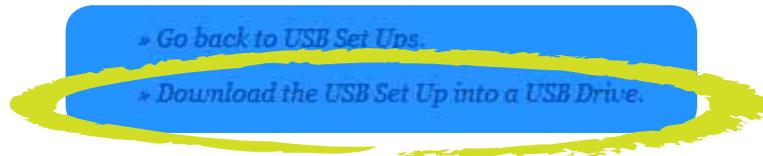

Click on "Download the USB Set Up into a USB Drive".
It will appear a new window asking what want you do?
Select Save and accept.

a- Save the document 'save-in-sub.zip" in the USB pen drive. Don't change the document name when you save it.



b- This is an compacted document, that you must decompress in the USB pend drive.



c- When you finish the decompress, you'll have 2 folders called "PhotoldUpload" and "PhotoldEvents".



d- Inside the USB you only must have these two folders: PhotoldUpload i PhotoldEvents.

e- When we have our USB with these folders, connect the USB to the Photo Booth.

IMPORTANT! : Enter in the configuration menu and go out to update the new changes and customizations.

8.2.4.1 UNZIP ZIP FILE


· To extract a single file or folder, double-click the compressed folder to open it. To extract the entire contents of the compressed folder, right-click the folder, click Extract All, and then follow the instructions

LOAD FROM USB (See section 11.3.4)

8.3 CREATE, MANAGE AND CUSTOMIZE YOUR EVENTS WITH A USB STICK AND LINK IT TO YOUR MYPHOTOCODE SPACE

title, background, date, private pictures, available online...


Click on Online Events Option.

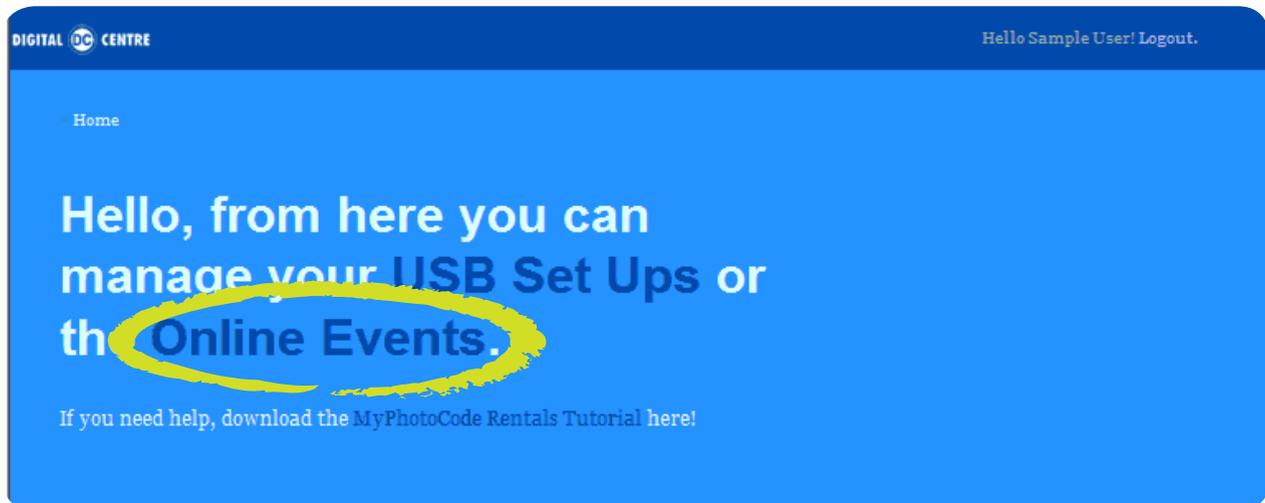

It will open a new window with a list about our events online. This list it's empty because there isn't any event created.

8.3.1 HOW TO CREATE AN ONLINE EVENT

Click on "Add New"

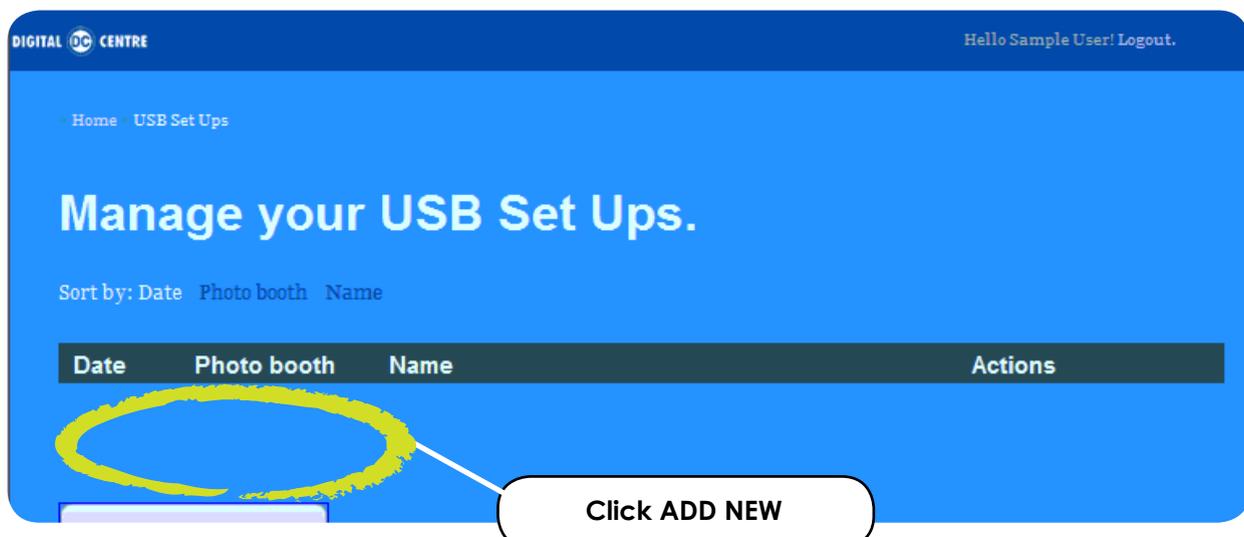

8.3.2 MANAGE THE ONLINE EVENTS

Edit the options:

- **Event title:** Try a name to the event, for example: Night Party
- **Start Date:** Indicate when it starts and how long is the event
- **Background:** You can put on a different background to show in the event online, when some user take's a picture and want to recover it, they only have to enter the code in the website Myphthocode. Instead the background of the web, they could see our personal background..
- **Private pictures:**
 - If the event is a private event, when the users insert their code, they only will see their photos.
 - If the event isn't private, when the user introduces the code, could see all the pictures of the event.
- **Single day event:** Indicate if the event is for a single day
- **Available Online:** If the user choose YES, the picture will be seen on the website, otherwise, the pictures won't be seen online.

Create a new Online Event.

Event title

Start date

Background

Private pictures

 Yes No

Single day event

 Yes No

Available online

 Yes No

Select Background: we can choose one of the predefined backgrounds or upload another one. If we upload a background it must be in .jpg or .png to 72 dpi. This image will be repeated.

Create a new Online Event.

Event title

Start date

Background

None ▾

None

Upload custom

Pink

Christmas 2

Easter Bunnies


Summer Season

Stars


Available online

Yes No


In case of we upload our logo

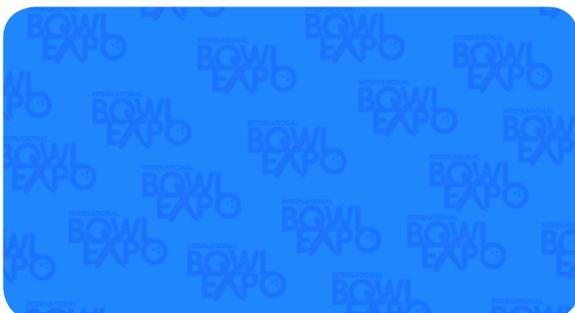

At the moment to see the pictures, the logo, will be seen like this:

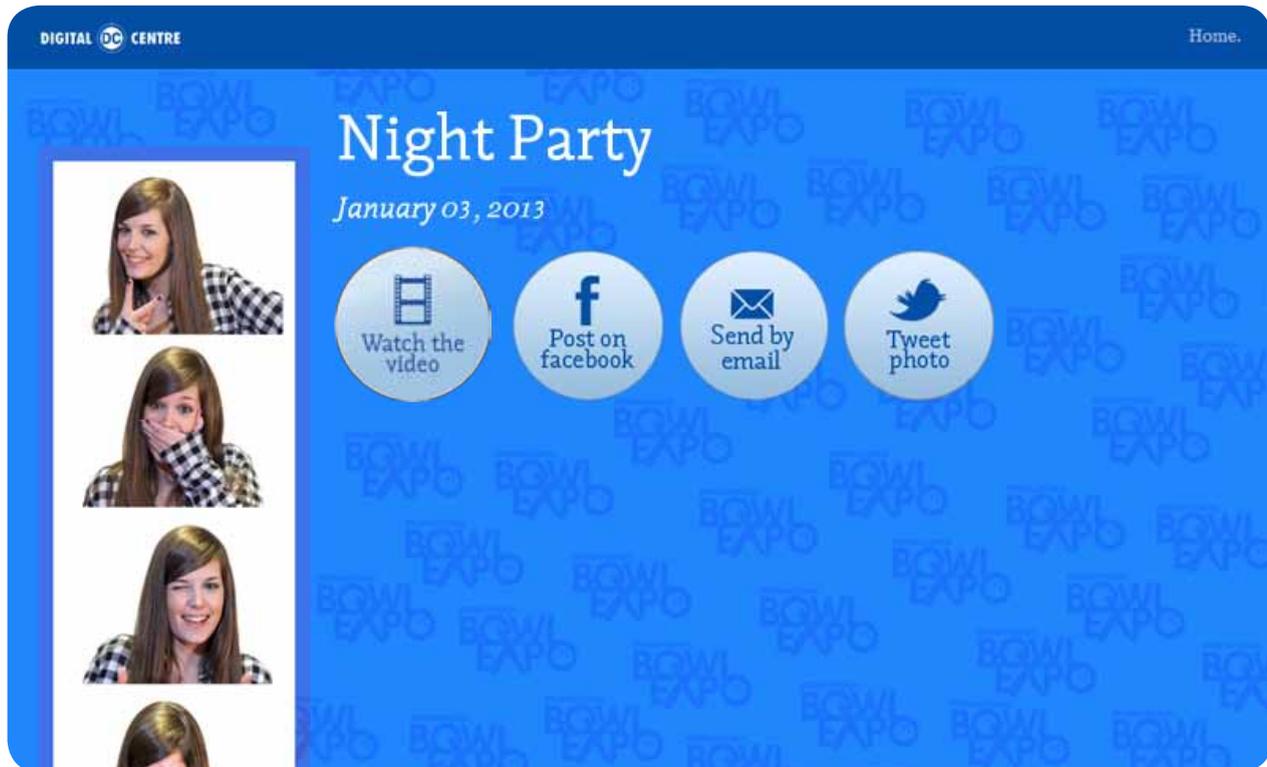


When we finish the configuration, click on SAVE.
We have already edited i created the online event!

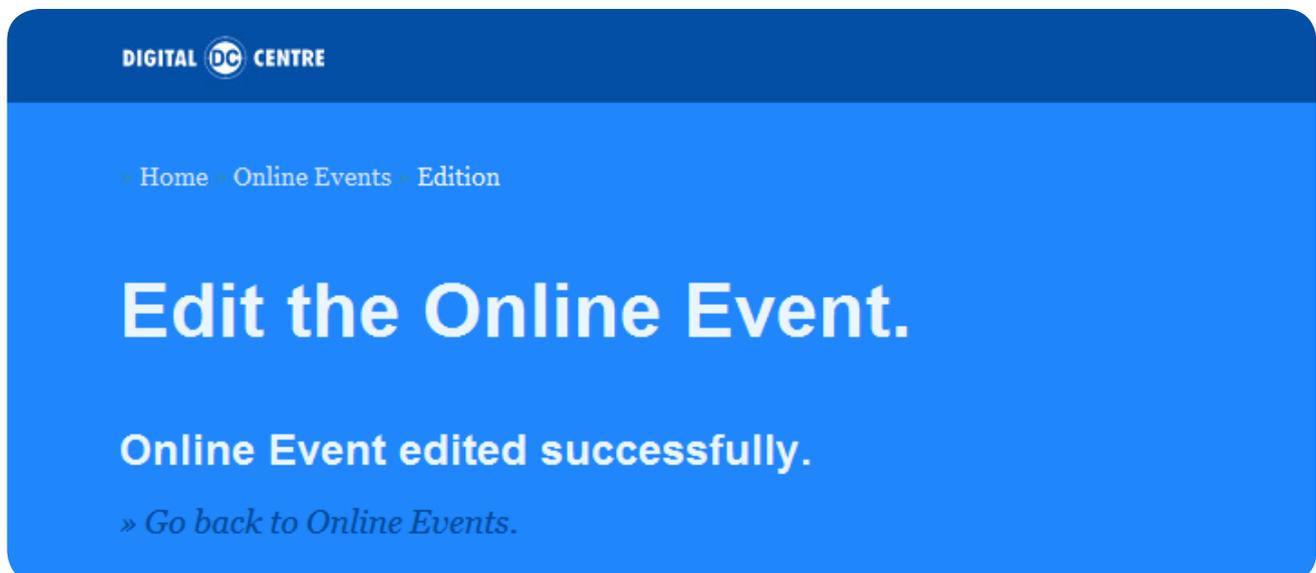

Select "Go back to Online Events

Return to outset where the list was empty, but now we can see our new event

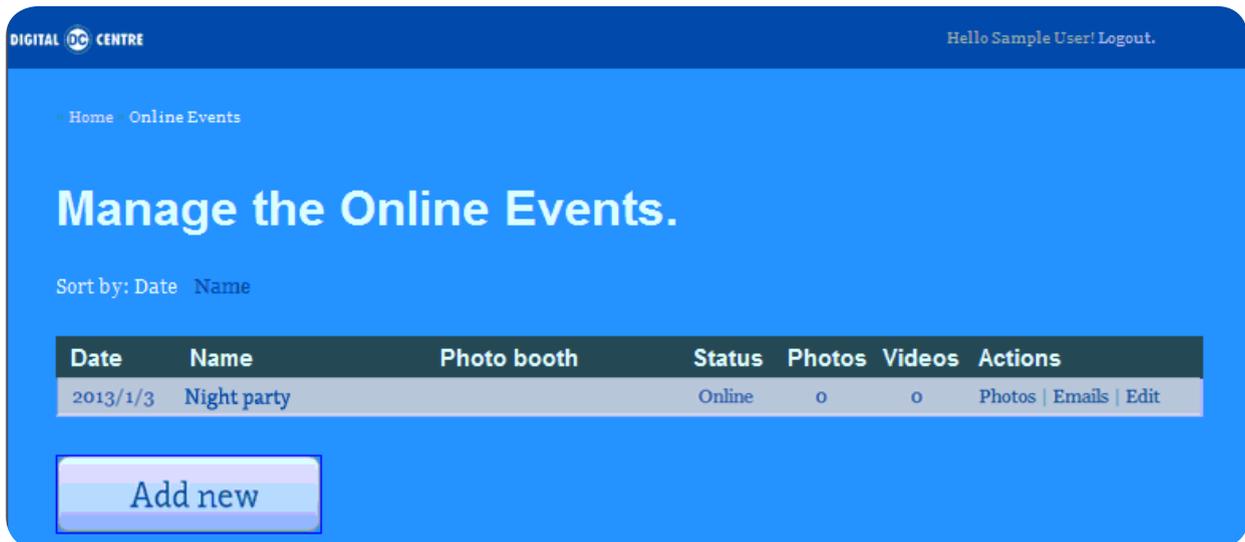


Date	Name	Photo booth	Status	Photos	Videos	Actions
2013/1/3	Night party		Online	0	0	Photos Emails Edit

Here you can see all the information about the event that we just created:

- Date : The day of the appointment
- Name: the name that we gave to the event
- Photo booth: the photo booth model that will be used in the event. This section will be empty until the moment we take the first photo, then, the model will appear automatically.
- Status: indicate if online option is activated
- Photos: how many pictures has been taken
- Video: how many videos has been recorded
- Actions:
 - 8.3.2.1 **Photos:** can see the pictures from all the users
 - 8.3.2.2 **Emails:** can see the mail list where the users send the photos
 - 8.3.2.3 **Edit:** you can edit the event again

But the options are different when the user records a video:

- Watch the video
- Post on Facebook
- Send by email
- Tweet photo

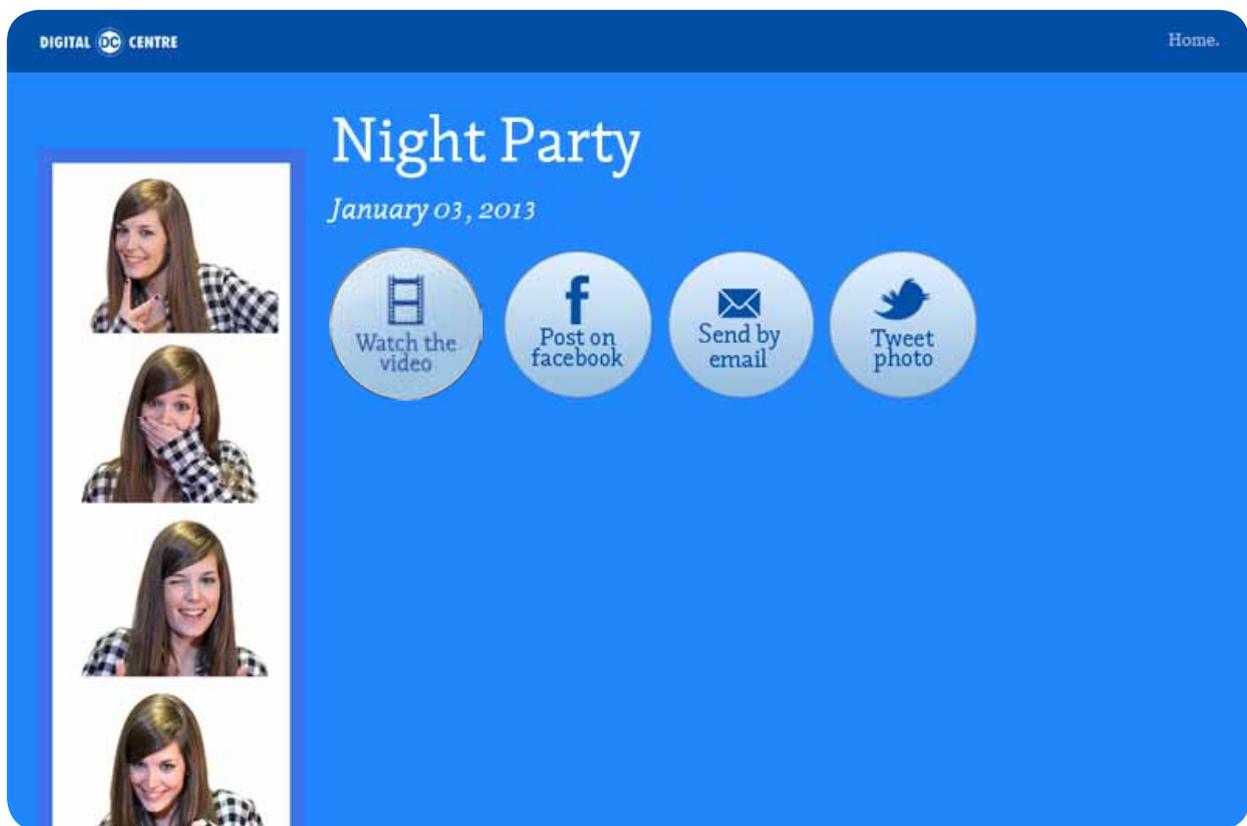

8.3.2.2 EMAILS

Select the Button "ACTIONS > EMAIL" you will see an address list, here you could see the sending historial, every time that users share their photos by e-mail, the e-mail addresses will be registered in this list.

Night Party

No emails were entered in this event.

8.3.2.3 EDIT

See section "3.1 How to create an online event"

8.4. WARNING



WARNING!


Remember, to get the photos, by Myphotocode.com, the photobooth must be connected to internet.

If there isn't connection to internet, you can save the photos in a empty USB memory in the computer.

When the USB will be detect by the computer, will be create automatically a New Folder called Photoldownload.


Inside the Photoldownload folder you will find 2 folders more, the first one called "Myphotocode" with your images and videos inside (just in case that you have recorded a video) and the second one called "Shots" with the individual shots.

Once the event finish, you can take off the USB memory from de computer and use it in any other computer to see your images or videos.

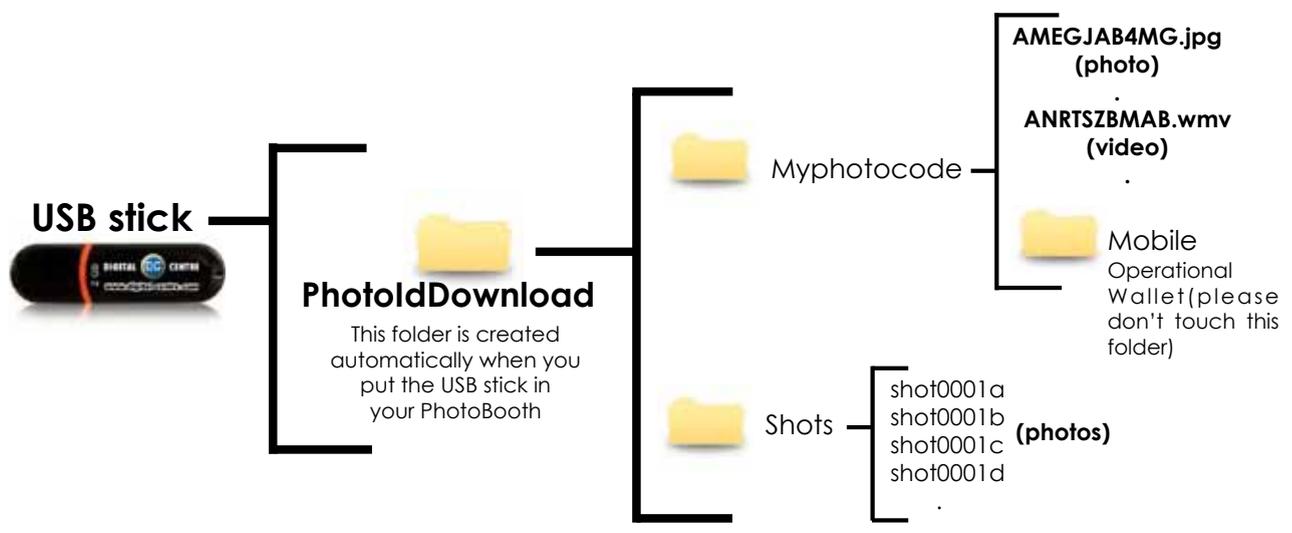

If the logo is activated, you will have 3 shoots for each print, with the loaded logo printing in the fourth frame.

9-UPLOADING CUSTOM USB STICK TO PHOTOBOOTH

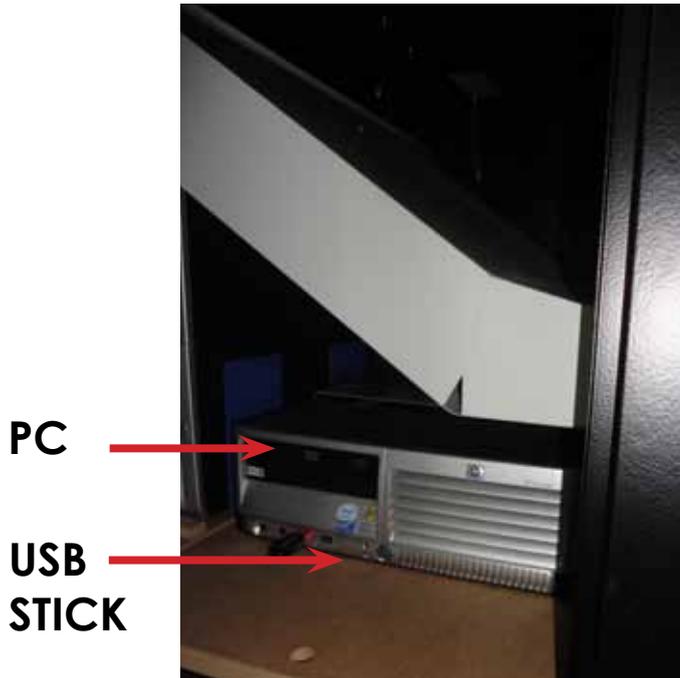

1-Switch ON the Photo booth


2-Open the Photo slot door*

3-Insert the USB Stick to the PC (HP C2D) (the usb connection is on the left side of the PC)

4-Open the back door of your photobooth.

5-Press the yellow button from the Service Control Panel, to access the Setup Menu.

6-Go to Setup customize and select LOAD

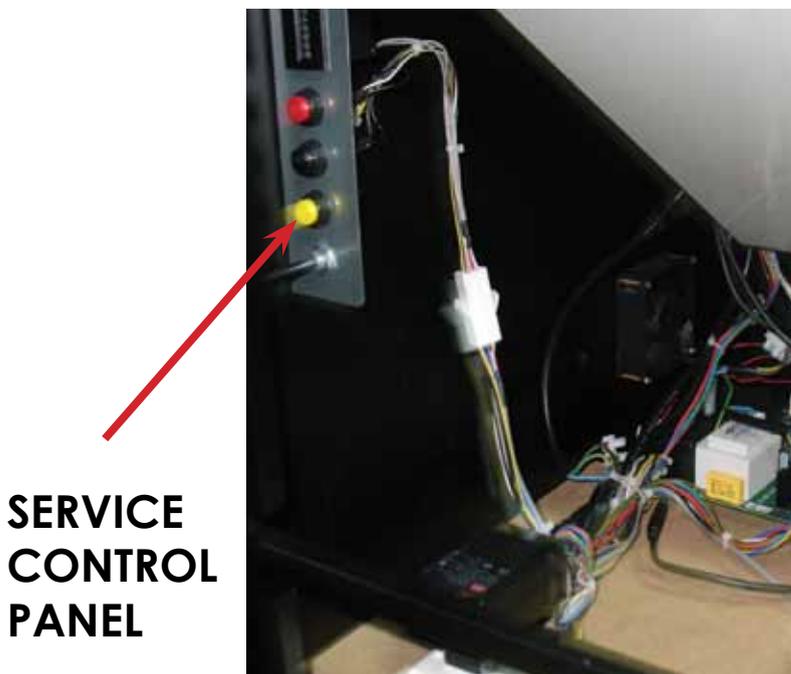


* You will need 1314 keys (included on your photobooth)

10-DOWNLOADING

C FOLDER PhotoDownload

This folder is created automatically

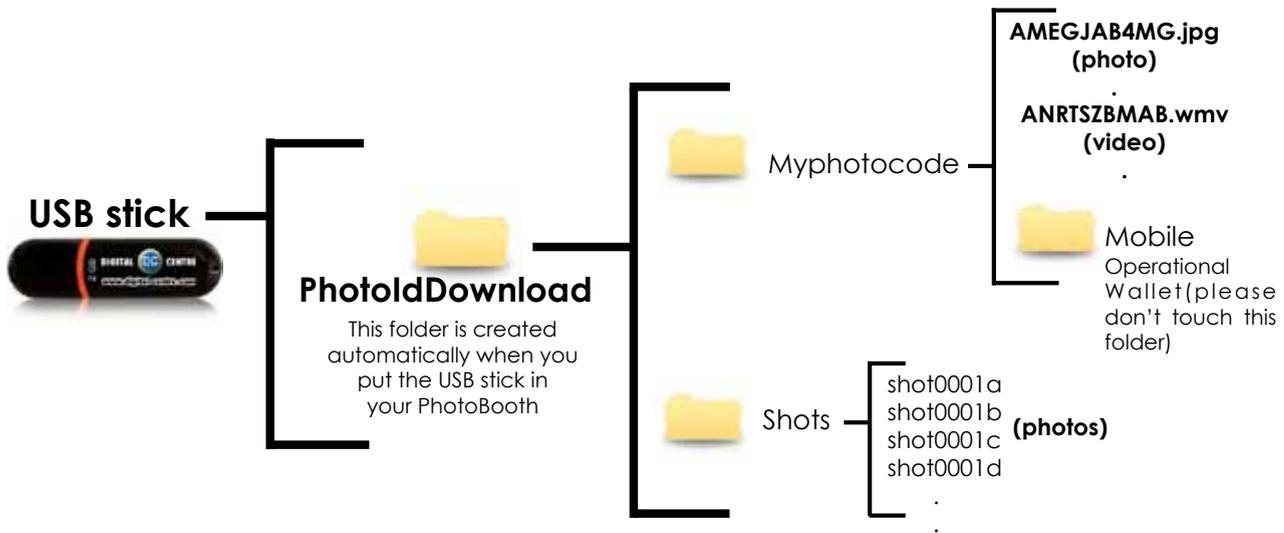

If the logo is activated, you will have 3 shoots for each print, with the loaded logo printing in the fourth frame.

11-SETUP MENU

The setup menu is very useful for the owner of the Photo Booth. You can configure the Photo Booth depending on what kind of service you want to offer to your clients. You can control the timer, check the prices, adjust the camera settings or consult the accounting functions.

To go to the setup menu while the Photo Booth is in Demo Mode, press the yellow button (Menu) from the Service Control panel inside the Photo Booth.



1. Volume Control lever
2. Menu (Yellow Button): It enters setup Menu and allows options such as pricing, logos, camera adjustments, and features to be changed.
3. Accounts (Black Button): It prints detailed vending report including number of prints available.
4. Credit (Red Button)
5. Coin Counter

· SETUP MENU SCREENSHOTS

PRODUCTS & PRICES	RENTALS	CUSTOMIZE	OPTIONS	CAMERA	EXIT
	AVAILABLE	3 STRIPS	PRICES MEDIA	6" X 8" PHOTO	
BLACK & WHITE	✓	3	5	3	
COLOR	✓	3	5	3	
HAIRCUTS	✓	3	1	1	
HATS	✓	3	1	1	
STREET ART	✓	3	5	3	
GET FRAMED	✓	3	5	3	
EXTRA COPIES	✓	1	2	1	
REPRINT QR	1				
STOCK LESS THAN 50			RUN OUT OF FILM		
CURRENCY				5	
COIN VALUE				1	

SETUP MENU CONFIGURATION

The configurable parameters are divided in 5 groups:

- Products & Prices
- Rentals
- Customize
- Options
- Camera

11.1 PRODUCTS & PRICES

You can set the prices of the different products with the arrows.

PRODUCTS & PRICES	RENTALS	CUSTOMIZE	OPTIONS	CAMERA	EXIT
	AVAILABLE	2 STRIPS	PRICES MEGA	4" X 6" PHOTO	
BLACK & WHITE	✓	3	5	3	
COLOR	✓	3	5	3	
HAIRCUTS	✓	3	1	1	
HATS	✓	3	1	1	
STREET ART	✓	3	5	3	
GET FRAMED	✓	3	5	3	
EXTRA COPIES	✓	1	2	1	
REPRINT QR	1				
STOCK LESS THAN 50			RUN OUT OF FILM		
CURRENCY				5	
COIN VALUE				1	

REPRINT:

Reprint is when the user scans the QR-Photo and wants to print more copies of a photo.

Here you can configure the price of Reprint.

SWITCH ON/OFF PRODUCT

You can enable/disable the products for each event.

YES ✓ / NO ✗

PRODUCTS & PRICES	RENTALS	CUSTOMIZE	OPTIONS	CAMERA	EXIT
	AVAILABLE	2 STRIPS	PRICES MEGA	4" X 6" PHOTO	
BLACK & WHITE	✗	3	5	3	
COLOR	✓	3	5	3	
HAIRCUTS	✗	3	1	1	
HATS	✓	3	1	1	
STREET ART	✗	3	5	3	
GET FRAMED	✓	3	5	3	
EXTRA COPIES	✓	1	2	1	
REPRINT QR	1				
STOCK LESS THAN 50			DISABLE MEGA FORMAT		
CURRENCY				5	
COIN VALUE				1	

STOCK LESS THAN 50:

Disable Mega format or change the film.

When there are 50 plays remaining, you can disable Mega format to continue playing 2 strip 4"x6" or change the film roll.



11.1.1 EXTRA COPIES

You can turn on the option of extra copies.

You can set the prices of the different products using the arrows.

You can turn on the option of extra copies. In case of not have this option in the setup menu, this screen will not appear in the game.

11.2 RENTALS

Modules: login ✓ / scan QR ✓

Game mode: Freeplay / Token / Timer / Coinop



Modules:


Use the arrows to configure the game on Freeplay, Token, Timer or Coinop mode.

If the kiosk doesn't have internet connection, the Login option not appears during the game.

If you deactivate the Scan QR option, this option not appears during the game.




COINOP

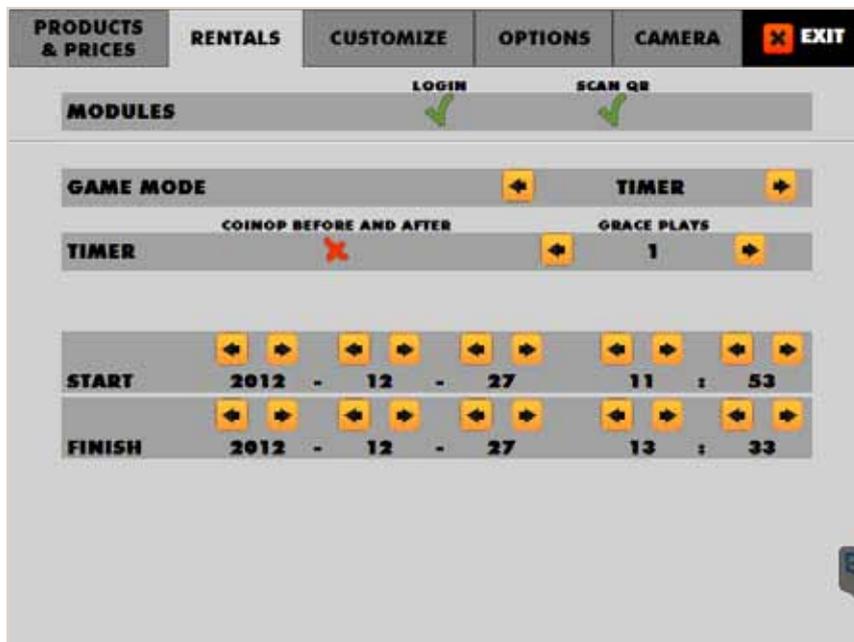

TIMER

You can enable/disable.

YES ✓ / NO ✗

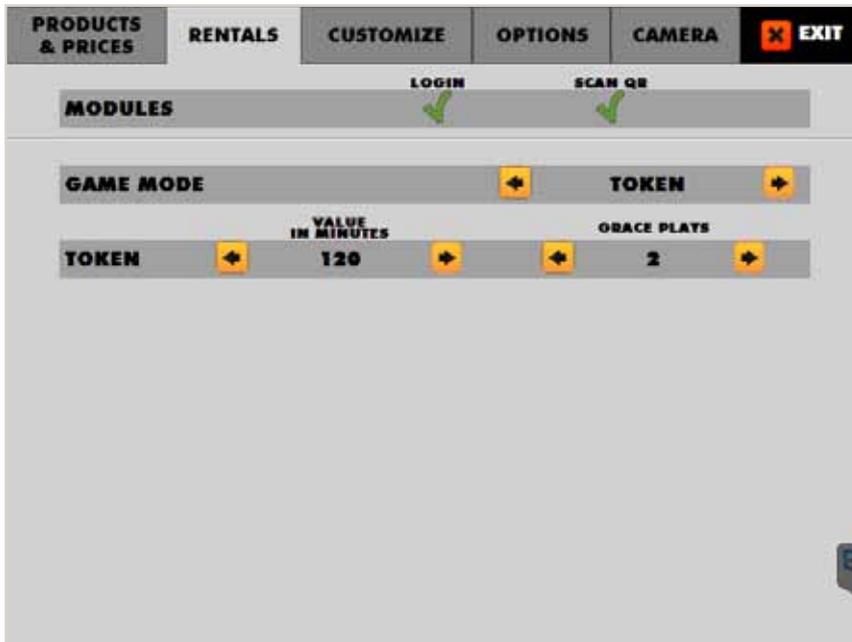

TOKEN

You can configure the duration of each token and the grace plays.

11.3 CUSTOMIZE

11.3.1 LOGO



1-The menu is displayed on the screen.


2-Select customize and activate ✓ the logo with the green check mark. (the logo will appear on the 3rd screen, if you can't see your logo it means that the upload is not correct.

3-Touch "X" EXIT. The Photobooth is ready to work.

***It's very important to follow the exact specifications to upload your logo.**

Not working? Please refer to section 13.1 for assistance

11.3.2 TEXT

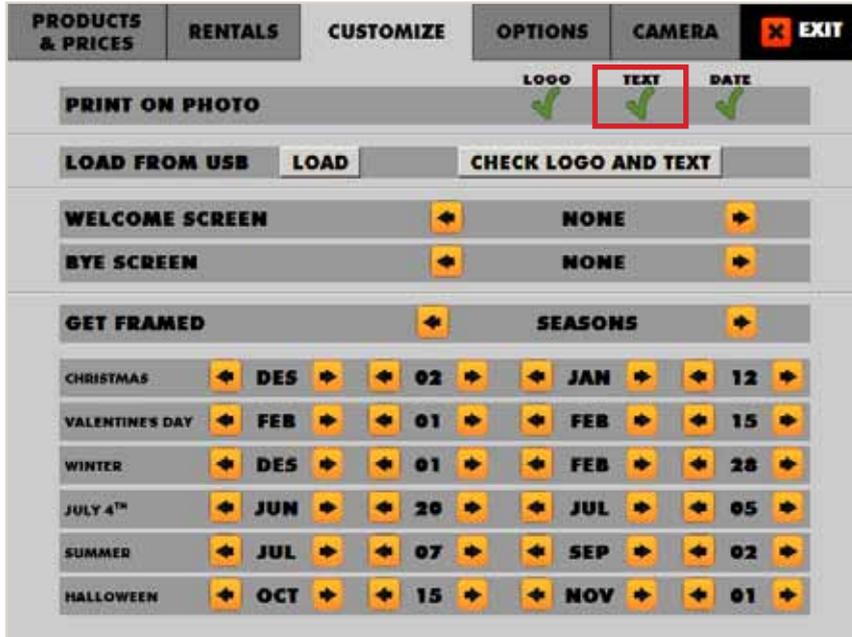


1-The menu is displayed on the screen

2-Select customize and activate the text the  green check mark.

3-Touch "X" EXIT. The Photobooth is ready to work

11.3.3 DATE

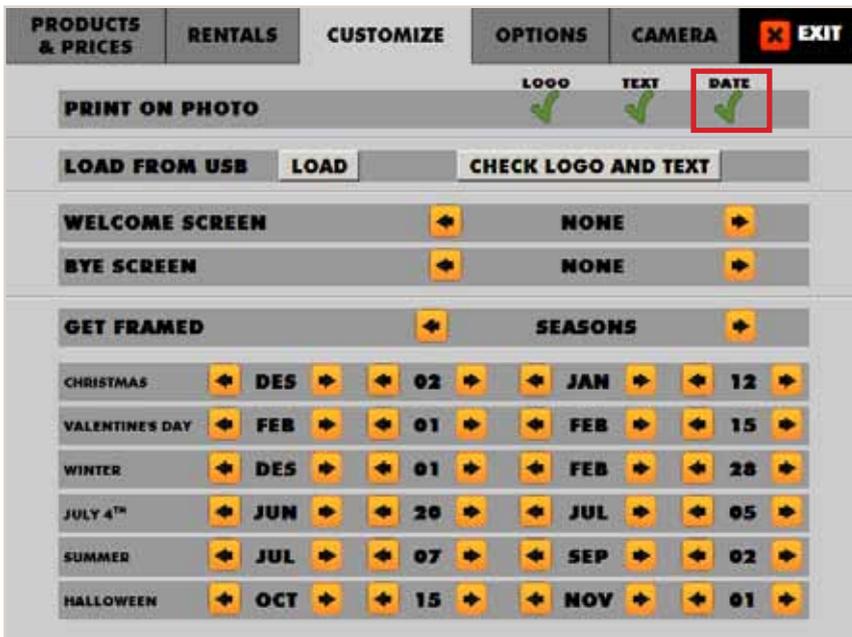


1-The menu is displayed on the screen

2-Select customize and activate the text the  green check mark.

3-Touch "X" EXIT. The Photobooth is ready to work

11.3.4 LOAD FROM USB

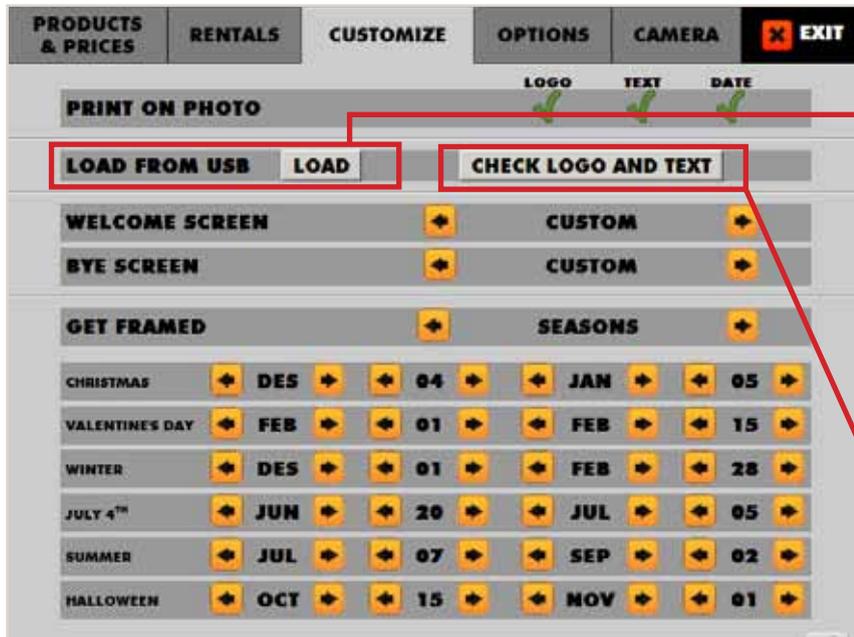

Load From USB:

Load: To upload your customizations: put the USB Stick in the pc, go to the Setup Menu Customize, and press the LOAD button. If your USB is not detected, press EXIT and enter again to the Setup.


While uploading, appears a screen that disappears only when the software has finished loading.



Load From USB:

Check logo and text: You can check the logo and text that will appear in the photos. This screen disappears after a few seconds.

11.3.5 WELCOME/BYE

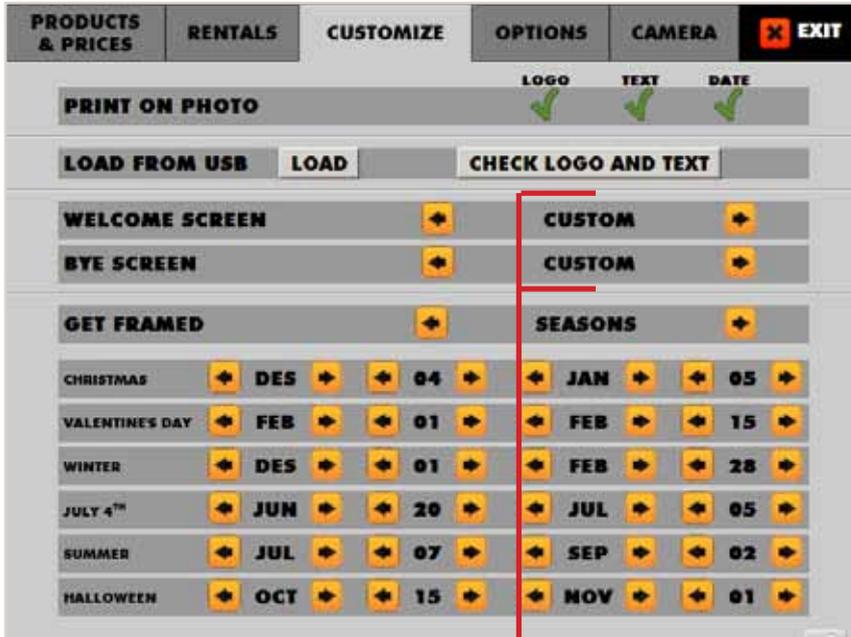


1-The menu is displayed on the screen

2-Enter to the customized menu and select Welcome/Bye screen and CUSTOM

3-Touch "X" EXIT. The Photobooth is ready to work

OTHER OPTIONS
RANDOM/NONE/STANDARD

11.3.6 FRAMES

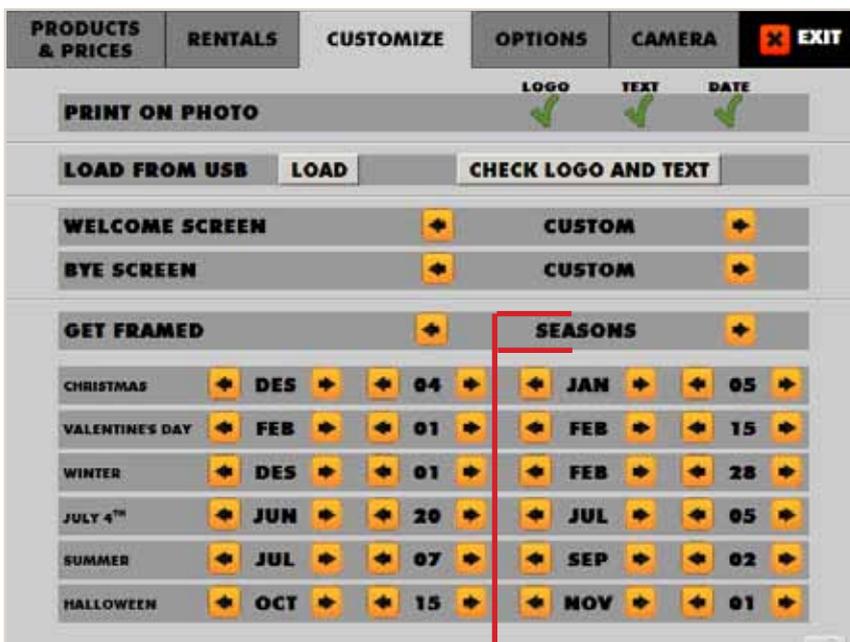

1-The menu is displayed on the screen

2-Enter to the customized menu and select GET FRAMES and CUSTOM

3-Touch "X" EXIT. The Photo booth is ready to work

OTHER OPTIONS
CUSTOM/STANDARD

11.4 OPTIONS

Defines the parameters for some available features:

Current Time: 2012-X-X (Day) XX:XX(Hour)

Music on intro: YES ✓ / NO ✗


Show events shots: Screen savers of photos already loaded by you. YES ✓ / NO ✗

Internet functionality:

WIFI: If you want to connect via wifi your Photobooth
(For more info see section 12.1.2 Wifi-Wireless Land)

OFF, QR, CODE ONLY, UPLOAD ONLY.


- OFF: Deactivate the QR Code and the Human Code
- QR: Activate the QR Code and Human Code
- CODE ONLY: Not appears the QR Code, only the Human Code.
- UPLOAD ONLY: The photos upload to the cloud but only are visibles for the rental through MyPhotoCode.com Rentals Login. The users can't view their photos via online at MyPhotoCode.com

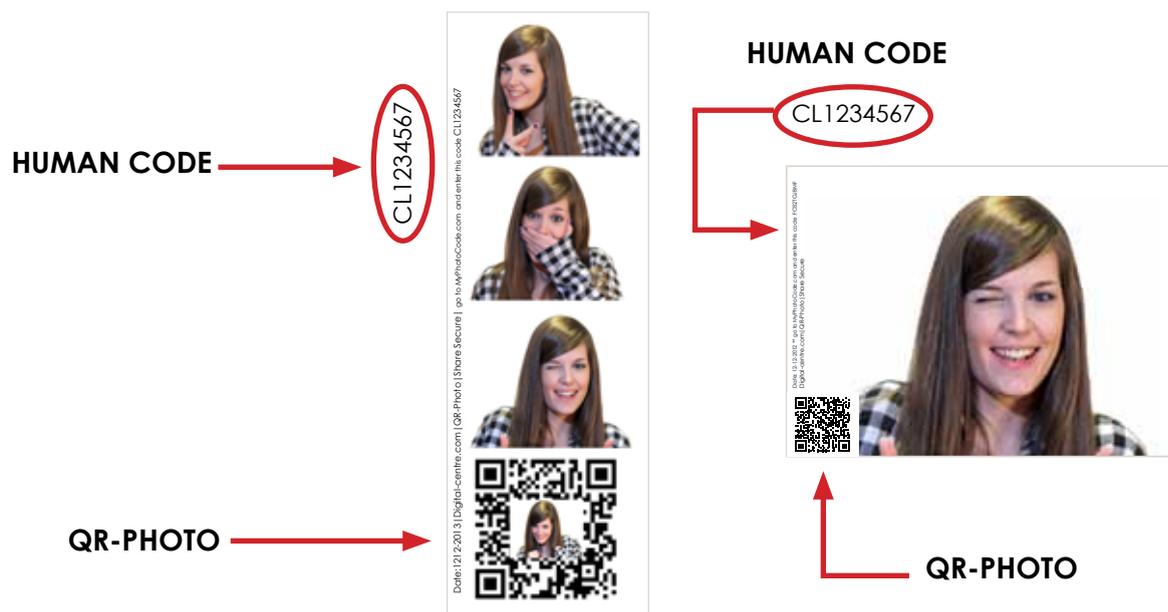


Internet Disclaimer: If this option is enabled, during the game, before taking the first picture, a screen appears that asks whether the photo, as well as being printed, also want to share in the cloud to recover at any time. (Print & Share button). In this screen the users can press "Terms of use" and read the info about share their photos to the cloud. The PhotoBooth is going to take pictures of people and minors. Private images are protected by the law. You as the Owner of the PhotoBooth have to know the laws of your area. YES ✓ / NO ✗

Video message: Select this option to record a video
(IMPORTANT: Internet must be activated). YES ✓ / NO ✗

Touch screen: Press the yellow button and after 7 seconds press again.
Automatically the menu is openend to calibrate the touch screen. (See section 15-FAQS)

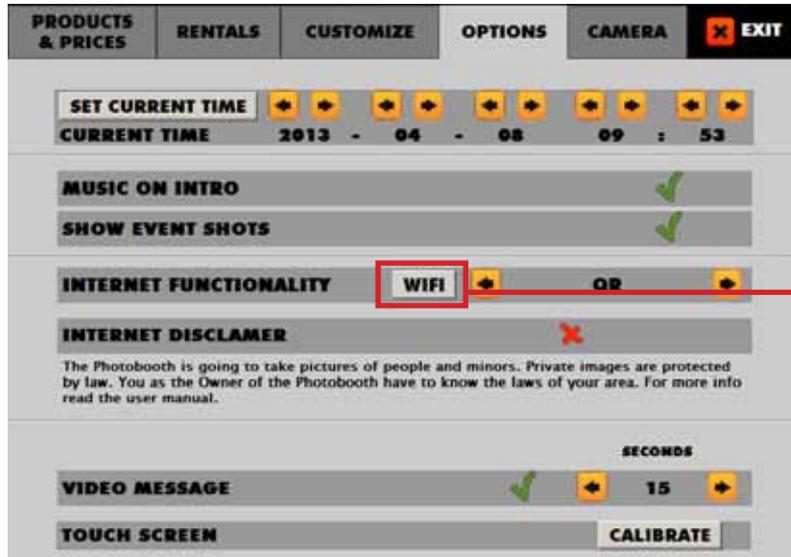

For more info see section 12.1.2 Wifi-Wireless Land

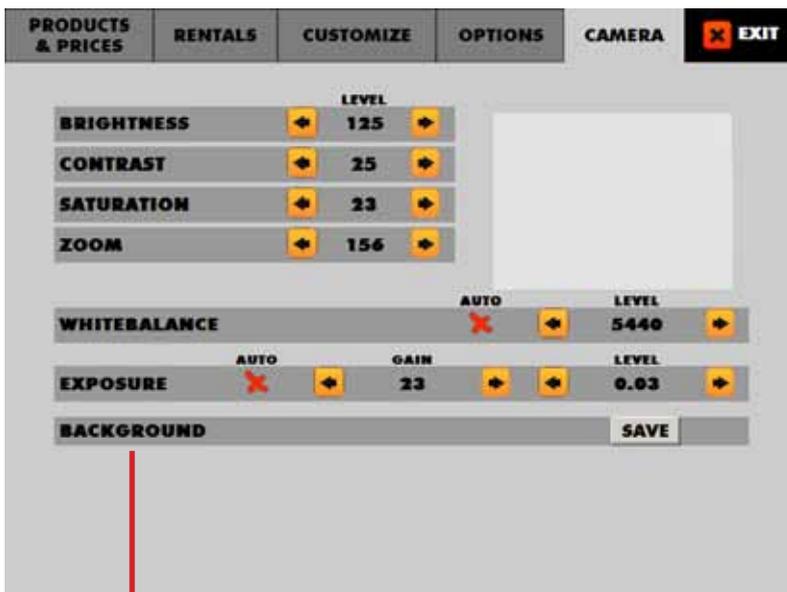

11.5 CAMERA

In the submenu CAMERA, the owner can set the camera zoom position and brightness.

Background:


This option is used to capture the depth of your Photobooth. This option is used for hats and hairstyles, the background is that appears with this options. If for any reason you had to change the white decal or your decal is old, click SAVE and you will have a snapshot of the background of your photobooth, thus the pictures of hats and hairstyles was not 2 different colors of background.

12-INTERNET


12.1 HOW TO CONNECT THE PHOTOBOOTH TO INTERNET

12.1.1 VIA LAND CABLE (Ethernet cable)


- 1-Switch on the PhotoBooth
- 2-Connect a keyboard and a mouse via USB to pc.
- 3-Press ALT+F4 (on the keyboard) to access to O.S (operative System)
- 4-Once the screen is black, use the mouse to go to bottom on the left of the screen, then will appear the START button, click START to view the desktop. (In Strip and NG, the Start is on top left)
- 5-Press START Settings Network Connections. If your Photobooth is disconnect to internet, you will view this image on Desktop:

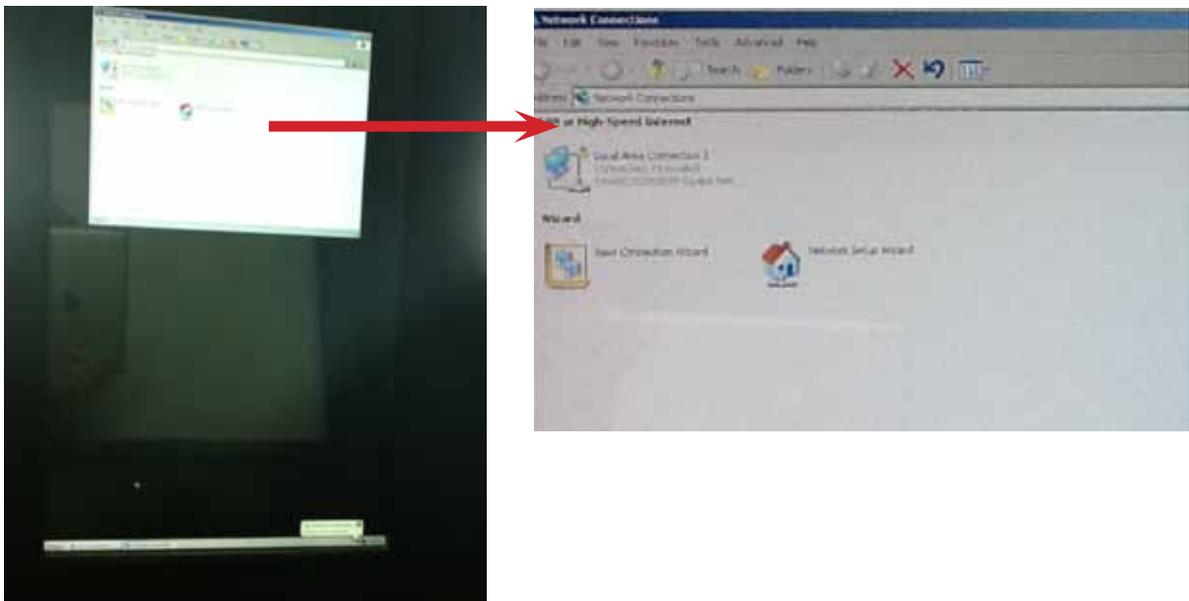

- 6-Connect the Ethernet cable from the pc to router or modem.
- 7-Wait few seconds, then you will view on the screen. Double click:

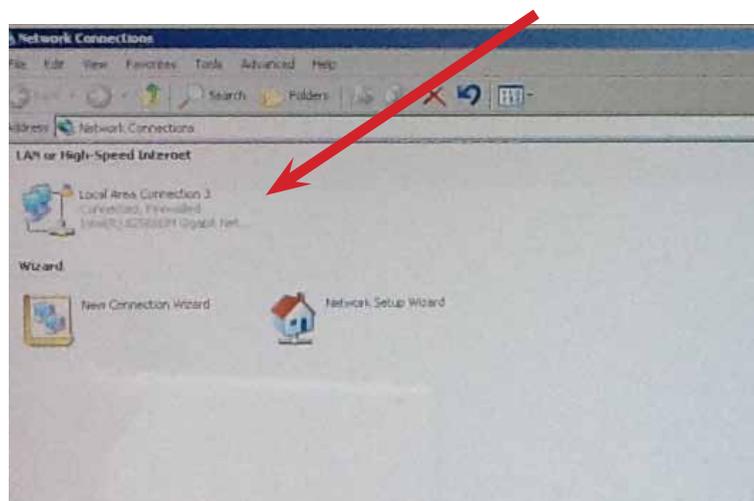

8-A pop-up will appear and you can check if you are online.

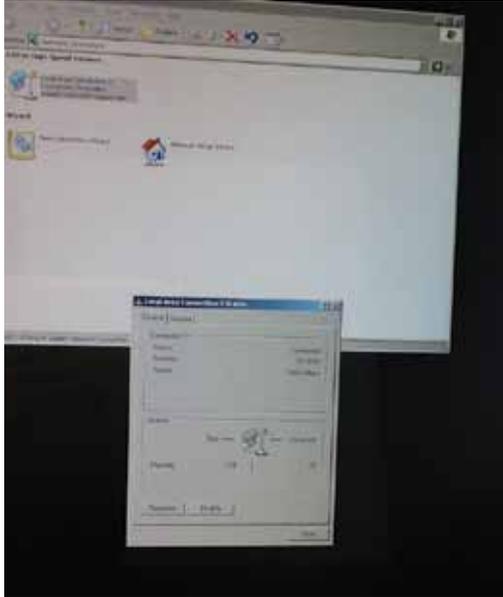


9-To return to DC PhotoBooth software, follow this instructions:
Press START PROGRAMS START UP PNG
(each PhotoBooth has their name: NG, Strip, PNG, MEGA)

12.1.2 WIFI - WIRELESS LAND


A-In order to use the WIFI ADAPTER YOU NEED THE SOFTWARE "EXPRESSION V1.2 HIGHER
B-To Update the Machine or change the software version, please follow these steps:

- 1 · Open the DVD Driver.
- 2 · Insert the "Boot DVD".
- 3 · Plug Off the Machine.
- 4 · Plug On the Machine after 10 seconds.
- 5 · Wait while the restore program reinstalls the software (a progress bar appears on the screen). The time process is about 30 minutes
- 6 · A black screen appears when the process finishes.
- 7 · Extract the DVD disk.
- 8 · Plug Off the Machine.
- 9 · Plug On the Machine after 10 seconds.

C-After restoring or Updating the PhotoBooth we need to calibrate the touch screen.
D-To do the calibration, press the yellow button from the Control Panel twice.

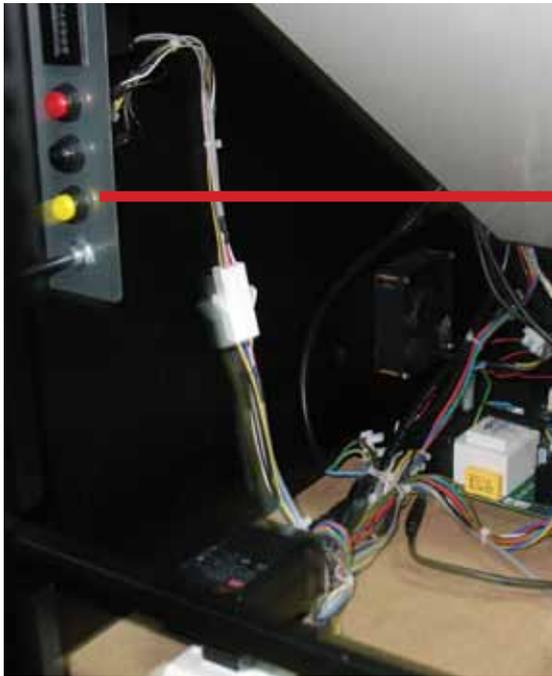

Press the yellow button and after 7 seconds press again.

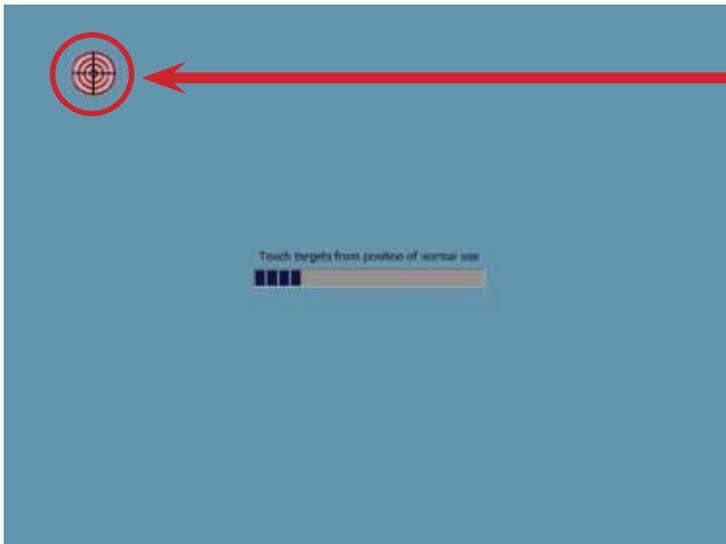

Calibrate the screen:
Touch the center of the target (1 time only)



After the 3 targets, drag your finger all around the screen to make sure the cursor follow finger and press OK.

 After calibrating the screen, turn OFF the PhotoBooth and plug the WiFi adapter



**Mini Wireless USB Adapter.
TRENDNET N150 TEW-648UB
(optional)**

 **Warning:** Don't Connect or Disconnect ANY HARDWARE (printer, wifi, touch, cam,..) when the machine is power ON

To connect your PhotoBooth to internet via wifi you need a USB extension because if you connect directly to the pc, the metal chassis of the kiosk can create interferences. Put the cable end where is the wifi adapter off to the metal chassis of the kiosk.

*Pass the USB Extension WiFi adapter for the hole in to top front door.

You need a USB extension to connect the WiFi adapter (Optional)



P.5 P.5 USB Extension to connect the WiFi adapter

Also you will need a WiFi Adapter. The Approved on is TRENDNET 648



**Mini Wireless USB Adapter.
TRENDNET N150 TEW-648UB
(optional)**





Warning: we recommended TRENDNET N150 TEW-648UB. if you use another device we have no responsibility.



Warning: Manipulate the photobooth OFF, and never manipulate the photobooth when is power ON.



Warning: Don't Connect or Disconnect ANY HARDWARE (printer, wifi, touch, cam,..) when the machine is power ON

With the PhotoBooth Power OFF: Insert the USB extension (P.5) in the indicated slot. Insert the wireless adapter to the other end of the USB extension.



P.1 Main Power Cable

P.2 Serial Cable From PC to Control Board. STRIP (200 cm - Inch 78,74)

P.3 Jack Stereo Cable. (180 cm - Inch 70,87)

P.4 VGA Cable to Monitor PC

P.5 Wifi adapter (or Antenna) Optional features

P.6 USB Card Reader

P.7 USB From Printer Security Dongle.


P.8 USB Printer.

P.9 Land Cable (RJ45 Ethernet cable) (internet)


P.10 USB Camera

P.11 USB Touch screen


- 2-Turn on the PhotoBooth and go to the OPTIONS tab in the Setup Menu.
- 3-Click on the WIFI button.

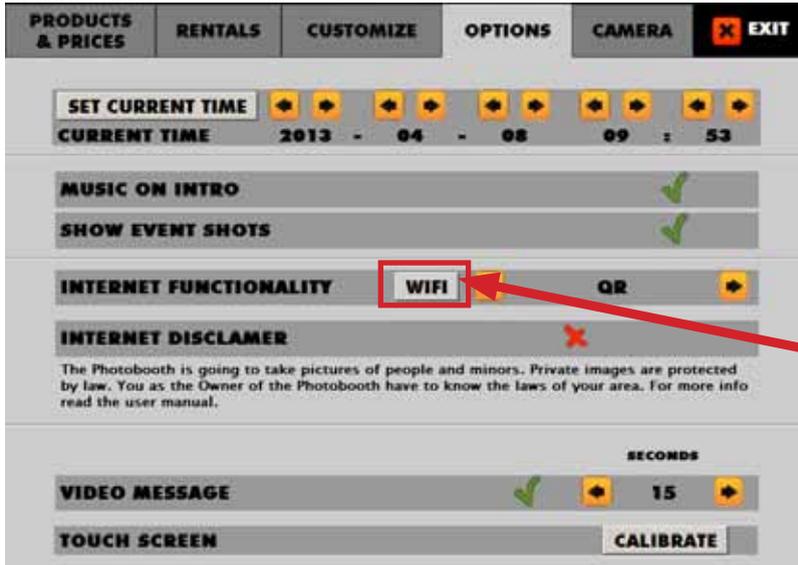


- 4-Wifi Manager
- 5-Click on the List Available Network button.

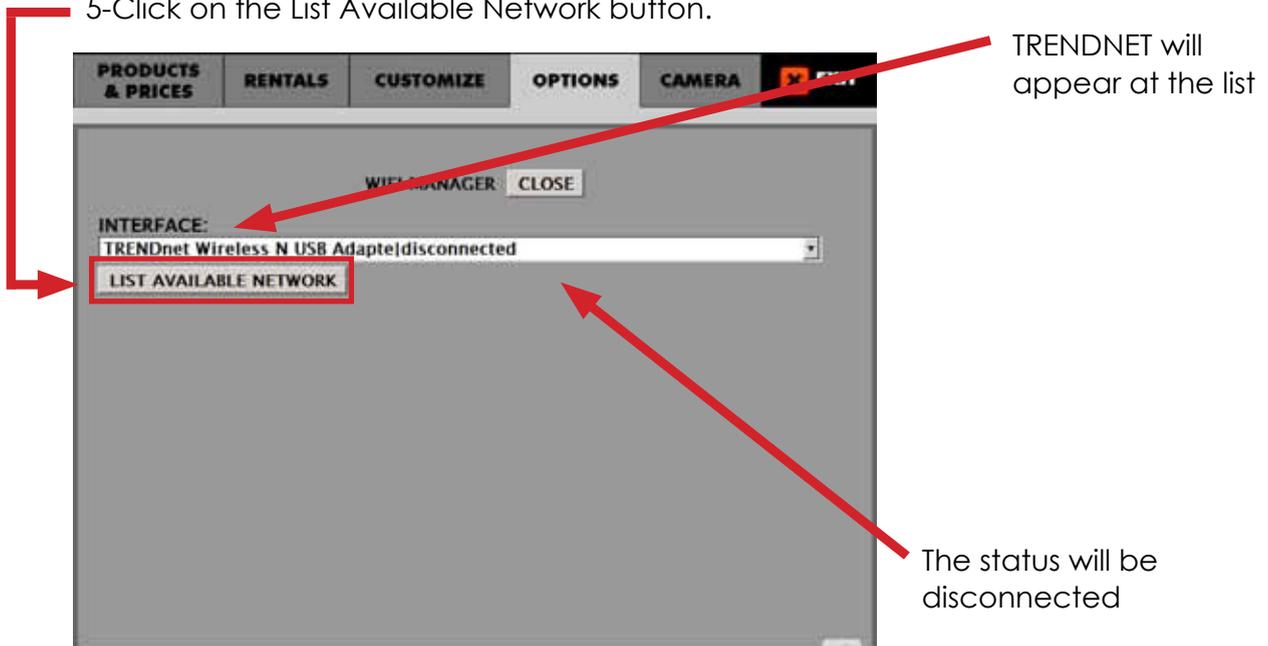


6-A list of available networks appears, select the network you want to connect.

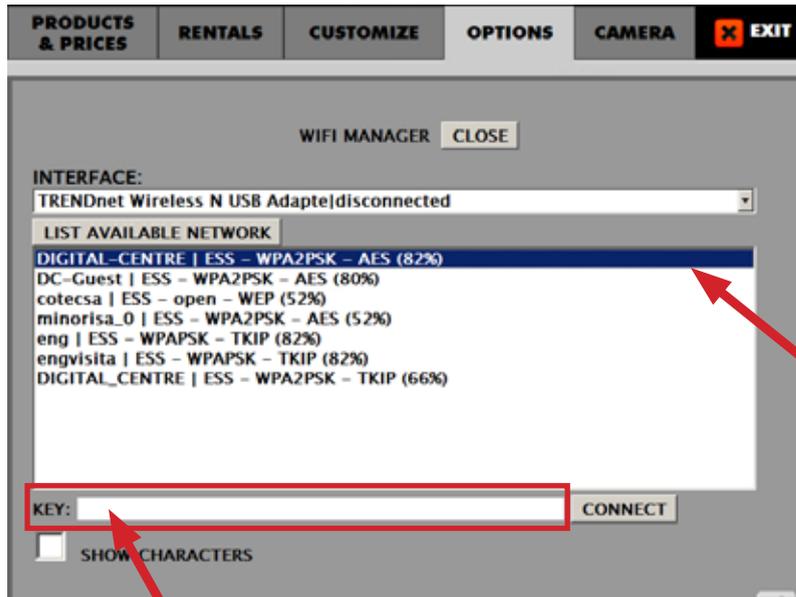


7-Enter the network key,when touching that area, a keyboard appears in the screen. Write the key and click ACCEPT.

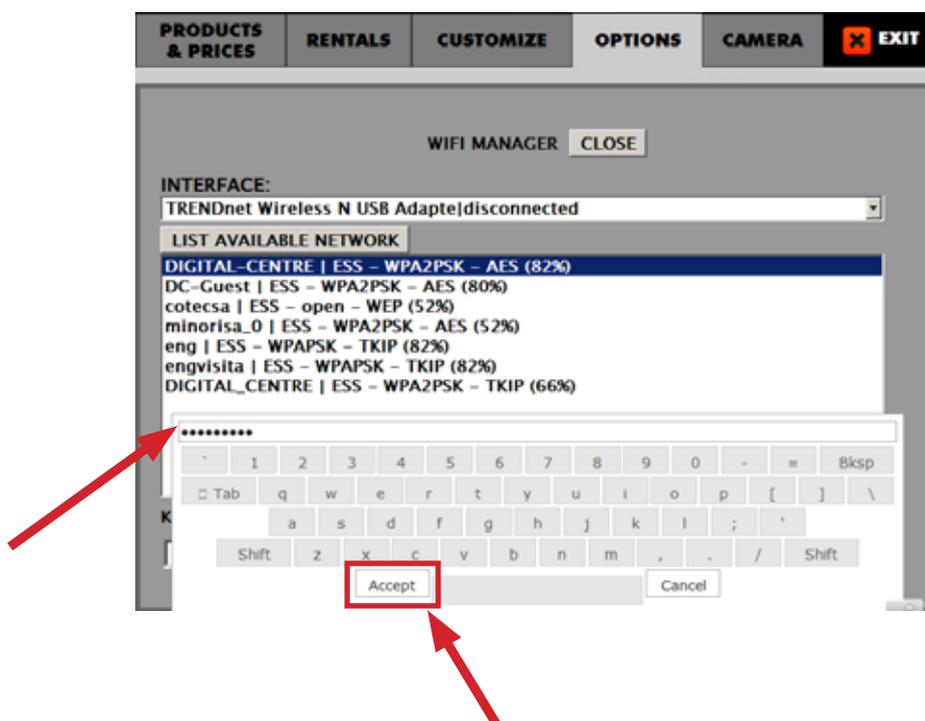

8-Then, click on CONNECT.

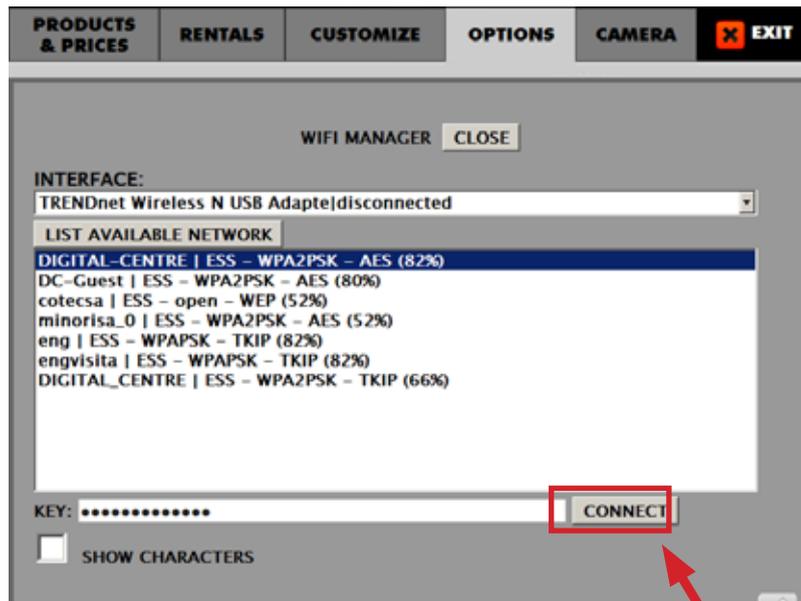

9-Now, you're connected.

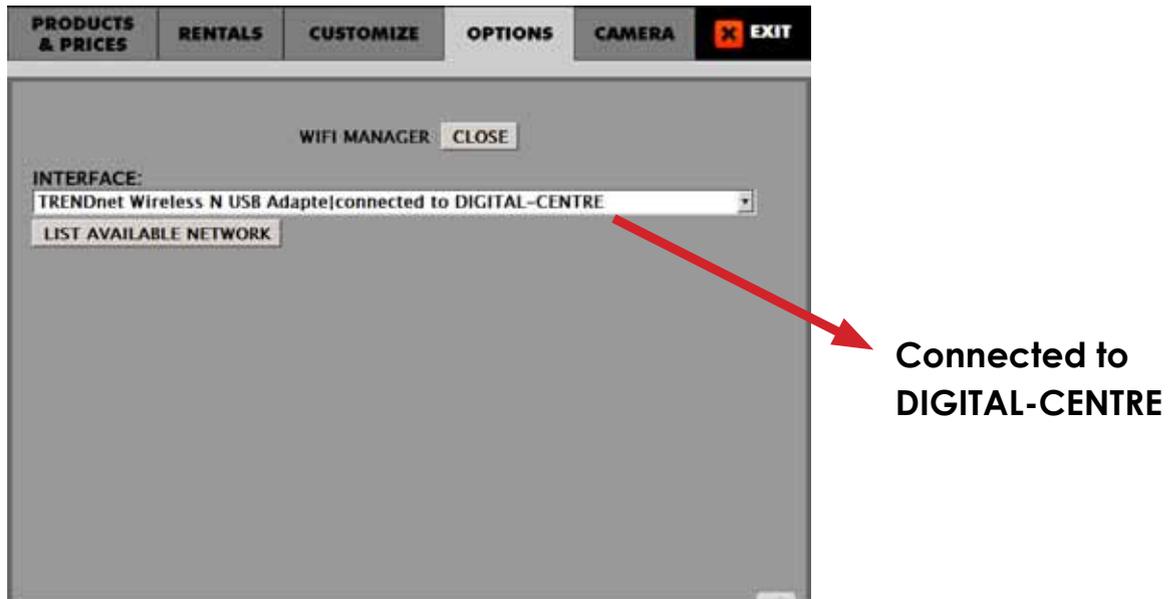

- 10-If the status show "Disconnected" try again from step #6 and make sure you select the right connection, and type the right password
11-If it shows "connected to" them click to EXIT setup menu.



Warning: Don't Connect or Disconnect ANY HARDWARE (printer, wifi, touch, cam,..) when the machine is power ON

12.1.3 WIFI HOT SPOT (3G/4G Wimax)

- 1-Buy a HotSpot. Requires a data plan contract with your ISP (Internet Service Provider)
- 2-Requires a WiFi hardware device. Please, contact us to purchase your WiFi adapter TrendNet N150 TEW-648UB.
- 3-When you have done the steps 1 and 2 , go to see how to connect via WiFi - Wireless Land.

12.2 SHARE SECURE

Nowadays, the majority of PhotoBooths send photos over the Internet.

It's all so safe, so we think? The answer is no!

Minors are a big part of PhotoBooth users. Are they secure when typing private data in a public area?

Every year there are hundreds of cases of identity theft, scams, account lockouts, reception of spam, viruses, etc.

Imagine that you are with a friend in a PhotoBooth and you want to send the photo to your email address or share the photo on Facebook. The majority of PhotoBooths make you enter your personal data, or login to your account, while in the PhotoBooth. You are typing your personal information in a public terminal where third parties could access and steal the data, and second, you are writing your password in the presence of another person. It isn't secure.

Therefore, Digital Centre now introduces **Share Secure**. You won't have to type your email address to log on to Facebook or Twitter because our PhotoBooths will send the photos to your smartphone, and it is your personal smartphone which will manage the photos safely.

• WHAT'S SHARE SECURE?

Share Secure is a service that DC offers in all their PhotoBooths.*It ensures reliable delivery of photos via the Internet to guarantee a safe and private transmission.

**Internet connection is required for Share Secure.*

• HOW IT WORKS

You can view and share photos and videos through

your phone or computer without having to provide personal information to the PhotoBooth.

You don't have to give your details to the PhotoBooth exposing yourself to unsafe public terminals where third persons may steal information, passwords, or identities.

• ADVANTAGE

1. Reduces the risk of identity theft. There are many real cases of identity theft and it is most important for DC to preserve the privacy and safety of its users.
2. Protects confidential information like email address, telephone number, home address, etc., because it isn't necessary to type your personal information in any DC PhotoBooths.
3. Assures users that the information will be sent to the recipient securely.
4. Don't have to type your details over and over again.
5. Probability of error is zero because everything is from your smartphone. How many times do users make typing mistakes when entering their email address? Or how many times do they forget their password? Your smartphone has all of your personal data, and all your photos and videos will arrive safely, confidentially, and without any error.

This option is available for all users of Digital Centre PhotoBooths. You have two ways to see your photos:

1. **Manually:** Through the QR Code printed on the photo that can be scanned from your smartphone.
2. **Automatically:** The smartphone will link the user with the PhotoBooth, and will immediately send the photos to the smartphone, without typing any phone number, user, email or password.

12.3 DIGITAL CENTRE APPS

What can the APPS do for you?

OWNERS can control their PhotoBooths in real time. This tool is way ahead of just getting a daily report in your email.

- Running out of Film?
- Cash box full?
- The PhotoBooth should be ON?
- Full report
- My Locations
- Order Film automatically
- News
- Upgrades
- Alerts

USERS get their pictures at the Smartphone automatically, together with extra functionalities

- SHARE SECURE with all their user names, passwords or emails. Users never type any confidential data at the public kiosk.
- Post on Facebook, Twitter and email automatically
- Post at the WALL and get votes
- Meet other PhotoBooth Users and vote them
- Monthly TOP 10 gets prizes
- Locate nearby PhotoBooths
-and much more coming!

PhotoBooths



12.3.1 PHOTOBOTHES APP FOR OWNERS

PHOTOBOTHES APP (for OWNERS)

This APP has been created for DC PhotoBooth owners.

They will control all their PhotoBooths remotely and ON TIME. It has an interactive map where you can see your location, and the location of your PhotoBooths.

It will WARN you if any PhotoBooth is running out of Film, cash box full, or if they are not working properly. The owner decides to be warned when the Film stock is 50 prints, 100 prints or whatever. The same with the cash box.

There's an option to contact DC directly from the application, or suggest some improvements.

If your PhotoBooth is running out of Film, you can reorder by pressing a button only.

This APP makes management easier for all PhotoBooth owners.

Improve the Income of your PhotoBooths! Save time and money.

MyPhotoCode



12.3.2 MYPHOTOCODE APP FOR USERS

MYPHOTOCODE APP (for USERS)

MyPhotoCode is a new application to your Smartphone from Digital Centre. It is free for all users of DC PhotoBooths. It gives extra value to the money they put in the PhotoBooth, and increases the sales because players can make easy copies or take new pictures to win prizes.

With this APP users will see, on his/her Smartphone, all the photos taken in any DC PhotoBooths, no matter when or where the photo was taken.

Users can instantly post on Facebook or email, and post at the Wall. The Wall is the nationwide place where all users can post their photos and see what other users from other locations do. Users can vote for best pictures and see the Monthly Top 10 from the Nation!

The APP will link the user with the PhotoBooth when he/she starts using it, and will immediately send the photos to their Smartphone, without typing any phone number, user, email or password.

User could print extra copies from his/her pictures taken in any DC PhotoBooth at any time.

Users can locate nearby PhotoBooths to take new pictures or print existing ones with family or friends.

13-TROUBLESHOOTING

· GENERAL PROBLEMS

Problem

The unit switch is ON, but it does not turn on

Causes

The unit is not plugged in.
The voltage is incorrect.
Overload: the fuse over the electric socket has been blown.

Solutions

Check if the unit is correctly connected to the electric ground.
Check if the electric ground is receiving electricity.
Be sure that the voltage is correct.
Change the fuse.

Problem

The fluorescent does not turn on.

Causes

The fluorescent lights have been blown.
The transformer has been blown.

Solutions

Replace the fluorescent lights (see above).
Replace the transformer

· MONITOR'S PROBLEMS

Problem

The monitor image looks darker or lighter

Causes

The monitor is not adjusted correctly.

Solutions

Readjust the monitor.

Problem

The monitor image moves up and down

Causes

The monitor is not adjusted correctly.

Solutions

Readjust the monitor.

· SOUND PROBLEMS

Problem

The sound does not work

Causes

The volume is not correct.
The configuration menu has the sound set to OFF.

Solutions

Adjust the volume with the control placed below the test, free-play and start buttons.
Change the sound configuration from the test menu (black button).

· PRINTER PROBLEMS

Problem

The printer does not print any photos

Causes

The printer is disconnected.
The printer is out of ink or paper.
The paper or the ink sheet was not properly installed.
Incorrect paper.
USB/ LPT Atmel chip position is incorrect.

Solutions

Switch on the printer.
Call the person in charge
Correctly place the paper and the ink.
Use only CK9550-DC type paper.

Problem

The printer does not switch on

Causes

The printer is disconnected.
The printer does not receive electric supply.

Solutions

Connect the printer.
Be sure that the cable is correctly connected.

Problem

It prints one or more white lines

Causes

Thermal head is broken.

Solutions

Replace thermal head.

· PC PROBLEMS

Problem

Install a brand new Control Board with Atmel chip and jumpers.

Causes

This problem is due to a hardware malfunction.
Check the green Capture Board, as it is probably out or half way in.

Solutions

Turn OFF the PC.
Take out the Capture Board. And put it again (all the way in).
Screw in tightly and check again that it is all the way in, and did not move little out during screwing.
Turn ON the PB and check it.

· **WARNING**

· If you have any doubts or any problems with the unit and its performance, call a technician to solve the issue.

Printer	Cleaning. Check configuration.	Monthly
Glasses	Cleaning.	Weekly.
Control Panel	Check the functioning of all buttons	Monthly
Lights	Check the functioning of all the lights and the fluorescent light.	Monthly
Sound	Check the sound.	Monthly
Coin Acceptor Bill Acceptor	Clean and check the correct functioning	Annually
Interior	Cleaning	Annually
Exterior	Cleaning	Weekly

13.1 UPLOADING THE LOGO


PROBLEMS UPLOADING THE LOGO:

Possible causes:

- 1-USB STICK is damaged
- 2-The logo specifications/characteristics are not correct

1-USB is damaged

- Let's make a test to see if it works at the computer.
- Plug the USB STICK at the front of the PC (HP C2D), and go to Set Up Menu. Then exit the Menu.
- Take a picture by choosing the product you want.
- After the game, Remove the USB STICK.
- Plug the USB STICK in your PC or LapTop.
- Check if the USB STICK contents the **PhotoldDownload** folder.
- It should be 2 folders into the PhotoldDownload and your picture should be there.
- If your picture is not there, the USB STICK is not working properly.

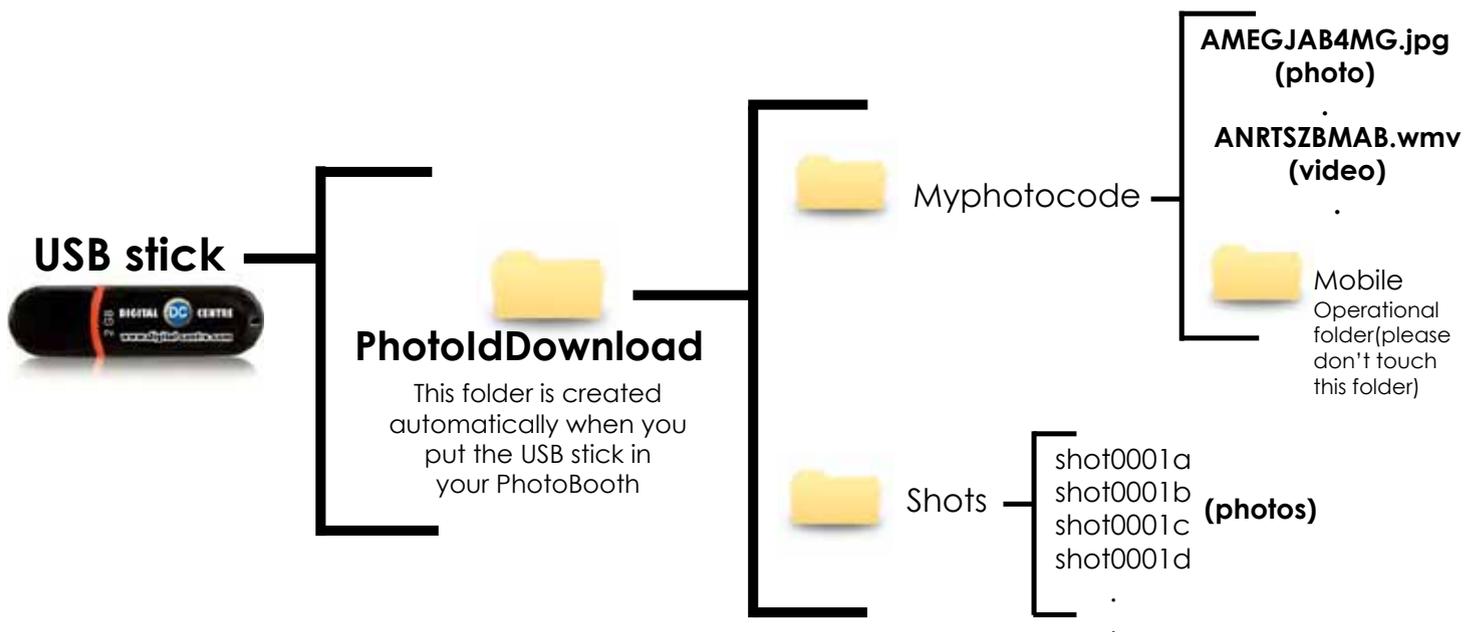

It's recommended to use a USB drive with LED and 2GB of space.





2-The logo specifications/characteristics are not correct

- Plug the USB Stick in your PC or Laptop.
- Locate the logo, Placed on the logo and click the right button on your computer mouse to open properties.
- The properties should be as follows.



Click the right button

· Check the logo specifications

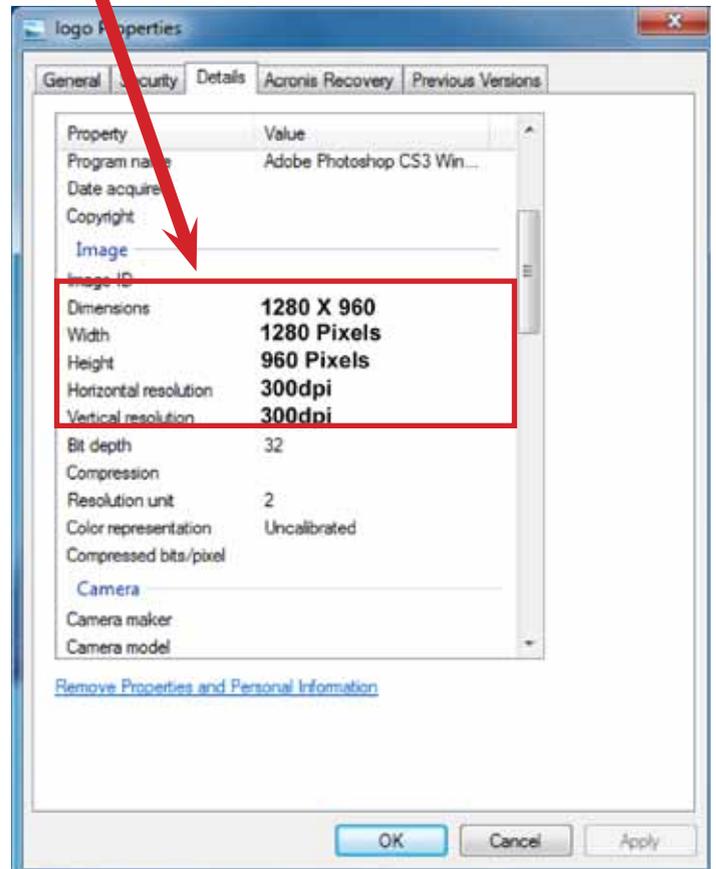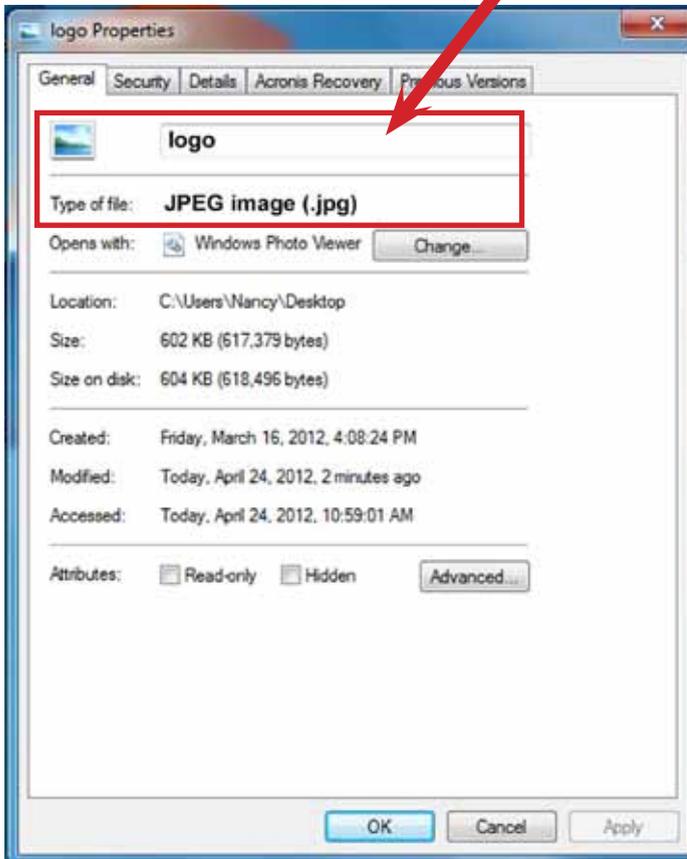

Logo specifications:

Name: logo
Size: width: 800 pixels
 height: 600 pixels
Resolution: 300dpi
 We recommend 300dpi,
 but it will also work with
 less resolution.
Extension:JPG
Color mode:RGB



logo.jpg



If it doesn't work, consult a professional designer to assist in changing the logo.

ADVANCED USERS: Use the following web site for suggestions;<http://www.webresizer.com/>



13.2 HARD DRIVE

HARD DRIVE ERROR

This procedure is to check if the BIOS settings are correct for an Automatic BOOT-DVD.

WARNING!!! This procedure is very dangerous and could cause a PC Malfunction. Please read it carefully and follow all steps one by one.

- 1 · Plug in a Keyboard to the PC.
- 2 · Turn ON the PC (or the whole Photo Booth).
- 3 · When the ASRock screen appears, press "F10" several times until the "BIOS SETUP UTILITY" appears on the screen. If it does not come up, and the software continues uploading, then go back to the Step 2.

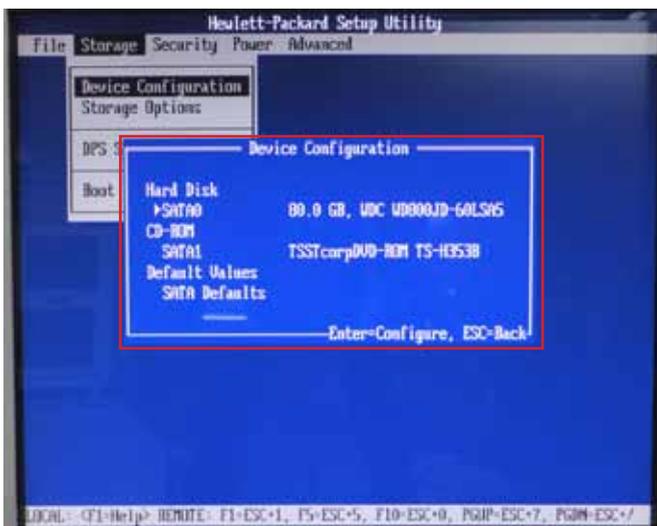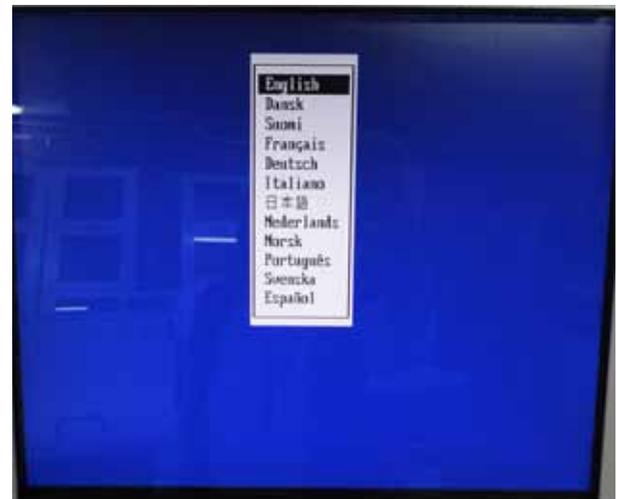


- 4 · With the Keyboard arrows, move up to the Storage Menu, here we are going to check the following thing:
 - Device Configuration (step 5)
 - Boot Order (step 6)

5 · Once you are inside the “**DEVICE Configuration**” please check the following points:

- “Hard disk” should be connected at SATA0
- “CD-ROM” should be connected at SATA1

If everything is OK, press ESC to return the Main menu.


If Hard disk or CD-ROM or Both are not detected, we should check the PC connections. (Do this work with the PC unplugged from power). Go to step 8

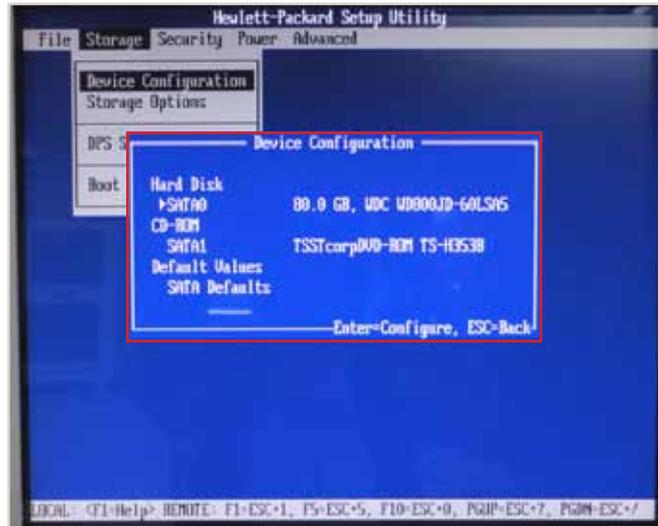

6 · Once you are inside the “**Boot Order**” please check the following points:

- “ATAPI CD-ROM”
- “Hard Drive”

If ATAPI CD-ROM or Hard Drive or Both are not detected, we should check the PC connections. (Do this work with the PC unplugged from power). Go to step 8

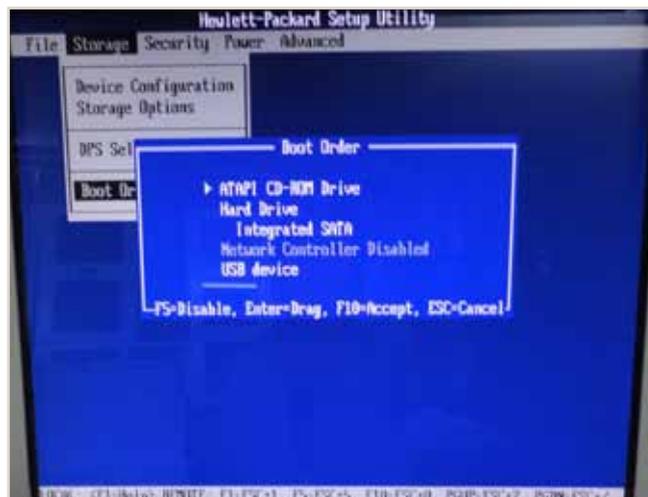




- 7 · With the Keyboard arrows, move right to the Advanced Menu here we are going to check the following thing:
- Select Power-On Option and confirm that the “After Power Loss” is ON



- 8 · Unplug the PC from the power.
 - 9 · Open the top cover (there are 2 screws in the top back side of the PC)
 - 10 · Check connections as follows:
- Please pull up the green arrows from the DVD ROM and from the Power supply and check the connection as it shows in the following pictures.

IF The Hard Disk is SATA + DVD SATA it will be like this:

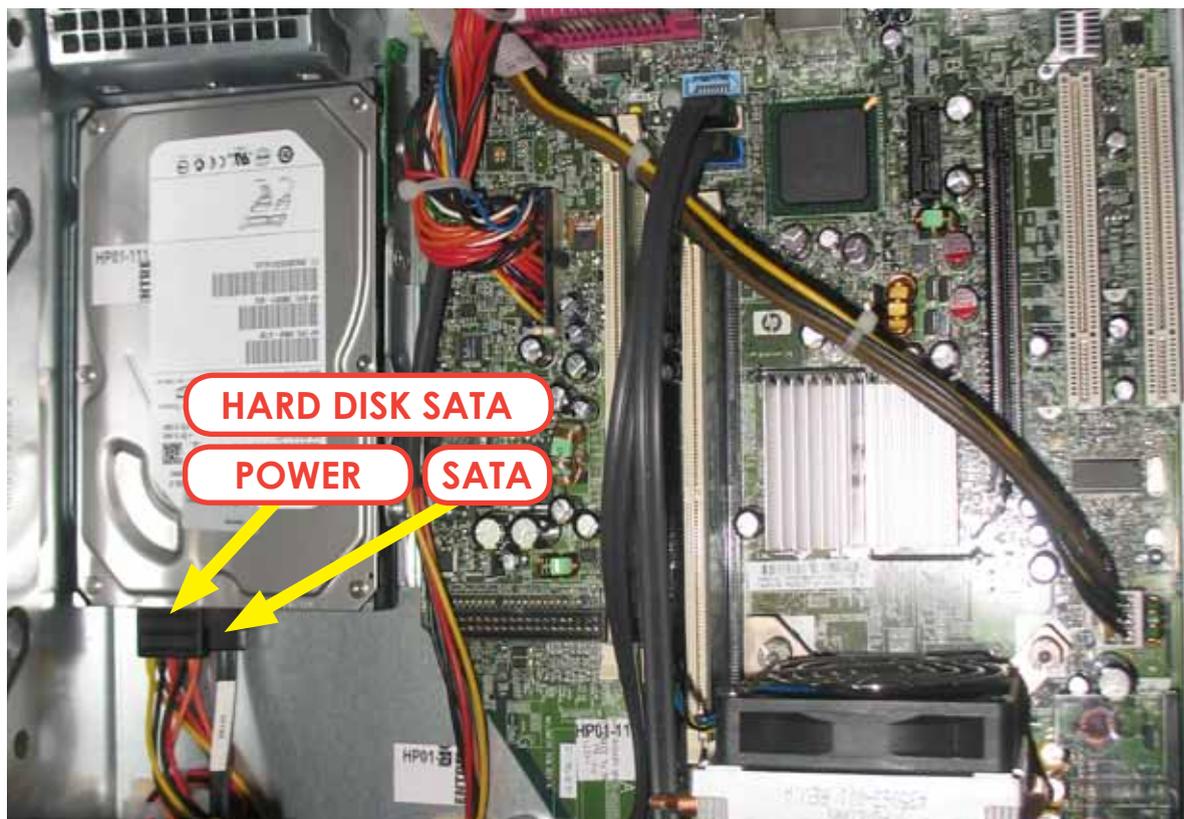

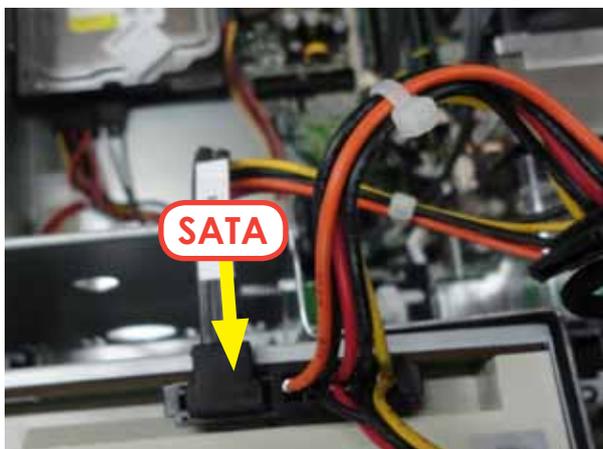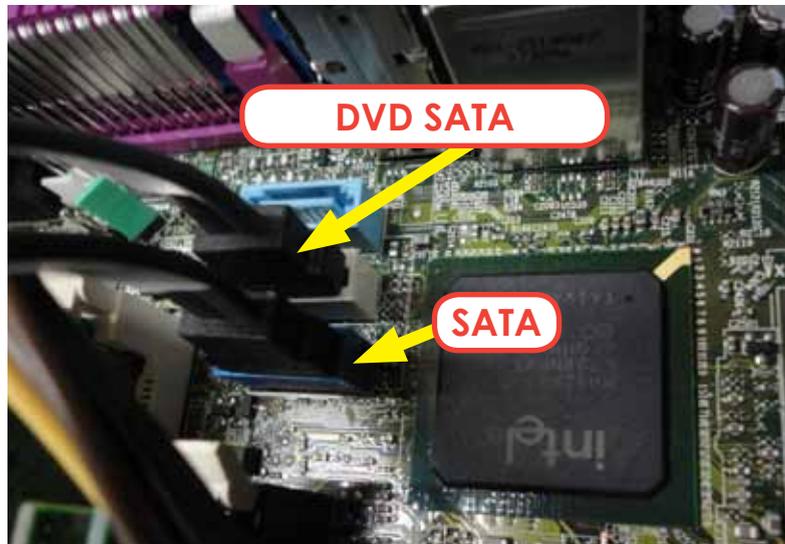

11 · If all connections are fine (as it appears in the pictures), then it is possible that the component, which is not detected at the “IDE CONFIGURATION” Menu, is physically damaged. Please contact Digital Centre for a new part.

13.3 BOOT DVD

To Update the Machine or change the software version, please follow these steps:

- 1 • Open the DVD Driver.
- 2 • Insert the "Boot DVD".
- 3 • Plug Off the Machine.
- 4 • Plug On the Machine after 10 seconds.
- 5 • Wait while the restore program reinstalls the software (a progress bar appears on the screen).
The time process is about 30 minutes
- 6 • A black screen appears when the process finishes.
- 7 • Extract the DVD disk.
- 8 • Plug Off the Machine.
- 9 • Plug On the Machine after 10 seconds.

CUSTOMIZED FRAMES:

If you have customized frames and/or logos now is the time to upload.

CUSTOMIZED FRAMES. If you have customized frames and /or logos now is the time to upload.

To upload your customizations: put the USB Stick in the pc, go to the Setup Menu Customize, and press the LOAD button. If your USB is not detected, press EXIT and enter again to the Setup. (view pag.98: Load from USB section)

To view your frames, in the Setup menu, the Frames Option has to be in Custom mode.

13.4 DONGLE ERROR

 
If you switch on the Photo booth and the following message appears; "Sentinet HASP key not found (H0007)", it means that the printer dongle is not well connected. The USB dongle must be connected on P.7 (please see picture).



P.7 Dongle USB Security and Software. MEGA


13.5 CAMERA ERROR

When you take a picture and your screen appears black please check the USB connection from the camera. The USB must be connected on P.10 (please see picture).



P.10 USB Extension AM / AF From Camera to PC. (180 cm - Inch 70,87)

13.6 TOUCH SCREEN ERROR

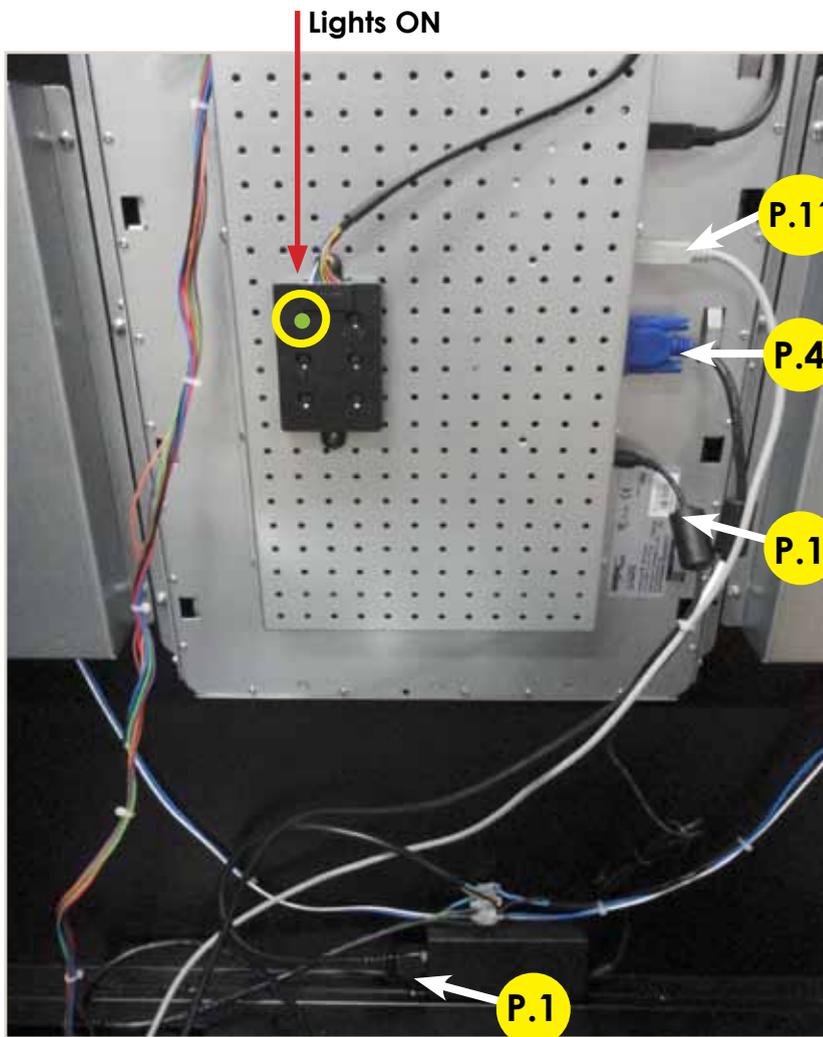

Verify that all cables are correct. (P.1,P.4,P.11).All right if the LED is green

PC WIRING

- P.1 Main Power Cable
- P.4 VGA Cable From Touch Monitor to PC. (180 cm - Inch 70,87)
- P.11 USB Cable From Touch Monitor to PC. (180 cm - Inch 70,87)

13.7 PRINTER ERROR



Problem

When you take a picture and see this message Error "INVALID PRINTER" on the screen

Error number 0:

- The printer is disconnected.
- Look at the PIN of the correct printer.



Error number 2:

- The printer must be Digital centre



Error number 3:

- The paper or the ink sheet is incorrect

The "Please Wait" error is very common. It looks like the PC freezes, but it isn't. The problem is that the computer is waiting for the right components.

When we turn on the Photo Booth, the computer shows the "Please Wait" screen while it checks the Control Board, the USB adapter and the Printer. If any of the components are not ok, the software doesn't go ON.

So, when we face this problem we have to check the 3 components. The procedure is as Follows:

1 · Check the Printer lights ON. Should be ON the following lights "POWER" and "READY". If any other light, please fix it and Turn OFF and ON the Photo Booth.



2 · Check the Printer Connections. Power and USB, just 2 wires.



3 · Check the Control Board Serial Connection. (That is the common problem Point). (attached 2 pictures: Correct and Error "Please Wait"). This connection is very easy to lose during transport, or when we work at that area.

13.8 NO SIGNAL



Lights are ON

Check if the PC lights are ON.

If the lights are on then it appears that the Photobooth is working but the monitor is not.


Next steps:

When you turn ON the Photobooth, can you see any message on the screen? (ex; manufacturer name, or "NO SIGNAL")?

If this is the case, the VGA cable is probably unplugged or damaged.

But if nothing is on the screen (when you turn ON the Photobooth), please check if there is power to the Monitor. Power cable is probably unplugged from the monitor.

13.9 IMAGE ADJUSTING

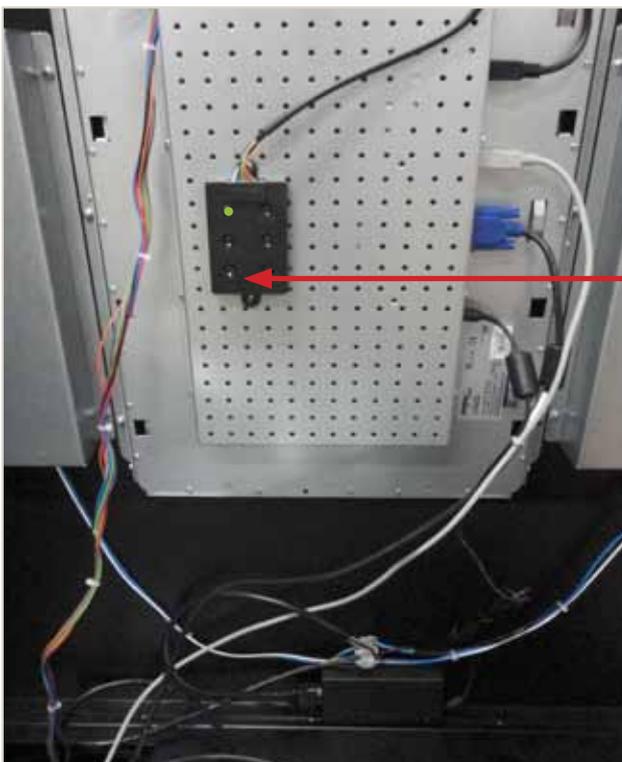

If the image moves press the button "Auto" which is in the back of the screen


AUTO

13.10 CONTROL BOARD ERROR

The control Board is the green board located behind the PC. It doesn't mean that the Control Board is bad; it could mean that the PC could not connect with the Control Board (because the Serial cable is not correctly connected).

Check following points:


- 1 · Check the Control Board Serial Connection "P.2".
(That is the common problem point).
(attach 2 pictures: Correct and Error "Please Wait"). This connection is very easy to lose during transport, or when you work at that area.
- 2 · If all connections are good, then check that the Control Board Red LED is ON.
- 3 · If all the 2 points are OK, but still doesn't work, please send the Control Board to Digital Centre (contact the Support Team before sending)

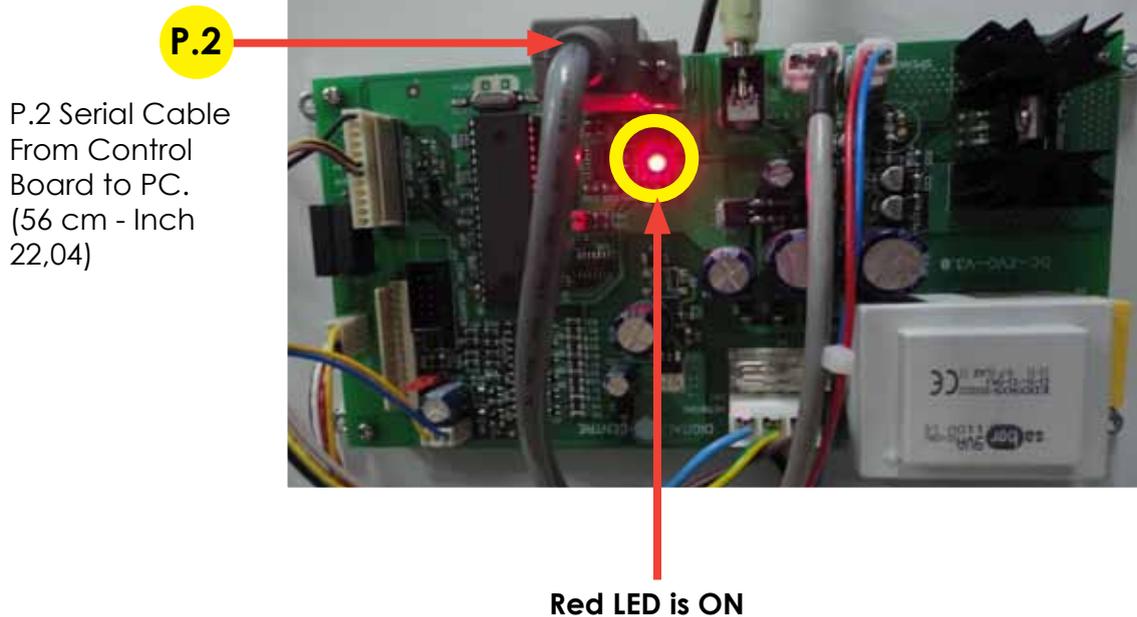

P.2 Serial Cable From Control Board to PC. (56 cm - Inch 22,04)

14-CHARACTERISTICS

14.1 CONTROL BOARD

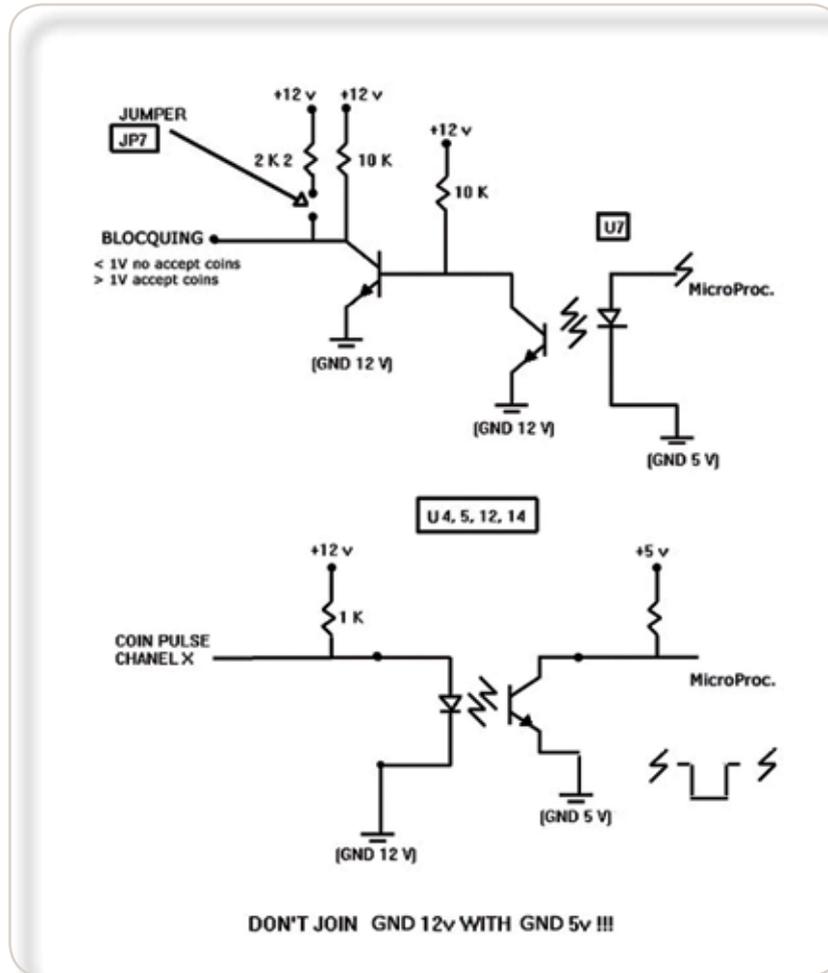


PIN NUMBER	SIGNAL	REMARKS
1	GND	
2	12V	
3,4,5	N.C.	
6	BLOCQUING	U7 PUT THIS TO $\geq 3v$ WHEN THE PROGRAM LETS YOU TO USE COINS. MINOR THAN 1v WHEN MC
7	COIN PULSE CHANEL 1	U12 PULSE TIME DURATION > 50 msc
8	COIN PULSE CHANEL 2	U4 THE PROGRAM DOESN'T USE IT
9	COIN PULSE CHANEL 3	U14 THE PROGRAM DOESN'T USE IT
10	COIN PULSE CHANEL 4	U5 THE PROGRAM DOESN'T USE IT


14.2 DECALS

You can use images of 300 dpi to personalize the decals if needed.
Save in a JPG format.

The size cm (for EUR) inch (for USA) for each one must be:

- 1-(DE3501) DECAL. MEGA #1 Back Wall (83,5x172 cm - Inch 32,9x67,7)
- 2-(DE3502) DECAL. MEGA #2 Top Front Door (72,5x170 cm - Inch 28,5x67)
- 3-(DE3503) DECAL. MEGA #3 Top Right Lateral (62x170 cm - Inch 24,4x67)
- 4-(DE3504) DECAL. MEGA #4 Bottom Left Lateral Door (43x62 cm - Inch 16,8x24,2)
- 5-(DE3505) DECAL. MEGA #5 Top Left Lateral (43x103 cm - Inch 16,8x40,2)
- 6-(DE3506) DECAL. MEGA #6 Instructions (69,5x22 cm - Inch 27,4x8,7)
- 7-(DE3507) DECAL. MEGA #7 Insert Money (25x15 cm - Inch 9,8x5,9)
- 8-(DE3508) DECAL. MEGA #8 Top & camera (69x29,5 cm - Inch 27,2x11,6)

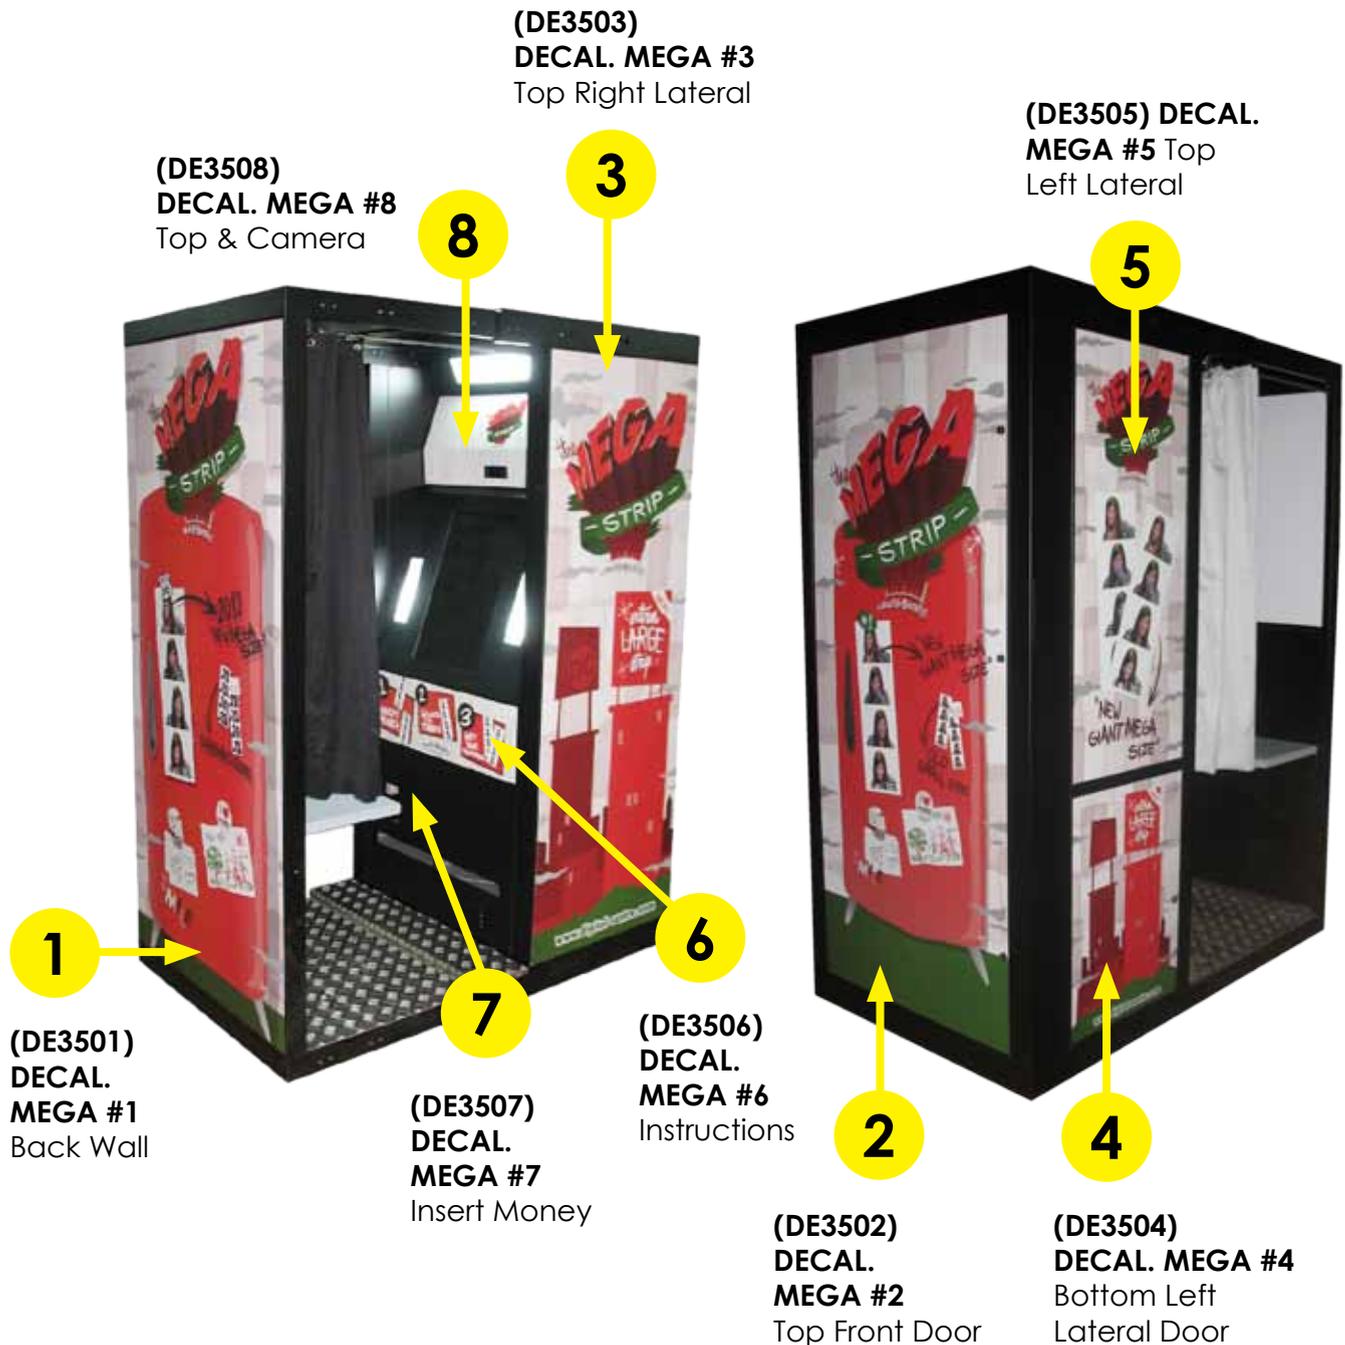

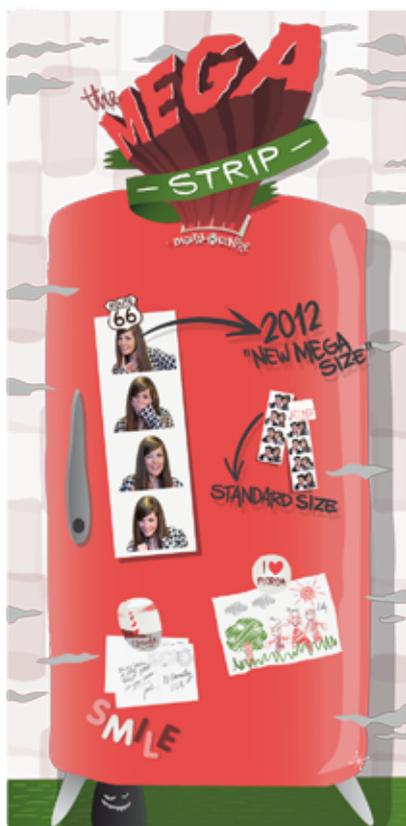

1 (DE3501) DECAL.
MEGA #1 Back Wall
(83,5x172cm - Inch 32,9x67,7)



2 (DE3502) DECAL.
MEGA #2 Top Front Door
(72,5x170cm - Inch 28,5x67)



6 (DE3506) DECAL.
MEGA #6 Instructions
(69,5x22cm - Inch 27,4x8,7)



7 (DE3507) DECAL.
MEGA #7 Insert money
(25x15cm - Inch 9,8x5,9)




8 (DE3508) DECAL.
MEGA #8 Top & Camera
(69x29,5cm - Inch 27,2x11,6)



4 (DE3504) DECAL.
MEGA #4 Bottom
Left Lateral Door
(43x62 cm - Inch 16,8x24,2)



3 (DE3503) DECAL.
MEGA #3 Top Right Lateral
(62x170cm - Inch 24,4x67)

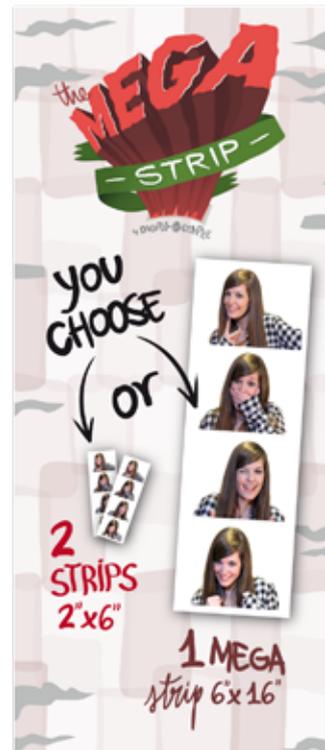

5 (DE3505) DECAL.
MEGA #5
Top Left Lateral
(43x103 cm - Inch 16,8x40,2)

1.4.3 SPARES DIAGRAMS

ME3546
CURTAIN'S
ROD. MEGA

WO3501
WOOD BOTTOM
SEAT. MEGA
(GREY)

ME3515
METAL BASE SEAT.
MEGA (BLACK)

ME3516
FALLING ARM
SEAT. MEGA
(BLACK)

ME0001
LOCK 1314

ME3501
FRONT DOOR. MEGA
(BLACK) (75X172 cm
Inch 29,5X67,7)

ME3500
MAIN BODY.
MEGA (BLACK)

DE3532
RIGHT / LEFT BACK SIDE
DECAL. MEGA (WHITE)
(10X76 cm
Inch 3,93X27,56)

DE3531
BACK WALL DECAL.
MEGA (WHITE)
(78,50X76 cm
Inch 30,9X29,9)

ME3526
FLOOR. MEGA
(ALUMINIUM)

ME3527
FLOOR LID. MEGA
(ALUMINIUM)

PL0010
"LOOK HERE" #1 METHACRYLATE
LEFT ARROW. (8X12 cm
Inch 3,15X4,72)

PL0008
"LOOK HERE" #1 METHACRYLATE RIGHT
ARROW. (8X12 cm - Inch 3,15X4,72)

ME3529
TOP LEFT LATERAL
COVER. MEGA
(BLACK) (44X104 cm
Inch 17,3X41)

EL3600
LCD TOUCH
MONITOR 22"

EL3504
LIGHT BULBS
9W/865

SE3504
CURTAIN. MEGA
(GREY) (80X110 cm
Inch 31,50X43,3)

ME3523
BOTTOM LEFT
LATERAL DOOR. MEGA
(BLACK) (44X63 cm
Inch 17,3X24,8)

ME3545
RIGHT / LEFT CURTAIN
ROD END TAP. (BLACK)

EL3503
LIGHT BULBS 36W/865

PL3500
TOP LIGHT PLASTIC
DIFFUSER. (WHITE)
(52x9,5x0,3 cm
Inch 20,47x3,74x0,12)

ME3510
FIXING CAMERA
FRONT HOLDER
(BLACK)

PL3501
LATERAL LIGHT PLASTIC
DIFFUSER. (WHITE)
(26,5x7x0,3 cm
Inch 10,43x2,76x0,12)

ME3502
INSIDE FALLING RAMP
PHOTO. MEGA (GREY)


ME2930
METAL LEG (16X80 MM
INCH 0,06X0,315)



PL0020
POLYURETHANE WHEEL
D-80 FIXING MECH.



PL0019
POLYURETHANE WHEEL
D-100 ROTARY MECH.

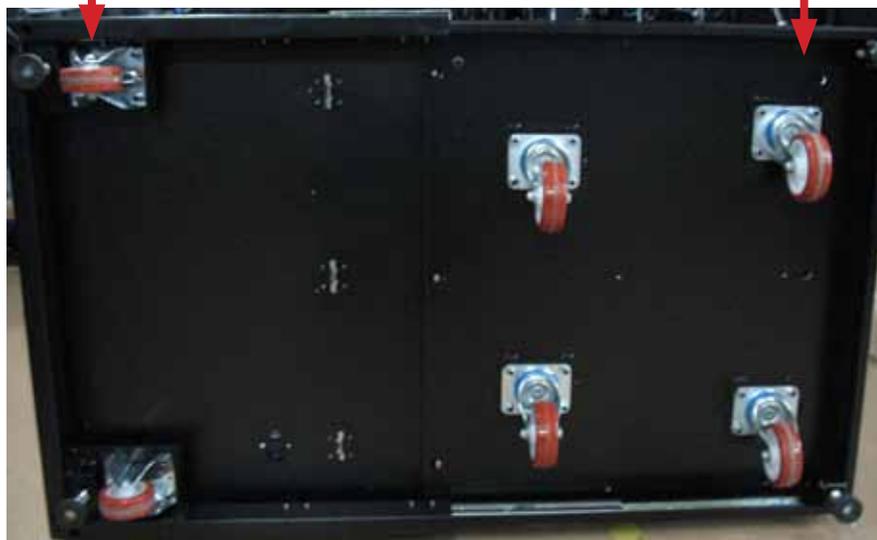

14.4 PARTS LIST

CA0005	COIN READER CABLE ALBERICI
CA0006	BILL READER CABLE ICT-DC. (92,5 cm - Inch 36,41)
CA0007	BILL READER CABLE MEI-DC. 110V
CA2900	MAIN POWER CABLE NG 1/2 (PC + PRINTER + TRAF0 12V + CONTROL BOARD)
CA2901	MAIN POWER CABLE NG 2/2 (1 MONITOR + 2 LATERAL LIGHTS + 1 TOP LIGHT)
CA2902	POWER CORD 110V - USA
CA2910	CABLE FROM CONTROL BOARD TO SERVICE PANEL & PUSH BUTTONS + 2 SPEAKERS
CA2912	POWER CORD 230V - EUR
CA3402	VGA CABLE M/M (180 cm - Inch 70,87)
CA3407	USB EXTENSION AM/AF. (180 cm - Inch 70,87)
CA3411	INTERNAL PC 12V DIVIDER
CA3414	USB CABLE FROM PRINTER TO PC. AM/BM (180 cm - Inch 70,87)
CA3416	JACK STEREO CABLE. (180 cm - Inch 70,87)
CA3512	SERIAL CABLE FROM PC TO CONTROL BOARD M/F (56 cm - Inch 22,04)
CA3802	MAIN POWER CABLE M/F 3T (86 cm - Inch 33,86)
CO0001	COIN ACCEPTOR. (EUR)
CO0002	COIN ACCEPTOR. (AUD)
CO0003	COIN ACCEPTOR. (CAD)
CO0007	ICT DOLLAR BILL ACCEPTOR 12V
CO0009	ICT DOLLAR BILL ACCEPTOR SET (DBA+WIRE+12V DIVIDER+METAL BRACKET). (BLACK)
CO0011	COIN ACCEPTOR SET (EUR) (COIN ACCEPTOR+FRONT ADAPTER+WIRE+METAL PLATE+METAL CASH BOX & WOOD SUPPORT). (BLACK)
CO0012	COIN ACCEPTOR SET (AUD) (COIN ACCEPTOR+FRONT ADAPTER+WIRE+METAL PLATE+METAL CASH BOX & WOOD SUPPORT). (BLACK)
CO0013	COIN ACCEPTOR SET (CAD) (COIN ACCEPTOR+FRONT ADAPTER+WIRE+METAL PLATE+METAL CASH BOX & WOOD SUPPORT). (BLACK)
CO0023	COIN ACCEPTOR PLASTIC FRONT ADAPTER
DE3501	DECAL. MEGA #1 - BACK WALL (83,5x172 cm - Inch 32,9x67,7)
DE3502	DECAL. MEGA #2 - TOP FRONT (72,5x170 cm - Inch 28,5x67)
DE3503	DECAL. MEGA #3 - TOP RIGHT LATERAL (62x170 cm - Inch 24,4x67)
DE3504	DECAL. MEGA #4 - BOTTOM LEFT LATERAL (43x62 cm - Inch 16,8x24,2)
DE3505	DECAL. MEGA #5 - TOP LEFT LATERAL (43x103 cm - Inch 16,8x40,2)
DE3506	DECAL. MEGA #6 - INSTRUCTIONS (69,5x22 cm - Inch 27,4x8,7)
DE3507	DECAL. MEGA #7 - INSERT MONEY (25x15 cm - Inch 9,8x5,9)
DE3508	DECAL. MEGA #8 - TOP CAMERA (69x29,5 cm - Inch 27,2x11,6)
DE3531	BACK WALL DECAL. MEGA (WHITE) (78,50x76 cm - Inch 30,9x29,9)
DE3532	RIGHT / LEFT BACK SIDE DECAL. MEGA(WHITE) (10x76 cm - Inch 3,93x27,56)
DE3800	SET DECALS. MEGA
EL0001	EVO-ATMEL CHIP (only chip)
EL3400	FULL HD CAMERA
EL3401	CONTROL BOARD V3.0 EVO LED (110V)
EL3402	CONTROL BOARD V3.0 EVO LED (220V)
EL3403	EVO-ATMEL CHIP ON CONTROL BOARD WITH SOFTWARE EVO LED
EL3406	FILTER 2 FUSES STANDARD 6A
EL3408	FAN (2 UNITS 12V) TWIN
EL3409	SERVICE CONTROL PANEL - MODEL 2
EL3417	TRANSFORMER 2A 12V
EL3503	LIGHT BULBS 36W/865
EL3504	LIGHT BULBS 9 W/865
EL3505	BALLAST 110V/36W

EL3506	BALLAST 230V/36W
EL3507	BALLAST 110V/13W
EL3508	BALLAST 230V/13W
EL3509	LAMP HOLDER 36W
EL3510	LAMP HOLDER 9W
EL3511	SPEAKERS 8 Ohm 5W. (10 cm - Inch 3,94)
EL3513	LIGHT STARTER
EL3600	LCD TOUCH MONITOR 22"
EL3602	TOUCH MONITOR 22" AC ADAPTER 100V/240V to 12V
ME0001	LOCK 1314
ME0002	KEY FOR LOCK 1314
ME0004	COIN ACCEPTOR METAL PLATE (12,1x15,2 cm - Inch 4,76x5,98) (BLACK)
ME0025	ICT METAL PLATE SUPPORT. (BLACK)
ME0031	METAL CASH BOX
ME2930	METAL LEG (16x80 mm - Inch 0,06x0,315)
ME3132	COVER PLATE FOR BILL ACCEPTOR HOLE. (BLACK) (12x15 cm - Inch 4,72x5,91)
ME3305	LATERAL LIGHT DIFFUSER HOLDER. RIGHT/LEFT NG (RAW METAL)
ME3306	LATERAL LIGHT BODY. (RAW METAL)
ME3313	TOP LIGHT DIFFUSER HOLDER. (RAW METAL)
ME3314	TOP LIGHT BODY. (RAW METAL)
ME3315	TOP / BOTTOM MONITOR 22" HOLDERS. (RAW METAL)
ME3316	RIGHT / LEFT MONITOR 22" HOLDERS. (RAW METAL)
ME3410	PC HP-C2D HOLDER. (RAW METAL)
ME3500	MAIN BODY. MEGA (BLACK)
ME3501	FRONT DOOR. MEGA (BLACK) (75x172 cm - Inch 29,5x67,7)
ME3502	INSIDE FALLING RAMP PHOTO. MEGA (GREY)
ME3507	RIGHT PRINTER SUPPORT. (RAW METAL)
ME3508	LEFT PRINTER SUPPORT. (RAW METAL)
ME3510	FIXING CAMERA FRONT HOLDER. (BLACK)
ME3515	METAL BASE SEAT. MEGA (BLACK)
ME3516	FALLING ARM SEAT. MEGA (BLACK)
ME3523	BOTTOM LEFT LATERAL DOOR. MEGA (BLACK) (44x63 cm - Inch 17,3x24,8)
ME3526	FLOOR. MEGA (ALUMINIUM)
ME3527	FLOOR LID. MEGA (ALUMINIUM)
ME3529	TOP LEFT LATERAL COVER. MEGA (BLACK) (44x104 cm - Inch 17,3x41)
ME3545	RIGHT / LEFT CURTAIN ROD END TAP. (BLACK)
ME3546	CURTAIN'S ROD. MEGA
ME3608	FIXING CAMERA BACK HOLDER. (RAW METAL)
PC0002	DONGLE USB SECURITY AND SOFTWARE. MEGA
PC0004	RAM MEMORY MODULE. DDR2 5300 667 (512Mb)
PC0005	HARD DRIVE SATA
PC0006	DVD READER SATA
PC0007	PC PROCESSOR HP-C2D
PC0008	PC MOTHER BOARD HP-C2D
PC0009	PC POWER SUPPLY HP-C2D
PC0011	PC HP-C2D (WITHOUT VIDEO CARD 4 MONITORS)
PC0013	PC BUTTON BATTERY 2032
PL0008	"LOOK HERE" #1 METHACRYLATE RIGHT ARROW. (8x12 cm - Inch 3,15x4,72)
PL0010	"LOOK HERE" #1 METHACRYLATE LEFT ARROW. (8x12 cm - Inch 3,15x4,72)
PL0019	POLYURETHANE WHEEL D-100 ROTARY MECH.

PL0020	POLYURETHANE WHEEL D-80 FIXING MECH.
PL0030	LAMP CLIP SUPPORT FOR 36W BULB
PL3500	TOP LIGHT PLASTIC DIFFUSER. (WHITE) (52x9,5x0,3 cm - Inch 20,47x3,74x0,12)
PL3501	LATERAL LIGHT PLASTIC DIFFUSER. (WHITE) (26,5x7x0,3 cm - Inch 10,43x2,76x0,12)
PR9810	PRINTER MITSUBISHI CP9810DW-DC
SE3402	TRANSFORMER SOCKET PLASTIC BASE. (WHITE)
SE3504	CURTAIN. MEGA (GREY) (80x110 cm - Inch 31,50x43,3)
SE3820	SET 2 CURTAINS. MEGA (GREY) (80x110 cm - Inch 31,50x43,3)
TO0002	ALLEN WRENCH
WO0030	METAL CASH BOX WOOD SUPPORT. (18x7,3 cm - Inch 7,08x2,87)
WO3500	WOOD PC BASE. MEGA (RAW)
WO3501	WOOD BOTTOM SEAT. MEGA (GREY)
WO3800	WOOD UPRIGHT PC #2 BASE. MEGA (RAW) (84,7x13 cm - Inch 33,34x5,11)
CA3502	CABLE FROM OSD MENU PANEL TO TOUCH MONITOR GT. (120 cm - Inch 47,24)
EL3601	OSD MENU CONTROL PANEL
SC3422	PCB FOOT
ME3533	PALLET ANCHORAGE. (RAW METAL)
PK3800	CARDBOARD BOX PACK. MEGA (93x91x196 cm - Inch 36,61x35,83x77,17)
PK3801	COVER CARDBOARD BOX PACK. MEGA (92x90x7,4 cm - Inch 36,22x35,43x2,91)
PK3802	WOOD PALLET. MEGA (93x91 cm - Inch 36,61x35,83)
PL0002	BOOT DVD PLASTIC HOLDER

15-FAQS

How to connect an external screen or projector:

- you need an external screen and a "VGA splitter"



WARNING: under its responsibility

- Put the external screen outside or above the Photobooth and plug the power of external screen (Plug the external screen on a external socket)
- You need de VGA splitter. The screen of Photobooth have a single VGA, unplug the single VGA and plug de VGA splitter. On the VGA splitter, you have to plug one end to the single VGA and the other end at external screen.

What you will see on the external screen is a replica of the screen photobooth. (a mirror)



P.4 VGA Cable From Touch Monitor to PC. (180 cm - Inch 70,87)

· Changing the film:

When the film end sand takes it out of the printer, it may appear that there is still film. The film is left can not be exploited. The amount of ink is tied to the amount of paper.


• **Problems Uploading the logo:**

Possible causes:

- 1-USB STICK is damaged
- 2-The logo specifications/characteristics are not correct

1-USB is damaged

- Let's make a test to see if it works at the computer.
- Plug the USB STICK at the front of the PC (HP C2D), and go to Set Up Menu. Then exit the Menu.
- Take a picture by choosing the product you want.
- After the game, Remove the USB STICK.
- Plug the USB STICK in your PC or LapTop.
- Check if the USB STICK contents the **PhotoldDownload** folder.
- It should be 2 folders into the PhotoldDownload and your picture should be there.
- If your picture is not there, the USB STICK is not working properly.

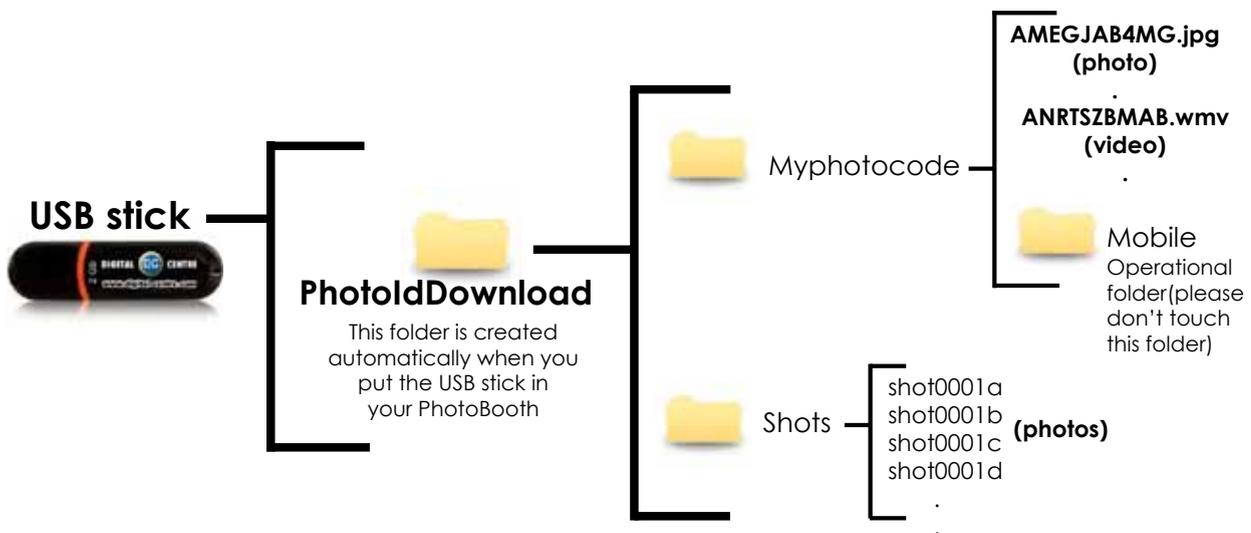

It's recommended to use a USB drive with LED and 2GB of space.





2-The logo specifications/characteristics are not correct

- Plug the USB Stick in your PC or Laptop.
- Locate the logo, Placed on the logo and click the right button on your computer mouse to open properties.
- The properties should be as follows.

 **Click the right button**

· **Check the logo specifications**

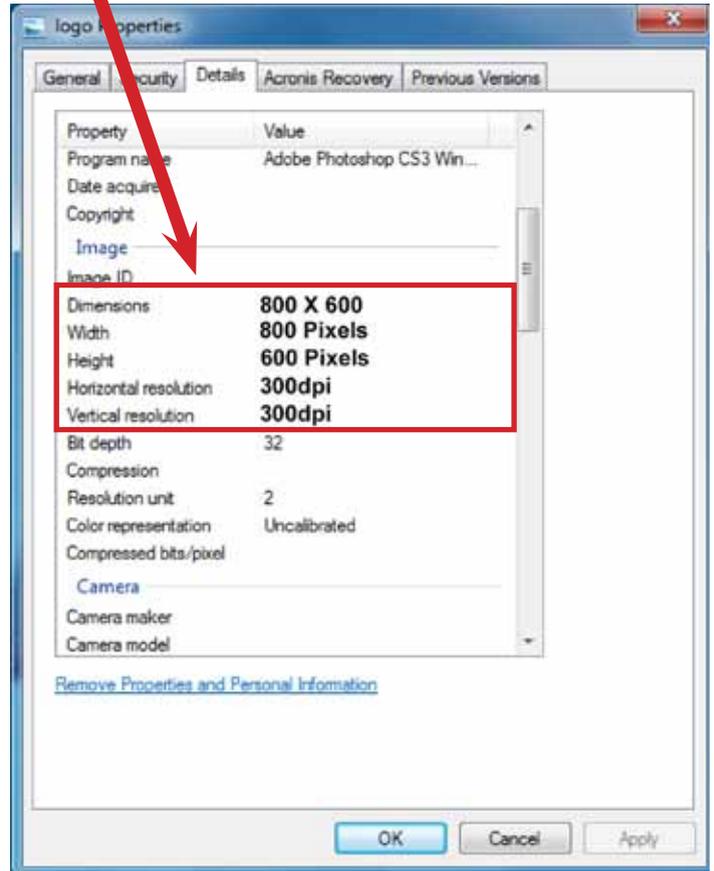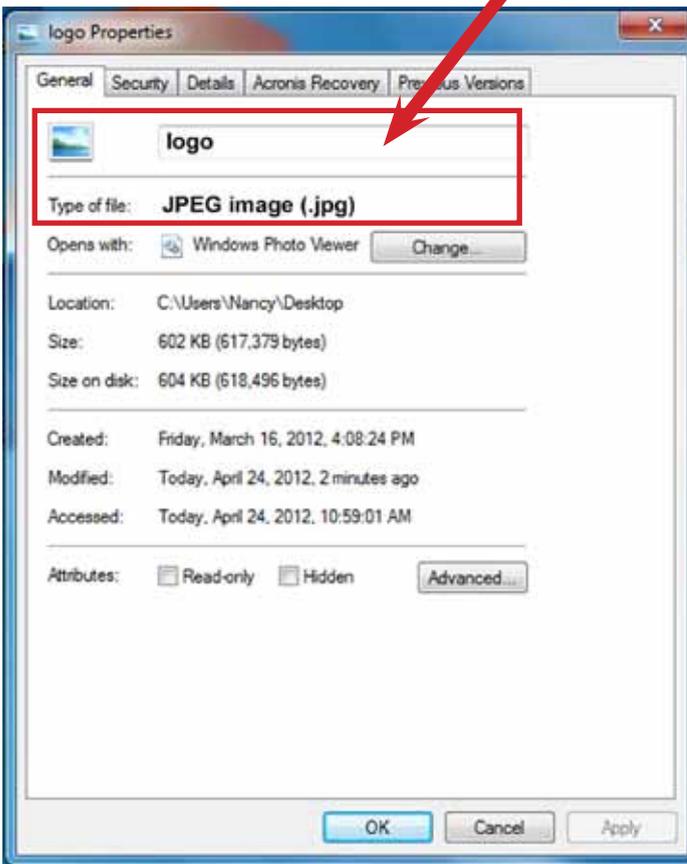

Logo specifications:

- Name:** logo
- Size:** width: 800 pixels
height: 600 pixels
- Resolution:** 300dpi
We recommend 300dpi, but it will also work with less resolution.
- Extension:** JPG
- Color mode:** RGB



logo.jpg



If it doesn't working, consult a professional designer to assist in changing the logo.
ADVANCED USERS:Use the following web site for suggestions; <http://www.webresizer.com>

• Recommendation: Use empty USB Stick

Whenever you create an USB Stick for a new event, make sure the USB stick does not contain photos of past events, this could lead to mix photos of past events with new events, and even lose some photos.

To ensure this, check if your USB Stick has a folder called Photoldownload and make sure this folder is empty. If the USB Stick does not have this folder, do not worry, when you plug the USB Stick at the PhotoBooth, this folder will be created automatically.

• Not detect the USB Stick:

Please try the following procedure.

1-Plug the USB stick

2-Go to configuration and press LOAD, if it says USB not found then EXIT the configuration and GO IN again.

3-Maybe the first time it does not have enough time to recognize, it but the 2nd time probably yes. If it keeps saying USB not connected, please try another one.

• Recognition device:

When you connect the USB sometimes it takes a while to be recognized by the computer.

• Card reader:

If you want a card reader please contact DCA.


Sales: Ph: +1.305.387.5005 / sales@dc-image.com

Tech Support: Ph: +1.305.387.5115 / support@dc-image.com


 **WARNING:** Is very important connectar card reader in the slot indicated (see section 4.3)

• Touch screen Calibrate:

Press the yellow button and after 7 seconds press again. Automatically the menu is openend to calibrate the touch screen.

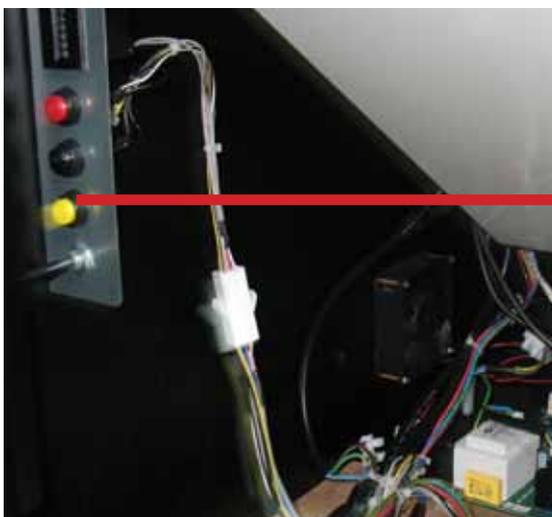

Press the yellow button and after 7 seconds press again.

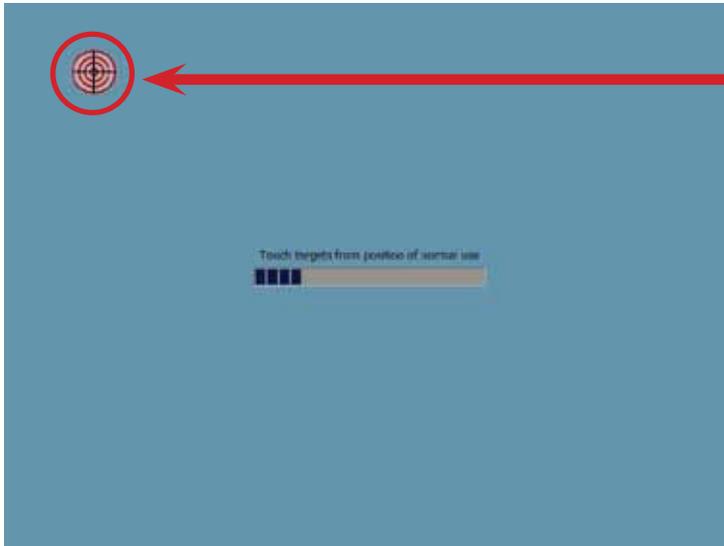

Calibrate the screen:
Touch the center of the
target (1 time only)



After the 3 targets, drag your finger all around the screen to make
sure the cursor follow finger and press OK.

16-NOTES

DIGITAL CENTRE

The worldwide PhotoBooth
Manufacturers

